

# Advanced Test Equipment Corp. www.atecorp.com 800-404-ATEC (2832)



TECHNICAL DATA

## Fluke 500 Series Battery **Analyzers**





with integrated LCD display

BTL20ANG Angled Measurement Probes

#### **KEY MEASURMENTS**

Internal battery resistance, dc and ac voltage, dc and ac current, ripple voltage, frequency and temperature.

#### SEQUENCE MEASUREMENT MODE

Automatic or manual sequence testing of battery strings with automatic measurement storage including voltage, resistance and temperature (with BTL21 intelligent test probe), eliminating the need to press a button each time a measurement needs to be saved.

#### **COMPREHENSIVE LOGGING**

All measured values are automatically captured during testing and can be reviewed on the instrument before downloading for on the-go analysis

#### Reduced testing complexity, a simplified workflow and an intuitive user interface provide a new level of ease-of-use in battery testing.

The Fluke 500 Series Battery Analyzer is ideal test tool for maintenance, troubleshooting and performance testing of individual stationary batteries and battery banks used in critical battery backup applications. The intuitive user interface, compact design and rugged construction ensure optimum performance, test results and reliability. Fluke 500 Series Battery Analyzers cover a broad range of battery test functions ranging from DC voltage and resistance tests to full condition testing using an automated string function testing and the test probe integrated infra-red temperature measurement system. 500 Series Battery Analyzers are designed for measurements on stationary batteries of all types.

- Optimized user interface: Quick, guided setup ensures you're capturing the right data every time, and the combined visual and audio feedback cues reduce the risk of measurement
- Threshold comparison: Configure multiple reference values and thresholds for resistance and voltage. Comparison result feedback after each measurement via visual and verbal cues.
- Ergonomic test leads: Rugged coaxial two pole kelvin test pins with remote SAVE button reduce test time and increase efficiency.
- Intercell strap resistance test and data management: Measures the resistance of theintercell connection between batteries in a string.
- Test probe extenders: Long reach, straight and angled probes for double stacked cells.
- Intelligent test probe set (BT520 and BT521): Integrated LCD display, infrared temperature measurement (BT521 only with BTL21 test probe), verbal audio feedback and captures voltage readings and temperature logging automatically or via integrated save button.
- Enhanced data analysis: Quickly compare trends, analyze results and create reports with included battery management
- Easy reporting: Generate PDF report on the PC software with analysis graphics: and data table or quick email format report with csv file on the mobile app.
- Wireless communication: For data download and remote display while measuring. Browse and email measurement data via
- Battery life: 7.4 V 3000 mAh lithium-ion battery for more than eight hours continuous operation.
- USB port: For fast data download to supplied data analysis and report management application software.
- Highest safety rating in the industry: CAT III 600 V, 1000 V dc max. rated for safe measurements all around the battery power supply equipment.



#### Voltage and resistance thresholds

Fluke Battery Analyzers allow you to quickly and easily define upper and lower measurement thresholds or tolerance ranges. During the testing process, measured values are automatically compared to the predefined threshold levels producing a PASS, FAIL or WARN indication after each measurement. A maximum of 10 sets of thresholds

can be stored and threshold indications are determined based on the following criterion:

Voltage		Resistance				
>Voltage Lower	<voltage Lower</voltage 	<reference< th=""><th>&gt;Reference and &lt; Reference x (1+Warning %)</th><th>&gt;Reference x (1+Fail)</th></reference<>	>Reference and < Reference x (1+Warning %)	>Reference x (1+Fail)		
Pass	Fail	Pass	Warning	Fail		


#### Fluke Battery Management software

Fluke Battery Management Software allows you to quickly and easily import data from the battery analyzer to a PC. The measurement data and battery profile information is stored and archived with the Management Software and can be used compare results, switch results between conductance and resistance (requires Software Management software version 1.0.69 or later) readings and perform trend analysis. All measurement data, battery profile and analysis information can be used to easily generate reports.

- Quick view saved readings
- Profile management
- Histogram of a battery string with end user defined threshold
- · Historical trend data of batteries
- Multiple rounds of discharge voltage
- Quick Report Generation
- · Upgrade Fluke Battery Analyzer firmware
- Switch measurement results between conductance and resistance readings



Histogram of a battery string with user defined threshold.

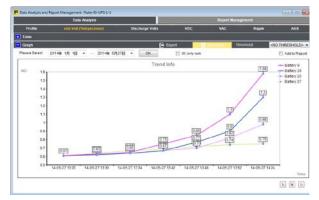


Historical trend data of batteries.

#### Fluke Battery Analyze mobile app

The BT521 offers wireless communication for data download and remote display while measuring via the dedicated Fluke Battery Analyzer mobile app. Using the Fluke Battery Analyze mobile app you can:

- Browse profile
- · Review sequence testing data
- · E-mail sequence testing data

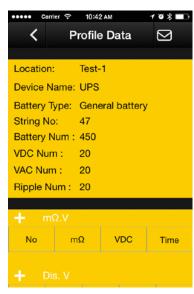

View measurement profile.

Carri	er 🖘 10:42		• * <b>•</b>			
	Profile Data					
No	mΩ	VDC	Time			
451	5.71	12.79	09/19/14 10:39			
452	5.74	12.99	09/19/14 10:39			
453	5.84	12.99	09/19/14 10:39			
454	5.79	12.99	09/19/14 10:39			
455	5.69	12.99	09/19/14 10:39			
456	5.71	12.99	09/19/14 10:39			
457	5.71	12.99	09/19/14 10:39			
458	25.07	13.04	09/19/14 10:39			

View and email measurement data.



## **Specifications**

	Range	Resolution	Accuracy	BT510	BT520	BT520ANG	BT521	BT520ANG
Battery resistance/Strap resistance <sup>1</sup>	3 mΩ	0.001 mΩ	1 % + 8				•	
			1% +68					
	30 mΩ	0.01 mΩ	0.8 % + 6		•		•	
			0.8%+12					•
	300 mΩ	0.1 mΩ	0.8 % + 6				•	•
	3000 mΩ	1 mΩ	0.8 % + 6		•			•
Vdc	6 V	0.001 V	0.09 % + 5		•		•	•
	60 V	0.01 V	0.09 % + 5		-			•
	600 V	0.1 V	0.09 % + 5					
	1000 V	1 V	0.09 % + 5					•
Vac (45 Hz to 500 Hz with 800 Hz filter)	600 V	0.1 V	2 % + 10		-			
Frequency (displayed with Vac and Aac) <sup>2</sup>	500 Hz	0.1 Hz	0.5 % + 8					
AC voltage ripple (20 KHz Max)	600 mV	0.1 mV	3 % + 20					•
	6000 mV	1 mV	3 % + 10		•			•
Adc/Aac (with accessory Fluke i410)	400 A	1 A	3.5 % + 2					
Temperature	0 °C to 60 °C	1 °C	2 °C (4 °F)					•
Meter mode	999 records for each measurement position with time stamp							
Sequence mode	Up to 100 profiles and 100 profile templates (Each profile stores up to 450 batteries) with time stamp							

 $<sup>^1\</sup>mbox{The}$  measurement is based on ac injection method. The injected source signal is <100 mA, 1 kHz.

#### **Measurement modes**

	BT510	BT520	BT520ANG	BT521	BT521ANG
Resistance (mΩ)					
Battery voltage					
Voltage dc					
Voltage ac and frequency (Hz)					
Ripple volt					
Temperature of negative battery post (Using BTL21 straight probes)					
DC and ac current (and frequency)					
DMM mode					
Sequence mode					
Discharge measurement mode	•	•		•	•
Automatic measurement save					
Wireless communication					
Memory view					

<sup>&</sup>lt;sup>2</sup>Trigger level VAC: 10 mV, Aac: 10 A



## **General specifications**

BT500 Instrument				
Size (HxWxD)	22 cm x 10.3 cm x 5.8 cm (9 in x 4 in x 2 in)			
Weight	850 g (1.9 lb)			
Screen dimensions	7.7 cm x 5.6 cm (3 in x 2.2 in)			
Interface	USB mini			

## **Environment specifications**

Operating temperature	0 °C to 40 °C				
Storage temperature	-20 °C to 50 °C				
Lithium-ion battery charging temperature	0 °C to 40 °C				
Operating humidity	Non-condensing (10 °C)				
	<=80 % RH (at 10 °C to 30 °C)				
	<=75 % RH (at 30 °C to 40 °C)				
Operating altitude	Sea level to 2000 meters				
Storage altitude	Sea level to 12,000 meters				
IP rating	IP40				
Radio	FCC Class A				
Vibration requirements	MIL-PRF-28800F: Class 2				
Drop test requirements	1 meter				
Temperature coefficients	Add 0.1 x specified accuracy for each degree C above 28 °C or below 18 °C				
Safety compliance	600 V CAT III				
EMC	IEC 61326				
ROHS	China, Europe				
Protection Class 2	Pollution Degree II				
Battery compliance	UN38.3				
	UL2054				
	IEC62133				
	2G per IEC68-2-26, 25G, and 29				



#### Items supplied with each model

Equipment	Qty.	BT510	BT520	BT520ANG	BT521	BT521ANG
Battery analyzer	1			•		•
4-wire test pin (set)	1	•	•	•	•	•
BTL10 Basic Test Lead (set)	1					
TL175 TwistGuard™ Test Leads with adapter	1					•
BTL20 Intelligent Test Probe Set, with extender (no temperature sensor)	1		•	•		
BTL20ANG Intelligent Test Probe Set, with extender and angled tips (no temperature sensor)	1			•		•
BTL21 Intelligent Test Probe set, with extender and temperature sensor	1				•	•
i410 AC/DC Current Clamp	1					
BP500 7.4 V 3000 mAh lithium-ion battery	1					
BC500 18 V AC Charger	1	•	•	•	•	•
Standard mini-b USB cable (cable length:1 m)	1	•	•	•	•	•
Shoulder strap	1	•		•		
Belt strap	1	•	•	•		
Magnetic hanging strap	1	•	•	•	•	•
Fluke Battery Management (CD) containing USB driver and manuals in all languages	1					
Soft carrying case	1					
Spare fuses	2					
Paper battery tags	100			•		

### **Ordering Information**

Fluke BT510 Basic Battery Analyzer

Fluke BT520 Battery Analyzer

Fluke BT520ANG Battery Analyzer, with angled test probes

Fluke BT521 Advanced Battery Analyzer

Fluke BT521ANG Advanced Battery Analyzer, with angled test probes

#### **Accessories**

**BTL10** Basic Battery Analyzer Test Leads

**BTL20** Interactive Battery Analyzer Test Probe

BTL20ANG Interactive Battery Analyzer Test Probe with angled tip

**BTL21** Interactive Battery Analyzer Test Probe with temperature sensor

**BTL-A** Voltage/Current Probe Adapter

C500S Soft carrying case (small)

**C500L** Soft carrying case (large)

**BC500** AC Power Charger

BP500 Lithium-ion battery 3000 mAh

TPAK80-4 Magnetic Strap

**B4WTP** 4-wire test pin

i410 AC/DC Current Clamp

BCR Zero ohm calibration resistor

Fluke. Keeping your world up and running.®

Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

Fluke Europe B.V.

PO Box 1186, 5602 BD Eindhoven, The Netherlands

For more information call:

In the U.S.A. (800) 443-5853 or Fax (425) 446-5116 In Europe/M-East/Africa +31 (0) 40 2675 200 or

Fax +31 (0) 40 2675 222 In Canada (800)-36-FLUKE or Fax (905) 890-6866

From other countries +1 (425) 446-5500 or

Fax +1 (425) 446-5116

Web access: http://www.fluke.com

©2014-2015 Fluke Corporation. Specifications subject to change without notice. Printed in U.S.A. 5/2015 6002814d-en

Modification of this document is not permitted without written permission from Fluke Corporation.