



Advanced Test Equipment Corp.
www.atecorp.com 800-404-ATEC (2832)

Julabo
THE TEMPERATURE CONTROL COMPANY

200F / 201F / 300F
310F / 450F / 600F
601F / 900F / 1000F
1001F



Refrigerated bath basic units

Original operating manual

1.950.0170.us.V07

05/2022

Legal

JULABO USA, Inc.
884 Marcon Boulevard
Allentown, PA 18109
Phone: +1(610) 231-0250
Fax.: +1(610) 231-0260
Info@julabo.us
www.julabo.us

The content of this operating manual is protected by copyright. Information, including texts, images, and other contents may not be reproduced, distributed, transmitted, stored or otherwise used in any form without prior explicit written consent.

Illustrations in this operating manual are for illustrative purposes and are not necessarily displayed to scale.

1	Foreword	4
2	About this manual	5
2.1	Notes on commissioning and operation	5
2.2	Original JULABO spare parts	5
2.3	Accessories	5
2.4	Warnings	6
2.5	Symbols used	7
3	Intended use	7
4	Safety	8
4.1	General Safety Instructions for the operating company	8
4.2	General Safety Instructions for the operator	8
4.3	General Safety instructions for device operation	9
4.4	General safety instructions for refrigerants	9
4.5	Safety symbols	10
5	Product description	11
5.1	Function description	11
5.2	Possible combinations with circulators	11
5.3	Operating and functional elements	12
5.3.1	External inverter	13
5.4	Technical data	14
5.4.1	Material of parts that come into contact with the medium	20
5.4.2	Refrigerant	20
6	Transport and installation	21
6.1	Install the device at the operating location	21
7	Maintenance	22
7.1	Replace detachable power cord	22
7.2	Check safety symbols	22
7.3	Emptying	24
7.4	Clean device	25
7.5	Cleaning condenser	25
7.6	Technical Service	26
7.7	Warranty	27
8	Disposal	30

1 Foreword

Congratulations!

You have made an excellent choice.

JULABO would like to thank you for the trust you have placed in our company and products.

This operating manual will help you become acquainted with the use of our units. Read the operating manual carefully. Keep the operating manual handy at all times.

2 About this manual

This manual is intended for the equipment specified on the cover page.



NOTE

Observe the safety instructions!

Read the Safety section of this manual before using the equipment for the first time.

2.1 Notes on commissioning and operation

The cooling machine is combined with a suitable JULABO circulator to form a refrigerated circulator. Operation is done entirely via the control elements of the connected circulator.

Initial operation as well as the individual operating topics are described in the operating manual of the associated circulator.

2.2 Original JULABO spare parts

Hassle-free continuous operation and safety also depend on the quality of the spare parts used.

Only original JULABO spare parts guarantee the highest possible quality and safety. Original JULABO spare parts are available directly from JULABO or your specialist dealer.

Please note that JULABO cannot provide a warranty service if non-original JULABO spare parts are used.

2.3 Accessories


JULABO offers a wide range of accessories for the devices. Accessories are not described in this manual.


The complete range of accessories for the devices described in this manual can be found on our website www.julabo.com. Use the Search function on the website.


2.4 Warnings


The manual contains warnings to increase safety when using the device. Warnings must always be observed.

A warning sign displayed in signal color precedes the signal word. The signal word, highlighted in color, specifies the severity of the hazard.

	<i>CAUTION</i>
	This signal word designates a danger with a low level of risk which, if it not prevented, may result in minor to moderate injuries.

	<i>WARNING</i>
	This signal word designates a danger with a medium level of risk which, if it not prevented, may result in death or serious injuries.

	<i>DANGER</i>
	This signal word designates a danger with a high level of risk which, if it not prevented, will result in death or serious injuries.

	<i>NOTE</i>
	This signal word designates a possibly harmful situation. If it is not avoided, the system or objects in its vicinity may be damaged.

2.5 Symbols used

Various symbols are used throughout this manual to aid reading comprehension. This list describes the symbols used.

- ✂ Tools needed for the following approach
- ▶ Prerequisite to be met for the following procedure
- 1. Numbered action steps
- ↪ Interim result for individual action steps
- ☝ Additional note for individual action steps
- ✓ Final result of a procedure
- <> Terms in angle brackets denote control menu
- [] Terms in square brackets denote keys, softkeys and buttons

3 Intended use

This section defines the purpose of the unit so that the operator can operate the unit safely and avoid misuse.

This is a laboratory device intended for temperature control applications of liquid media. It can only be operated in conjunction with a JULABO circulator designed for this purpose.

Only use the device if it is in technically perfect condition and only use it in accordance with its intended use. Be aware of safety issues or hazards and comply with the operating manual! In particular, always immediately rectify malfunctions that could impair safety!

The device is not suitable for direct temperature control application of food, other consumables or pharmaceutical or other medical products.

The device is not suitable for use in an explosive environment.

4 Safety

4.1 General Safety Instructions for the operating company

This section outlines the General Safety Instructions that must be observed by the operator to ensure safe operation.

- The operator is responsible for the qualifications of its operating personnel.
- The operator must ensure that the operating personnel has been instructed in use of the device.
- The device operators must receive regular training about the dangers involved in their work and measures to prevent such dangers.
- The operator must ensure that persons entrusted with the operation, installation and maintenance have read and understood the operating manual.
- The device may only be configured, installed, maintained and repaired by trained personnel with appropriate qualifications.
- If hazardous substances or substances that may become hazardous are used, the device may only be used by personnel who are qualified to handle these substances and the device.
- The operator must ensure that the device is checked for safety and functionality at regular and usage-related intervals.
- The operator must ensure that the mains supply has a low impedance to prevent influencing other devices powered by the same supply.

4.2 General Safety Instructions for the operator

This section outlines the General Safety Instructions that must be observed by the user to ensure safe operation.

- Read the operating manual before initial operation.
- The device may only be connected to mains power outlets with a protective earth (PE).
- The mains plug is a safe insulator of the power supply grid and must be freely accessible at all times.
- The removable power cable is designed for the performance and temperature of the device and must not be replaced by a weaker rated power cable.
- Do not start the device if it has a damaged power cable
- Do not operated damaged devices.
- Only mount suitable circulators on the cooling machine.
- When connecting a circulator, observe the respective connection assignment of the plugs and technical data for the products.
- Observe the safety symbols on the device.

- Do not remove safety symbols.
- Have all service and repair work carried out by authorized specialists only.
- Protect device from dirt.
- Protect device direct UV radiation.

4.3 General Safety instructions for device operation

This section lists the General Safety Instructions for device operation. These Safety Instructions must be followed to ensure safe operation.

- Vapors may escape during the temperature control application. Operate the device in a well-ventilated location.
- Depending on the bath fluid, chemical dangers may occur. Observe appropriate safety regulations
- If flammable substances are used in the bath and/or flammable bath fluid is used, the device must be under constant observation during operation
- The safety functions of the device should be checked at least twice per year

4.4 General safety instructions for refrigerants

The device works with a refrigerant. To ensure safe handling, the operator must comply with the following safety instructions.




- Details of the refrigerant to be used can be found on the type plate.
- The operator must ensure that the device is regularly checked for leakages in the cooling system. The inspection intervals can be found in the respectively applicable national laws and guidelines.
- Exchange and disposal of used refrigerant may only be carried out by JULABO or an appropriately certified company.
- All laws and guidelines for handling refrigerants applicable in the country of operation must be complied with.
- Depending on the refrigerant and the quantity of used, a certain room size must be ensured.

The following safety instructions also apply to natural refrigerants:

- The device housing may only be opened by qualified persons who are trained in the handling of natural refrigerants.
- The refrigerant circuit may only be interrupted by qualified persons who are trained in handling natural refrigerants.

4.5 Safety symbols

There are safety symbols included with the device, which should be attached to the device before initial operation.

Safety symbols	Description
	Warning of a danger zone. Note operating manual
	Warning about hot surface
	Read operating manual before switching on

5 Product description

5.1 Function description

This section describes the function of the device.

The cooling machine is combined with a circulator to form a refrigerated circulator. The device combination can precisely cool and heat samples over a wide temperature range. The device combination is suitable for external temperature applications. The cooling machine is controlled by the connected circulator.


5.2 Possible combinations with circulators

The table lists which cooling machine can be combined with which circulator.

Cooling machine	Circulators			
	CORIO CD	CORIO CP	DYNEO DD	MAGIO MS
200F	✓	✓	✓	-
201F	✓	✓	✓	-
300F	✓	✓	✓	-
310F	✓	✓	✓	✓
450F	✓	✓	✓	✓
600F	✓	✓	✓	✓
601F	✓	✓	✓	✓
900F	✓	✓	✓	✓
1000F	✓	✓	✓	✓
1001F	✓	✓	✓	-

5.3 Operating and functional elements

The following figure shows the operating and functional elements and their position on the unit.

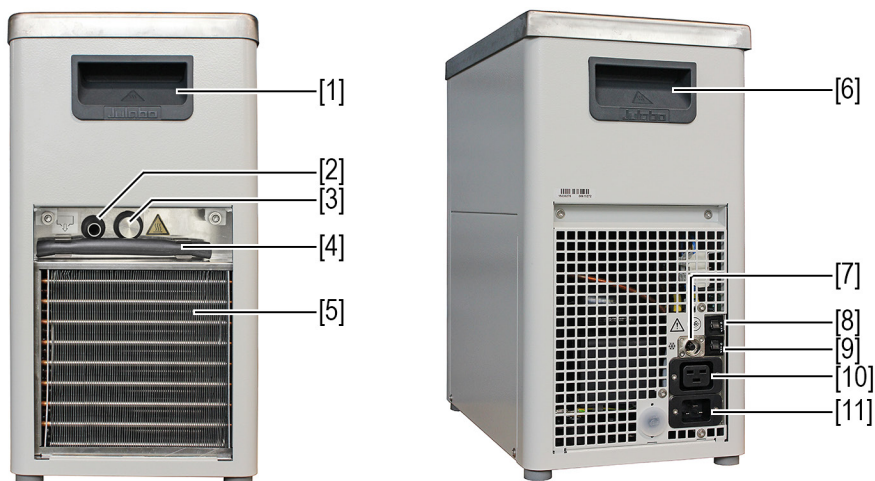


Front (without cover) and rear (e.g. 310F)

1	Recessed grip
2	Bath tank drain opening
3	Drain valve
4	Drain hose (for 310F and 450F)
5	Condenser
6	Recessed grip
7	CAN plug for connection with a circulator
8	Mains fuse
9	Mains fuse
10	Circulator mains output socket
11	Mains input socket

5.3.1 External inverter

With the 100 V voltage variant of 310F and 450F, the inverter is mounted on the rear side.

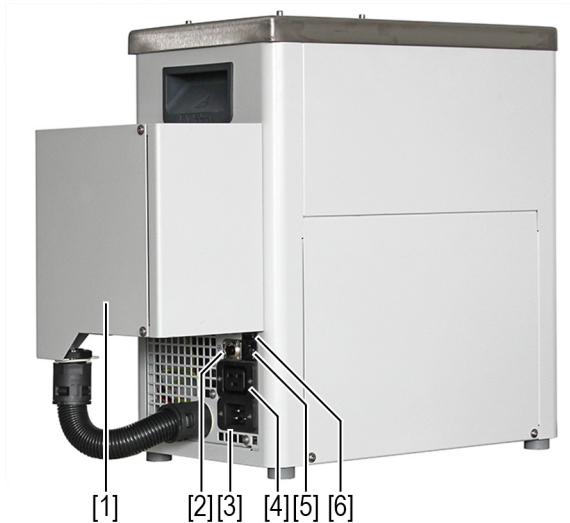

Rear side of 310F/450F (100 V voltage variant)

1	Inverter
2	CAN plug for connection with a circulator
3	Mains input socket
4	Circulator mains output socket
5	Mains fuse
6	Mains fuse

5.4 Technical data

Performance specifications measured in accordance with DIN12876. Cooling capacities up to 20°C measured with ethanol; over 20°C with thermal oil unless specified otherwise. Performance specifications apply at an ambient temperature of 20°C. Performance values may differ with other bath fluids.

Grouping of the device acc. to CISPR 11:

- The device is an ISM device of group 1, which uses high frequency for internal purposes
- Class A: Use in an industrial electromagnetic environment
- The device is designed for connection to a separate power transformer or generator. Connection to a low voltage line is not permitted

In accordance with IEC 61010-1, the device is designed for safe operation under the following ambient conditions:

- Indoor use
- Altitude up to 2000 m above sea level
- Ambient temperature +5 ... +40°C
- Maximum relative humidity 80% for temperatures up to 31°C, decreasing linearly down to 50% relative humidity at 40°C
- Mains voltage fluctuations up to ±10% of the nominal voltage permissible if not otherwise specified
- Contamination level 2

Protection class according to EN 60 529:

- Protection class IP21

The technical data for the respective device combination can be found in the operating manual of the associated circulator.

Technical data		200F		
Performance values				
Lowest temperature	°C	-20		
Refrigerants		R134a		
Dimensions				
Dimensions (W x D x H)	cm	23 x 39 x 44		
Usable bath opening (W x D)	cm	13 x 15		
Bath depth	cm	15		
Volumes min. ... max.	l	3.0 ... 4.0		
Weight	kg	23		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	230 V 50/60 Hz
Current consumption max.	A	4	4	2
Mains fuse, reset	A	10	10	10

Technical data		201F		
Performance values				
Lowest temperature	°C	-20		
Refrigerants		R134a		
Dimensions				
Dimensions (W x D x H)	cm	44 x 41 x 22		
Usable bath opening (W x D)	cm	13 x 15		
Bath depth	cm	15		
Volumes min. ... max.	l	3.0 ... 4.0		
Weight	kg	23.6		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	230 V 50/60 Hz
Current consumption max.	A	4	4	2
Mains fuse, reset	A	10	10	10

Technical data		310F		
Performance values				
Lowest temperature	°C	-30		
Refrigerant		R449A/R290		
Dimensions				
Dimensions (W x D x H)	cm	23 x 40 x 43		
Usable bath opening (W x D)	cm	13 x 15		
Bath depth	cm	15		
Volumes min. ... max.	l	3.0 ... 4.0		
Weight	kg	23		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A	4	4	3
Mains fuse, reset	A	10	10	10

Technical data		450F		
Performance values				
Lowest temperature	°C	-30		
Refrigerant		R449A/R290		
Dimensions				
Dimensions (W x D x H)	cm	23 x 40 x 43		
Usable bath opening (W x D)	cm	13 x 15		
Bath depth	cm	15		
Volumes min. ... max.	l	3.0 ... 4.0		
Weight	kg	23		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A	4	4	3
Mains fuse, reset	A	10	10	10

Technical data		600F		
Performance values				
Lowest temperature	°C	-35		
Refrigerants		R449A, R452A*		
Dimensions				
Dimensions (W x D x H)	cm	33 x 47 x 47		
Usable bath opening (W x D)	cm	22 x 15		
Bath depth	cm	15		
Volumes min. ... max.	l	5.0 ... 7.5		
Weight	kg	32.4		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A	11	7	3-4
Mains fuse, reset	A	12	12	10

* at 100 V, 50/60 Hz

Technical data		601F		
Performance values				
Lowest temperature	°C	-35/-40*		
Refrigerants		R449A, R452A**		
Dimensions				
Dimensions (W x D x H)	cm	33 x 46 x 52		
Usable bath opening (W x D)	cm	22 x 15		
Bath depth	cm	20		
Volumes min. ... max.	l	8.0 ... 10.0		
Weight	kg	36.0		
Mains connection				
		100 V 50/60 Hz	115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A	11	7	3-4
Mains fuse, reset	A	12	12	10

* depending on the circulator used

** 100 V, 50/60 Hz

Technical data		900F		
Performance values				
Lowest temperature	°C	-38/-40*		
Refrigerants		R449A		
Dimensions				
Dimensions (W x D x H)	cm	39 x 62 x 53		
Usable bath opening (W x D)	cm	26 x 35		
Bath depth	cm	20		
Volumes min. ... max.	l	21.0 ... 30.0		
Weight	kg	47		
Mains connection				
			115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A		8	5
Mains fuse, reset	A		14	10

* depending on the circulator used

Technical data		1000F		
Performance values				
Lowest temperature	°C	-40/-50*		
Refrigerants		R449A		
Dimensions				
Dimensions (W x D x H)	cm	42 x 49 x 51		
Usable bath opening (W x D)	cm	18 x 13		
Bath depth	cm	15		
Volumes min. ... max.	l	5.0 ... 7.5		
Weight	kg	50		
Mains connection				
			115 V 60 Hz	200-230 V 50/60 Hz
Current consumption max.	A		9	6
Mains fuse, reset	A		14	10

* depending on the circulator used

Technical data		1001F	
Performance values			
Lowest temperature	°C	-38	
Refrigerants		R449A	
Dimensions			
Dimensions (W x D x H)	cm	45 x 64 x 74	
Usable bath opening (W x D)	cm	35 x 41	
Bath depth	cm	30	
Volumes min. ... max.	l	42.0 ... 56.0	
Weight	kg	70.7	
Mains connection			
			200-230 V 50/60 Hz
Current consumption max.	A		5
Mains fuse, reset	A		10

5.4.1 Material of parts that come into contact with the medium

The table lists parts that could come into contact with the bath fluid as well as the material that the parts are made of. This data can be used to check the compatibility of the parts with the bath fluid used.

Parts that come into contact with the medium	Material
Bath tank	1.4301/304H
Bath tank drain opening	1.4301/304H
Bath tank/bath cover gasket	FKM Viton
O-ring drain valve	FKM Viton

5.4.2 Refrigerant

For safety reasons and in case of leakage in the refrigerant cycle, there is a specified room volume per kg of refrigerant permitted at the installation site so that no flammable refrigerant/air mixture can form. The amount of refrigerant is indicated on the nameplate.

1 m³ of space is required for 0,008 kg of R290 refrigerant.

1 m³ of space is required for 0.357 kg of R449A refrigerant.

1 m³ of space is required for 0.423 kg of R452A refrigerant.

6 Transport and installation

This section describes how to transport the unit safely.



CAUTION

Risk of crushing by falling device!

A device that is not secured appropriately can fall down during improper transport and cause crushing injuries.

- Secure the device against tipping and falling during transport
- Secure loose parts against falling during transport
- Transport the device upright and with a suitable means of transport
- Wear personal protective equipment

- ▶ The device is switched off and emptied.
- ▶ A suitable transport trolley is available.
- 1. Unplug the power plug from the device.
- 2. Use the recessed grip to lift the device onto the center of the transport trolley, if necessary in a pair.
- 👉 See the technical data for weight information.
- 3. Use straps to secure the device against tipping in the center of the transport trolley.
- 4. Place loose parts for the device, such as cables, on the transport trolley.
- ✓ The device is then ready for transport and can be safely transported to its installation location.

6.1 Install the device at the operating location

This section describes how the device is set up at the installation location.

- ▶ The device has been transported to the operation location.
- ▶ The size and infrastructure of the operation location are suitable for device operation.
- 1. If possible, position the device under an extraction system.
- 👉 Depending on the bath fluid, gases may be created at high temperatures.
- 👉 Recommended minimum distance of 1 m to other devices, to prevent electromagnetic interference.
- 2. Place the device on a level, smooth, non-flammable surface.
- 3. Ensure that the device is securely positioned.
- 4. For refrigerated circulators: Ensure an open space in front of and behind the device of at least 20 cm.
- ✓ The device is set up at the operation location.

7 Maintenance

7.1 Replace detachable power cord

The device is equipped with a detachable power cord.


If the power cord needs to be replaced, ensure that the new one is at least dimensioned for the device power requirements. Insufficiently dimensioned power cords must not be used. See type plate for mains voltage and current value.

We recommend only using original JULABO spare parts.


7.2 Check safety symbols

The following section applies only to equipment working with natural refrigerants and operated in the US or Canada.


The safety signs affixed to the device must be clearly legible at all times. Their condition must be checked every two years.

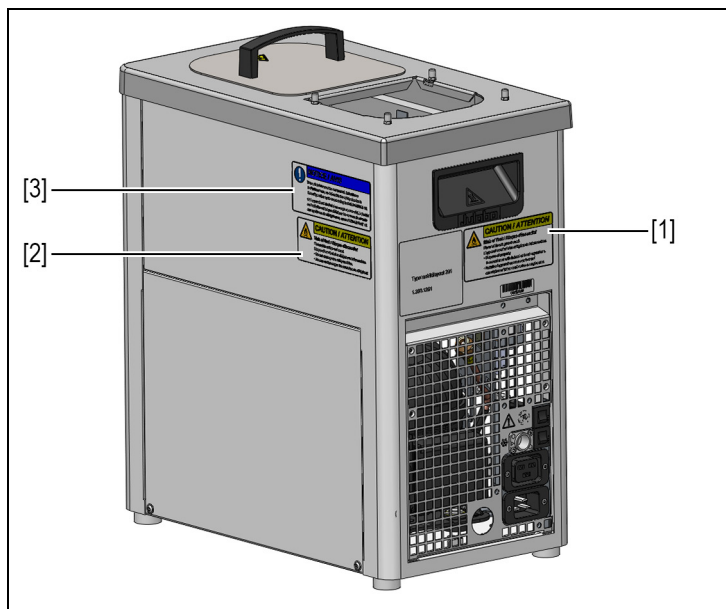


[1] Safety sign (order no.: 3.383.2600):

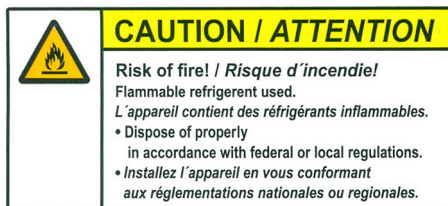

[2] Safety signs (order no.: 3.383.2630):

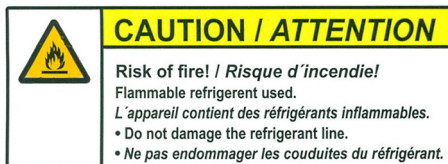

[3] Note (order no.: 3.383.2640):

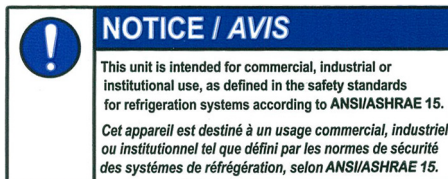


1. Check the safety signs on the device for legibility and completeness.
 2. Replace defective or missing safety signs.
- ☞ Safety signs can be reordered from JULABO.
 ✓ The safety signs on the device have been checked.


7.3 Emptying

The device must be completely drained if it is to be sent in for technical service or is to be properly disposed of.

In general, the device should be completely emptied before longer shutdowns or when there is a change to the external application.

	CAUTION
	<p>Risk of burns from hot bath fluid!</p> <p>Bath fluid can become very hot during a temperature control process. Contact with hot bath fluid can cause scalding.</p> <ul style="list-style-type: none"> • Before draining the device, let it cool to room temperature • Avoid direct contact with hot bath fluid • Wear protective gloves

- The device is tempered to room temperature and switched off.
1. Place a suitably large collection vessel under the drainage valve.
 2. Remove the bath lid.

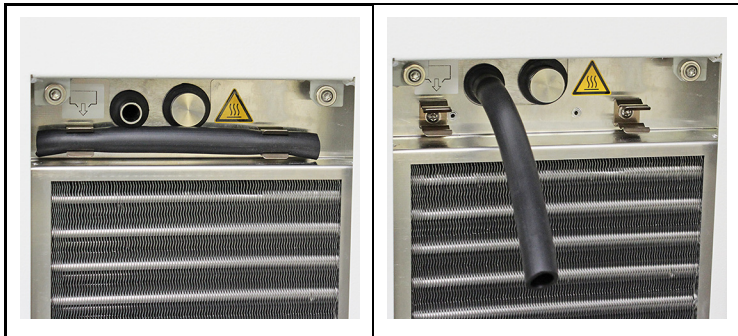


3. 310F and 450F: Remove the hose and place it on the drain valve [figures].
4. Open the drain valve.
 - ↳ The bath fluid flows into the collecting vessel provided.
5. Close the drain valve when the bath tank is completely empty.
6. Close the bath lid.
 - ✓ The device is emptied. If an external system is connected, it can now be disconnected from the device and also drained.

7.4 Clean device

The outside of the device should be periodically cleaned.


- ✘ Lint-free cloth
- ✘ Mild cleaning agent

	NOTE
	<p>Damage to the electronics due to water penetration! Ingress of water can damage electronic components of the device and thus lead to failure of the device.</p> <ul style="list-style-type: none"> • Clean the outside of the device with a damp cloth only • Prevent water from entering the device


1. Clean the surface of the device with a damp cloth.
 - ☞ Some dish detergent may also be used for cleaning. If in doubt, ask technical service for alternative cleaning mediums.
 - ✓ The device has now been cleaned.

7.5 Cleaning condenser

From time to time, the condenser on the front of the device should be cleaned to maintain full cooling capacity.

	CAUTION
	<p>Risk of fire with flammable refrigerants! If the device contains a flammable refrigerant, there is a risk of fire if the refrigerant circuit leaks.</p> <ul style="list-style-type: none"> • Do not damage the refrigerant lines • Do not damage the condenser fins • If refrigerant escapes, switch off the device immediately, keep open flames and sources of ignition away, and ventilate the room well

- ▶ The device is switched off.
 1. Allow the device to cool down to room temperature.
 2. Take the venting grid off the front of the device.

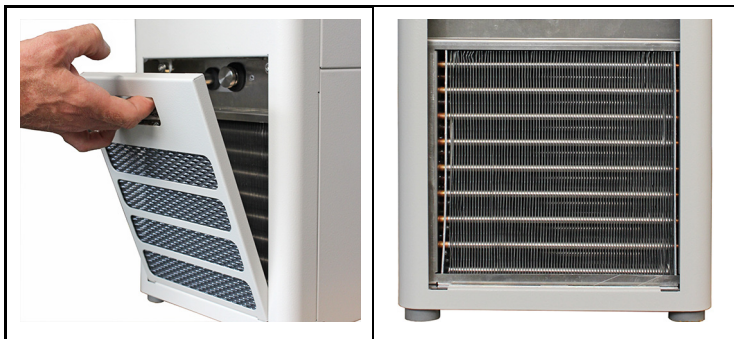

3. Use a vacuum cleaner to carefully vacuum the dirt off the condenser.
 - ☞ Make sure that the fins of the condenser are not damaged.
4. Place the venting grid back on.
 - ✓ The condenser is cleaned.

7.6 Technical Service

If the unit shows faults you cannot resolve, please contact our Technical Service.

JULABO Technical Service
Tel.: +1(610) 231-0250 Option 3
Fax: +1(610) 231-260
Email: Service@julabo.us

Before sending a device to Technical Service, the following points must be observed:

- Clean and decontaminate the device properly to avoid endangering service personnel.
- Include a brief description of the fault.
- Package the device safely for shipment.

7.7 Warranty

The following Warranty Provisions shall apply to products sold in North America by Julabo ("Seller") to the entity shown as buyer ("Buyer") on Seller's invoice.

Initial Warranty

Upon Seller's receipt of payment in full for the products and subject to Buyer's compliance with the terms of sale and any other agreement with Seller relating to the products, Seller warrants to the Buyer that the products manufactured by the Seller are free from defects in material and workmanship for a period not to exceed two (2) years of operation from the date the product is shipped by Seller to Buyer (the "Initial Warranty").

EXCLUSION OF ALL OTHER EXPRESS WARRANTIES; EXCLUSION OF ALL IMPLIED WARRANTIES.

OTHER THAN THE INITIAL WARRANTY, NO OTHER EXPRESS WARRANTIES ARE MADE. ALL IMPLIED WARRANTIES OF EVERY TYPE AND KIND, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE EXCLUDED IN ALL RESPECTS AND FOR ALL PURPOSES. SELLER DISCLAIMS AND MAKES NO IMPLIED WARRANTIES WHATSOEVER.

Exclusions

The Initial Warranty does not include damage to the product resulting from accident, misuse, improper installation or operation, unauthorized or improper repair, replacement or alteration (including but not limited to repairs, replacements, or alterations made or performed by persons other than Seller's employees or authorized representatives), failure to provide (or use of improper) maintenance, unreasonable or unintended use or abuse of the product, or failure to follow written installation or operating instructions.

Buyer must return the product's record of purchase to the Seller or one of Seller's authorized representatives within thirty (30) days of the date the product is shipped by Seller to Buyer in order to make a claim under the Initial Warranty. Notwithstanding anything contained herein to the contrary, all glassware, including but not limited to reference thermometers, are expressly excluded from the Initial Warranty.

Buyer's sole remedies; Limitations on Seller's Liability

Buyer's sole and exclusive remedy under the Initial Warranty is strictly limited, in Seller's sole discretion, to either: (i) repairing defective parts; or (ii) replacing defective parts. In either case, the warranty period for the product receiving a repaired or replaced part pursuant to the terms of the Initial Warranty shall not

be extended. All repairs or replacements performed by Seller pursuant to these Warranty Provisions shall be performed at one of the Seller's facility in Allentown, Pennsylvania, U.S.A. or at the facility of an authorized representative of Seller, which location shall be determined by Seller in its sole discretion; provided, however, that Seller may, in its sole discretion perform such repairs or replacements at Buyer's facility in which case Buyer shall pay Seller's travel, living and related expenses incurred by Seller in performing the repairs or replacements at Buyer's facility. As a condition precedent to Seller's obligation to repair or replace a product part under the Initial Warranty, Buyer shall (i) promptly notify Seller in writing of any such defect; (ii) shall have returned the product's record of purchase to Seller or to Seller's authorized representatives within thirty (30) days of the date the product is shipped by the seller; and (iii) assist Seller in all respects in its attempts to determine the legitimacy and basis of any claims made by or on behalf of Buyer including but not limited to providing Seller with access to the product to check operating conditions. If Buyer does not provide such written notice to Seller within the Initial Warranty period or fails to return the product's record of purchase as set forth above, Seller shall have no further liability or obligation to Buyer therefor. In no event shall Seller's liability under the Initial Warranty exceed the original purchase price of the product which is the subject of the alleged defect.

THE REMEDIES PROVIDED IN THE INITIAL WARRANTY ARE THE SOLE AND EXCLUSIVE REMEDIES AVAILABLE TO THE BUYER. NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, AND EVEN IF THE SOLE AND EXCLUSIVE REMEDIES FAIL OF THEIR ESSENTIAL PURPOSE FOR ANY REASON WHATSOEVER, IN NO EVENT SHALL SELLER BE LIABLE FOR BUYER'S MANUFACTURING COSTS, LOST PROFITS, GOODWILL, OR ANY OTHER SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY AND ALL SUCH DAMAGES ARE HEREBY DISCLAIMED.

Assignment

Buyer shall not assign any of its rights or obligations hereunder without the prior written approval of Seller; provided, however, that if Buyer is a distributor of Seller, the rights and obligations of Buyer under these Warranty Provisions shall inure to the benefit of and be binding upon Buyer's customers who provide the product's proof of purchase to Seller pursuant to the terms set forth herein. Seller may assign any or all of its rights or obligations hereunder without Buyer's prior consent.

Governing Law

The Warranty Provisions and all questions relating to their validity, interpretation, performance, and enforcement shall be construed in accordance with, and shall be governed by, the substantive laws of the Commonwealth of Pennsylvania without regard to its principles of conflicts of law.

Waiver

Any failure of the part of Seller to insist on strict compliance with the Warranty Provisions shall no way constitute a waiver of such right. No claim or rights arising out of a breach of the Warranty Provisions by Buyer may be discharged in whole or in part by a waiver of the claim or right, unless the waiver is in writing signed by an authorized representative of Seller. Seller's waiver or acceptance of any breach by Buyer of any provisions of the Warranty Provisions shall not constitute a waiver of or an excuse for nonperformance as to any other provision of the Warranty Provisions nor as to any prior or subsequent breach of the same provision.

Freight


Seller will arrange and pay for shipping and handling for the return of the unit to the Buyer.

Out of Box Failure (OBF)

An Out of Box Failure (OBF) is defined as a product failure immediately following unpacking and installation of a newly delivered product. JULABO provides a 14-day grace period after the date of shipment, during which time the delivered product must be checked for defect. The same exclusions that apply to the regular warranty also apply to OBF classification. For example, JULABO will not be liable for transport damage, damage inflicted by the customer or any other party, or defects arising from improper installation or usage.

8 Disposal

When disposing of the device, the applicable country-specific guidelines must be observed.

	CAUTION
	<p>Risk of fire with flammable refrigerants!</p> <p>If the device contains a flammable refrigerant, there is a risk of fire if refrigerant leaks.</p> <ul style="list-style-type: none">• Do not open the refrigerant circuit• Have the device disposed of by a certified company in accordance with national or regional regulations

- ▶ The circulator combination is switched off and disconnected from the mains voltage.
 1. Allow the device to cool down to room temperature.
 2. Disconnect all power cables and, if necessary, data cables from the circulator and cooling machine.
 3. Remove the circulator.
 4. Completely drain the cooling machine.
 5. Dispose of the device by giving it to an authorized disposal company.
- ☞ Disposed of the device in household waste, or similar facilities for the collection of domestic waste, is not permissible.
- ✓ The cooling machine is correctly disposed of.

