




**Advanced Test Equipment Rentals**  
**www.atecorp.com 800-404-ATEC (2832)**

**Agilent E4991A RF Impedance/Material Analyzer**

# **Service Manual**

**Sixth Edition**



**Agilent Technologies**

**Manufacturing No. E4991 - 90140**

**August 2012**

---

## Notices

The information contained in this document is subject to change without notice.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Agilent Technologies.

Microsoft®, MS-DOS®, Windows®, Visual C++®, Visual Basic®, VBA® and Excel® are registered

UNIX is a registered trademark in U.S. and other countries, licensed exclusively through X/Open Company Limited.

Portions ©Copyright 1996, Microsoft Corporation. All rights reserved.

© Copyright 2001, 2003, 2004, 2005, 2008, 2012 Agilent Technologies

---

## Manual Printing History

The manual's printing date and part number indicate its current edition. The printing date changes when a new edition is printed. (Minor corrections and updates that are incorporated at reprint do not cause the date to change.) The manual part number changes when extensive technical changes are incorporated.

December 2001	First Edition
April 2003	Second Edition
November 2004	Third Edition
December 2005	Fourth Edition
September 2008	Fifth Edition (E4991 - 90140)
August 2012	Sixth Edition (E4991 - 90140)

---

## Safety Summary

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific WARNINGS elsewhere in this manual may impair the protection provided by the equipment. In addition it violates safety standards of design, manufacture, and intended use of the instrument.

Agilent Technologies assumes no liability for the customer's failure to comply with these requirements.

---

**NOTE** The E4991A complies with INSTALLATION CATEGORY II as well as POLLUTION DEGREE 2 in IEC61010-1. The E4991A is an INDOOR USE product.

---

---

**NOTE** The LEDs in the E4991A are Class 1 in accordance with IEC60825-1, CLASS 1 LED PRODUCT

---

---

**NOTE** This equipment is MEASUREMENT CATEGORY I (CAT I). Do not use for CAT II, III, or IV.

---

---

**NOTE** This equipment is tested with stand-alone condition or with the combination with the accessories supplied by Agilent Technologies against the requirement of the standards described in the Declaration of Conformity. If it is used as a system component, compliance of related regulations and safety requirements are to be confirmed by the builder of the system.

---

- **Ground the Instrument**  
To avoid electric shock, the instrument chassis and cabinet must be grounded with the supplied power cable's grounding prong.
- **DO NOT Operate in an Explosive Atmosphere**  
Do not operate the instrument in the presence of inflammable gasses or fumes. Operation of any electrical instrument in such an environment clearly constitutes a safety hazard.
- **Keep Away from Live Circuits**  
Operators must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with the power cable connected. Under certain conditions, dangerous voltage levels may remain even after the power cable has been disconnected. To avoid injuries, always disconnect the power and discharge circuits before touching them.
- **DO NOT Service or Adjust the Instrument Alone**  
Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- **DO NOT Substitute Parts or Modify the Instrument**  
To avoid the danger of introducing additional hazards, do not install substitute parts or perform unauthorized modifications to the instrument. Return the instrument to an

Agilent Technologies Sales and Service Office for service and repair to ensure that safety features are maintained in operational condition.

- Dangerous Procedure Warnings

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

---

**WARNING**

---

**Dangerous voltage levels, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting this instrument.**

- Do not connect the measuring terminals to mains.

---

## Safety Symbol

General definitions of safety symbols used on the instrument or in manuals are listed below.



Instruction Manual symbol: the product is marked with this symbol when it is necessary for the user to refer to the instrument manual.



Alternating current.



Direct current.



On (Supply).



Off (Supply).



In position of push-button switch.



Out position of push-button switch.



Frame (or chassis) terminal. A connection to the frame (chassis) of the equipment which normally include all exposed metal structure.

---

**WARNING**

---

**This warning sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.**

---

**CAUTION**

---

This Caution sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

---

**NOTE**

---

Note denotes important information. It calls attention to a procedure, practice, condition or the like, which is essential to highlight.

---

## **Certification**

Agilent Technologies certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institution's calibration facility, or to the calibration facilities of other International Standards Organization members.

---

## **Documentation Warranty**

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement will control.

---

## **Exclusive Remedies**

The remedies provided herein are buyer's sole and exclusive remedies. Agilent Technologies shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

---

## **Assistance**

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products.

For any assistance, contact your nearest Agilent Technologies Sales and Service Office. Addresses are provided at the back of this manual.

---

## Typeface Conventions

<b>Bold</b>	Boldface type is used when a term is defined. For example: <b>icons</b> are symbols.
<i>Italic</i>	Italic type is used for emphasis and for titles of manuals and other publications.
<b>[Hardkey]</b>	Indicates a hardkey labeled “Hardkey.”
<b>Softkey</b>	Indicates a softkey labeled “Softkey.”
<b>[Hardkey] - Softkey1 - Softkey2</b>	Indicates keystrokes <b>[Hardkey] - Softkey1 - Softkey2</b> .

---

## E4991A Documentation Map

The following manuals are available for the E4991A.

- **Operation Manual (P/N: E4991-900x0)**

Most of basic information necessary for using E4991A is described in this manual. It includes the way of installation, preparation, measurement operation including calibration, performances (specifications), key definitions, and error messages.
- **Programming Manual (P/N: E4991-900x1)**

The Programming Manual shows how to write and use program to control the E4991A.
- **Service Manual (P/N: E4991-901x0)**

This manual describes how to adjust and repair the E4991A, and how to carry out performance tests.

Microsoft®, MS-DOS®, Windows®, and Visual Basic® for Applications are registered trademarks of Microsoft Corporation in U.S. and other countries.

---

## Software Installed

The Windows operating system installed in this machine is customized for more effective operation, and has different functions that are not part of the Windows operating system for ordinary PCs (personal computers). Therefore, do not attempt to use the system in ways other than those described in this manual or to install Windows-based software (including anti-virus software) for ordinary PCs as doing so may cause malfunctions.

Also note the followings.

- Do not update the Windows operating system installed in this machine to the Windows operating system for ordinary PCs. Doing so will cause malfunctions.
- Do not allow any computer virus to infect the system. This machine has no virus check function nor anti-virus software installed.

Agilent Technologies will not be held liable for any failure or damage arising from negligence regarding these prohibitions and warnings.

---

### NOTE

If the pre-installed software is damaged somehow, resulting in errant behavior by the machine, perform a "system recovery".

---





<b>1. General Information</b>	
Organization of Service Manual . . . . .	18
Instrument Covered by This Manual . . . . .	20
Required Equipment . . . . .	21
<b>2. Performance Test and Function Test</b>	
Required Equipment . . . . .	24
How to Set the E4991A for Maintenance . . . . .	25
Performance Test . . . . .	27
Introduction . . . . .	27
Frequency Accuracy Test . . . . .	28
Power Level Accuracy Test. . . . .	31
Impedance Measurement Accuracy Test. . . . .	35
DC Bias Level Accuracy Test (Option 001) . . . . .	42
Performance Test (for Option 007 Temperature Characteristic Test Kit) . . . . .	46
Introduction . . . . .	46
Required Test. . . . .	46
Specification . . . . .	46
Required Equipment . . . . .	46
Test Procedure . . . . .	46
Performance Test (for Option 010 Probe Station Connection Kit) . . . . .	48
Introduction . . . . .	48
Required Test. . . . .	48
Specification . . . . .	48
Test Procedure . . . . .	49
Function Test. . . . .	51
Introduction . . . . .	51
Warm Up Time . . . . .	51
Ambient Conditions . . . . .	51
Low Loss Capacitor Check. . . . .	52
Calculating Sheet . . . . .	53
Performance Test. . . . .	53
Function Test. . . . .	73
Test Record . . . . .	74
Performance Test Record . . . . .	74
Performance Test Record (Option 007). . . . .	89
Performance Test Record (Option 010). . . . .	102
Function Test Record . . . . .	116
<b>3. Adjustment</b>	
Safety Considerations . . . . .	118
Warm-up for Adjustment . . . . .	118
Required Equipment . . . . .	118
Preparation for using the Adjustment Program . . . . .	119
Required Controller. . . . .	119
Installing a GPIB Card (82340B, 82341C/D or 82350A). . . . .	119
Installing Agilent VEE for Personal Computer. . . . .	119
Installing Adjustment Program into Your PC . . . . .	119

Equipment Setup . . . . .	120
E4991A Control Mode. . . . .	121
Order of Adjustment. . . . .	122
Required Adjustment after Replacing Assembly . . . . .	124
Adjustment Program. . . . .	125
Adjustment Program Menu. . . . .	125
How to perform the Adjustment Program . . . . .	128
Initialization of the System Calibration Data . . . . .	132
Required Equipment . . . . .	132
Procedure . . . . .	132
A1 VCXO Frequency Adjustment . . . . .	133
Required Equipment . . . . .	133
Procedure . . . . .	133
A3 Local Level Adjustment . . . . .	134
Required Equipment . . . . .	134
Procedure . . . . .	134
A3 Output AGC Gain Adjustment . . . . .	135
Required Equipment . . . . .	135
Procedure . . . . .	135
A3 Output Level Adjustment . . . . .	136
Required Equipment . . . . .	136
Procedure . . . . .	136
A4 AGC Gain Adjustment . . . . .	138
Required Equipment . . . . .	138
Procedure . . . . .	138
A4 Local Level Adjustment . . . . .	139
Required Equipment . . . . .	139
Procedure . . . . .	139
A4 IF Gain Adjustment . . . . .	140
Required Equipment . . . . .	140
Procedure . . . . .	140
Default Cal Coefficient Adjustment. . . . .	141
Required Equipment . . . . .	141
Procedure . . . . .	141
A5 Reference Oven Adjustment (Opt 1D5 only). . . . .	142
Required Equipment . . . . .	142
Procedure . . . . .	142
A2 DC Bias Voltage Adjustment (Opt 001 only). . . . .	144
Required Equipment . . . . .	144
Procedure . . . . .	144
A2 DC Bias Current Adjustment (Opt 001 only). . . . .	145
Required Equipment . . . . .	145
Procedure . . . . .	145
A2 DC Bias Output Resistor/Conductance Adjustment (Opt 001 only) . . . . .	146
Required Equipment . . . . .	146
Procedure . . . . .	146
Writing the Instrument ID . . . . .	148
Required Equipment . . . . .	148
Procedure . . . . .	148

How to confirm the E4991A option installed . . . . .	148
System Backup (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	149
How to make a system backup disk . . . . .	149
System backup Procedure . . . . .	149

#### **4. Troubleshooting**

Introduction . . . . .	154
How to exit from the E4991A Measurement View . . . . .	155
To Troubleshoot the Instrument . . . . .	156
Primary Trouble Isolation . . . . .	156
No Display Troubleshooting . . . . .	158
Booting Process Troubleshooting (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	161
Booting Process Troubleshooting (for serial prefix MY433 and later) . . . . .	168
Troubleshooting Using Internal Test . . . . .	172
Power On Self Test . . . . .	172
PLL unlock . . . . .	172
To Execute the Internal Test . . . . .	172
Internal Test . . . . .	172
Analog Test Failure Troubleshooting in the Internal Test . . . . .	173
System Test Failure Troubleshooting in the Internal Test . . . . .	174
Function Depend Troubleshooting . . . . .	175
Functions . . . . .	175
To check the Front Panel . . . . .	179
To check the LCD . . . . .	179
To check the External Keyboard . . . . .	179
To check the Mouse . . . . .	180
To check the FDD . . . . .	180
To check the VGA Display Output . . . . .	180
To check the External Trigger Input . . . . .	181
To check the LAN (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	181
To Check the LAN (for serial prefix MY433 and later) . . . . .	184
To check the Printer Parallel port ( for serial prefix JP1KH, JP2KH, and MY432) . . . . .	188
To check the Printer USB port ( for serial prefix MY433 and later) . . . . .	188
To check the GPIB . . . . .	188
External Tests Failure Troubleshooting . . . . .	189
To Execute the External Test . . . . .	189
The contents of the external test . . . . .	189
Front Keyboard & LCD Display Test . . . . .	190
Source Test . . . . .	190
Out ATT Test . . . . .	191
Input ATT Test . . . . .	191
IF Gain Test . . . . .	192
Front Isolation Test . . . . .	192
Test Head Test . . . . .	193
DC Bias Test (Option 001 only) . . . . .	193
Z Meas Test . . . . .	194
External Test Failure Troubleshooting . . . . .	195
Performance Tests Failure Troubleshooting . . . . .	196
Troubleshooting for Performance Test Failure . . . . .	196

To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	197
To Identify the Motherboard Used . . . . .	197
Configure the Motherboard . . . . .	198
To Confirm or Set the BIOS Options . . . . .	200
To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later) . . . . .	210
To Identify the Motherboard Installed . . . . .	210
Configure the Motherboard . . . . .	210
Testing DRAM on the Motherboard . . . . .	210
To Confirm or Set the BIOS Options . . . . .	211
<b>5. Theory of Operation</b>	
Overall Instrument Operation . . . . .	220
Digital Section . . . . .	223
A20 Digital Motherboard (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	223
A20 Digital Motherboard (for serial prefix MY433 and later) . . . . .	223
A21 Analog Interface Board . . . . .	223
A22 Front Panel Keyboard . . . . .	223
A24 GPIB Board . . . . .	223
A25 LAN Interface Board (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	223
A26 Display Board . . . . .	223
A27 Mass Storage Disk Drive . . . . .	224
A28 FDD (Floppy Disk Drive) . . . . .	224
A51 LCD (Liquid Crystal Display) . . . . .	224
A52 Inverter Board . . . . .	224
Analog Section . . . . .	225
A1 Reference Oscillator Board . . . . .	227
A3 Source Board . . . . .	227
A4 Receiver Board . . . . .	228
A6 Test Head Board(for the standard and Option 010) . . . . .	229
A10 Analog Motherboard . . . . .	229
A2 DC Bias Board (Option 001) . . . . .	229
A5 Reference Oven Board (Option 1D5) . . . . .	229
<b>6. Replaceable Parts</b>	
Ordering Information . . . . .	232
Direct Mail Order System . . . . .	232
Exchange Assemblies . . . . .	233
Replaceable Parts List (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	234
Power Cables and Plug Configurations . . . . .	234
Top View (Major Assembly) . . . . .	234
Top View (Cables & Other Parts) . . . . .	236
Top View (Miscellaneous Parts) . . . . .	238
Top View (Under Power Supply) . . . . .	240
Front View (Analog Boards and Semi Rigid Cables) . . . . .	242
Front Panel . . . . .	244
Front Panel (Back Side) . . . . .	246
Rear View . . . . .	247
Side View . . . . .	248

Test Head. . . . .	250
Option 007 Temperature Characteristic Test Kit. . . . .	252
Test Head for Option 010 . . . . .	254
Mass Storage Disk Drive Assembly . . . . .	255
Power Supply Assembly . . . . .	256
Other Parts. . . . .	256
Replaceable Parts List (for serial prefix MY433 and later) . . . . .	258
Power Cables and Plug Configurations. . . . .	258
Top View (Major Assembly). . . . .	258
Top View (Cables & Other Parts) . . . . .	260
Top View (Miscellaneous Parts) . . . . .	262
Top View (Under Power Supply) . . . . .	264
Front View (Analog Boards and Semi Rigid Cables) . . . . .	266
Front Panel . . . . .	268
Front Panel (Back Side) . . . . .	270
Rear View . . . . .	271
Side View . . . . .	272
Test Head. . . . .	274
Option 007 Temperature Characteristic Test Kit. . . . .	276
Test Head for Option 010 . . . . .	278
Floppy Disk Drive Assembly . . . . .	279
Mass Storage Disk Drive Assembly . . . . .	280
Power Supply Assembly . . . . .	281
Other Parts. . . . .	282

## **7. Replacement Procedure**

Replacing an Assembly . . . . .	284
Required Tools . . . . .	285
Outer Cover Removal. . . . .	286
Tools Required . . . . .	286
Procedure. . . . .	286
Front Panel Removal . . . . .	287
Tools Required . . . . .	287
Procedure. . . . .	287
A50 Power Supply Assembly Removal (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	288
Tools Required . . . . .	288
Procedure. . . . .	288
A50 Power Supply Assembly Removal (for serial prefix MY433 and later). . . . .	289
Tools Required . . . . .	289
Procedure. . . . .	289
A27 Mass Storage Disk Drive Assembly Removal . . . . .	290
Tools Required . . . . .	290
Procedure. . . . .	290
A28 FDD (Floppy Disk Drive) Removal . . . . .	291
Tools Required . . . . .	291
Procedure. . . . .	291
A20 Digital Motherboard Removal (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	292
Tools Required . . . . .	292
Procedure. . . . .	292

---

# Contents

A20 Digital Motherboard Removal (for serial prefix MY433 and later) . . . . .	293
Tools Required . . . . .	293
Procedure . . . . .	293
CPU Replacement (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	294
Tools Required . . . . .	294
Procedure . . . . .	294
DIMM64MB Memory Module Replacement (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	296
Procedure . . . . .	296
A1/A2(Opt.001)/A3/A4 Board Removal . . . . .	296
Tools Required . . . . .	296
Procedure . . . . .	296
A5 Reference Oven Board(Opt.1D5) Removal . . . . .	298
Tools Required . . . . .	298
Procedure . . . . .	298
A10 Analog Motherboard Removal . . . . .	298
Tools Required . . . . .	298
Procedure . . . . .	298
A21 Analog Interface Board and EEPROM Removal . . . . .	299
Tools Required . . . . .	299
Procedure . . . . .	299
A24 GPIB/A25 LAN Board Removal (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	300
Tools Required . . . . .	300
Procedure . . . . .	300
A24 GPIB Card Replacement (for serial prefix MY433 and later) . . . . .	301
Tools Required . . . . .	301
Removal Procedure . . . . .	301
Replacement Procedure . . . . .	302
A26 Display Board Removal . . . . .	303
Tools Required . . . . .	303
Procedure . . . . .	303
A22 Front Panel Keyboard Removal . . . . .	304
Tools Required . . . . .	304
Procedure . . . . .	304
A51 LCD Removal . . . . .	305
Tools Required . . . . .	305
Procedure . . . . .	305
A52 Inverter Board Removal . . . . .	305
Tools Required . . . . .	305
Procedure . . . . .	305
<b>8. Post-Repair Procedures</b>	
Post-Repair Procedures . . . . .	308
<b>A. Manual Changes</b>	
Manual Changes . . . . .	312
<b>B. System Installation for A27 Mass Storage</b>	
System Recovery (for serial prefix JP1KH, JP2KH, and MY432) . . . . .	314

Notes on executing system recovery . . . . .	314
Procedure to execute system recovery (for serial number JP1KH and A27 that has never been replaced)	315
Procedure to execute system recovery (for serial number other than JP1KH or A27 that has been replaced)	317
System Recovery (for serial prefix MY433 and later) . . . . .	319
Types of system recoveries . . . . .	319
Notes on executing system recovery . . . . .	319
Procedure to execute system recovery . . . . .	320
Procedure to create the user backup image . . . . .	323
Procedure to execute the user recovery function . . . . .	326
Initial Registration of E4991A (for serial prefix MY433 and later) . . . . .	329

**C. Firmware Update**

Firmware Update . . . . .	334
Required Equipment . . . . .	334
How to make the E4991A Firmware Installation Disk . . . . .	334
How to update the E4991A firmware . . . . .	335

**D. Power Requirement**

Preparation for Power Supply . . . . .	340
Power Requirements . . . . .	340
Power Cable . . . . .	340
Turning the Power ON and OFF . . . . .	342
Turning the power ON . . . . .	342
Turning the power OFF . . . . .	342

**E. Messages**

Alphabetical Order . . . . .	344
A . . . . .	344
B . . . . .	344
C . . . . .	344
D . . . . .	346
E . . . . .	346
F . . . . .	347
G . . . . .	347
I . . . . .	347
M . . . . .	349
N . . . . .	349
O . . . . .	351
P . . . . .	351
Q . . . . .	352
R . . . . .	353
S . . . . .	353
T . . . . .	354
U . . . . .	354
Messages indicating the internal status of the equipment . . . . .	356
Messages indicating measurement failure . . . . .	356

Messages indicating the results (or current status) of processing . . . . . 357



---

# 1 General Information

The Service Manual is a guide to servicing the E4991A RF Impedance/Material Analyzer. The manual contains information requisite to do performance test, adjust, troubleshoot, and repair.

## Organization of Service Manual

Tabs are used to divide the major chapter and appendix of this manual. The contents of each chapter and appendix in this manual as follows;

### Chapter 1, “General Information,”

The Service Manual is a guide to servicing the E4991A RF Impedance/Material Analyzer. The manual contains information requisite to do performance test, adjust, troubleshoot, and repair.

### Chapter 2, “Performance Test and Function Test,”

This chapter provides information on how to verify the E4991A performance. The maintenance consists of performance test and function test.

### Chapter 3, “Adjustment,”

This chapter provides the adjustment procedure for the E4991A RF Impedance/Material Analyzer to ensure that the E4991A is within its specifications.

### Chapter 4, “Troubleshooting,”

This chapter provides procedure to isolate the failure assembly in the E4991A RF Impedance/Material Analyzer.

### Chapter 5, “Theory of Operation,”

This chapter provides the theory of operation of the E4991A RF Impedance/Material Analyzer.

### Chapter 6, “Replaceable Parts,”

This chapter contains information for ordering replacement parts for the E4991A RF Impedance/Material Analyzer.

### Chapter 7, “Replacement Procedure,”

This chapter provides procedure for removing and replacing the major assemblies in the E4991A RF Impedance/Material Analyzer.

### Chapter 8, “Post-Repair Procedures,”

This chapter lists the procedures required to verify the E4991A operation after an assembly is replaced with a new one.

### Appendix A, “Manual Changes,”

This appendix contains the information required to adapt this manual to versions or configurations of the E4991A manufactured earlier than the current printing date of this manual. The information in this manual applies directly to E4991A units with the serial number that is printed on the title page of this manual.

### Appendix B, “System Installation for A27 Mass Storage,”

This appendix describes how to install the operation system to the A27 mass storage. When the operating system in the A27 mass storage has damage, you can recover it before replacing the A27 by the following procedure.

Appendix C, “Firmware Update,”

This appendix describes how to update the E4991A firmware. When you want to update the E4991A firmware, refer to this appendix.

Appendix D, “Power Requirement,”

Appendix E, “Messages,”

The E4991A can display error messages as well as messages that indicate the internal operating status of the equipment. This appendix explains what these messages mean by listing them in alphabetical order.

## Instrument Covered by This Manual

Agilent Technologies uses a two-part, ten-character serial number label (See Figure 1-1) attached to the instrument's rear panel. The first five characters are the serial prefix and the last five digits are the suffix.

Figure 1-1

### Serial Number Label Example



e4991aoj6001

An instrument manufactured after the printing date of this manual may have serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this new instrument may be accompanied by a yellow Manual Changes supplement or have a different manual part number. This sheet contains “change information” that explains how to adapt the manual to the newer instrument.

In addition to change information, the supplement may contain information for correcting errors (Errata) in the manual. To keep this manual as current and accurate as possible, Agilent Technologies recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified by this manual's printing data and is available from Agilent Technologies. If the serial prefix or number of an instrument is lower than that on the title page of this manual, see Appendix A, Manual Changes. For information concerning, a serial number prefix that is not listed on the title page or in the Manual change supplement, contact the nearest Agilent Technologies office.

## Required Equipment

Table lists the recommended equipment for performing maintenance on the E4991A.

**Table 1-1 Recommended Test Equipment**

Equipment	Critical specifications	Recommended Model	Qty.	Use*1
Frequency Counter	Frequency: 1 MHz to 3 GHz Accuracy: < 2.5 ppm	53131/2A Opt.010 & 030*2 or 53181A Opt.010 & 030*2	1	P,A
Frequency Standard	Frequency: 10 MHz, Time Base Error: $\leq \pm 1 \times 10^{-10}$ /year	5071A or 5061B	1	A
Multimeter	No substitute	3458A	1	P,A
Power Meter	No Substitute	438A*3, E4418A/B or E4419A/B	1	P,A
Power Sensor	Frequency Range: 1 MHz to 3 GHz Power: -35 dBm to 1 dBm	8482A+8481D*4, E4412A*5 or E9304A*6	1	P,A
Network Analyzer	Frequency: 5 GHz to 6 GHz	8753ES Opt.006, 8753ET Opt.006 or 8753E Opt.006	1	F
Performance Test Kit	No Substitute	16190B or 16190A Opt.001	1	P
Calibration Kit	No Substitute	16195B*7 85031B	1 1	P,A,F,T F
Termination	No Substitute	HP 909C Opt.012	1	T
Cable	BNC(m)-BNC(m) Cable, 61 cm BNC(m)-BNC(m) Cable, 122 cm N(m)-N(m) Cable, 61 cm	p/n 8120-1839 p/n 8120-1840 11500B	1 1 1	P,A A T
Adapter	N(m)-BNC(f) Adapter 7mm-N(f) Adapter 7mm-N(m) Adapter Dual Banana - BNC Adapter Coaxial Termination Feed Thru	p/n 1250-0780 11524A 11525A 1251-2277 11048C	1 1 1 1 1	P,A P,A A P,A P

General Information  
Required Equipment

**Table 1-1 Recommended Test Equipment**

Equipment	Critical specifications	Recommended Model	Qty.	Use* <sup>1</sup>
Torque Wrench	Size: 3/4 inch Torque: 136 N-cm	p/n 8710-1766	1	P

\*1. P: Performance Tests, F: Function Tests, A: Adjustment, T: Troubleshooting

\*2. Opt.050 and Opt.124 can be substituted for Opt.030. In this case, a N(m)-BNC(f) adapter is necessary.

\*3. 438A cannot be used with E4412A or E9304A.

\*4. 8481D is not necessary for Adjustment.

\*5. E4412A is not necessary for Adjustment.

\*6. If E9304A is used, the multimeter is not necessary.

\*7. 16195B is a furnished accessory for the E4991A.

---

## 2 Performance Test and Function Test

This chapter provides information on how to verify the E4991A performance. The maintenance consists of performance test and function test.

## Required Equipment

The required test equipment for the performance test and the function test is listed on Table on page 21. Use only calibrated equipment when doing the performance test or the function test for the E4991A.

---

### NOTE

The followings are indispensable to do the performance test. The service center must receive the following from the customer.

- Agilent E4991A
- 16195B 7-mm Calibration Kit (Furnished Accessory for E4991A)
- Standard Test Head (Furnished Accessory for E4991A)
- Option 007 Temperature Characteristic Test Kit (if the E4991A has Option 007)

If the E4991A has the Option 007 Temperature Characteristic Test Kit, you have to do the performance tests for the Option 007 (using the Option 007 kit) in addition to all the performance tests for standard E4991A.

- Option 010 Test Head including 1 m extension cable (if the E4991A has Option 010)

If the E4991A has the Option 010 Probe Station Connection Kit, you have to do the performance tests for the Option 010 (using the Option 010 Test Head) in addition to all the performance tests for standard E4991A.


---




## How to Set the E4991A for Maintenance

This section provides procedure to set the E4991A in the performance test and function test.


This contains a set of keys that are used to move the cursor across the display or enter numeric values.

 (rotary knob)


By turning the knob clockwise or counterclockwise, you can move the onscreen setting cursor. If you press this knob with the cursor placed over a feature, it is selected and executed.

 key  
(arrow keys)

Used to move the onscreen setting cursor up, down, left, or right.

 key  
(click key)

By pressing this key, you can select and execute the feature that the cursor is placed over. It has the same function as pressing the rotary knob.

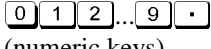
 key  
(numeric keys)



Used to type numeric values, one by one, in the cursor position. By pressing a unit key after entering a value, the value and unit are set and executed.

 key

When you press this key in an area where numeric values are typed, the character to the left of the cursor (|) is deleted. If two or more characters are currently selected (i.e., highlighted) with the cursor, pressing this key clears all of them.

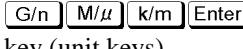
If the numeric entry area contains no characters, input and deletion of '-' repeats each time you press this key.

 key  
(unit keys)

By pressing one of these keys after entering a numeric value with the numeric keys, the entry is set and executed with the prefix indicating unit of measurement added to the value. Two unit prefixes are labeled on each key except ; however, the appropriate unit is determined automatically depending on the parameter being set. If you press the  key, the entered value is executed without a unit prefix.

 key

Used to close the setup toolbar at the right of the display. Also, by pressing this key when a dialog box is onscreen, you can cancel any entry mode and the box closes (i.e., this key can be used instead of pressing the **Cancel** or **x** button in a dialog box).

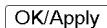




 key

When you press this key when a dialog box is onscreen, the entered setting is executed and the box closes. This key can also be used instead of pressing the **OK** button in a dialog box.

Performance Test and Function Test  
**How to Set the E4991A for Maintenance**

**Menu** key

By pressing this key, the leftmost menu opens in the menu bar at the top of the display. Then, the arrow keys

(   ) can be used to move the cursor to other menus or to the desired item in a menu. Pressing the click key () selects and executes the item. The **Menu** key is used to work with the menu bar when a mouse is not available.

To close an open menu, press the **Menu** key again.

---

## Performance Test

### Introduction

This section provides the test procedures used to verify that the E4991A meets its specifications. The performance tests can also be used for incoming inspection, and for verification after troubleshooting or adjustment. If the performance tests indicate that the E4991A is *NOT* operating within the specified limits, check your test setup, then proceed to troubleshooting if necessary.

### Warm Up Time

Allow the E4991A to warm up for at least 30 minutes before you execute any of the performance tests

### Ambient Conditions

Perform all performance tests in ambient conditions of  $23\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ ,  $\leq 70\text{ \% RH}$ .

### Performance Test Interval

The performance test should be performed periodically. The recommended test interval is 12 months.

---

#### NOTE

The test interval depends on maintenance of use and the environmental conditions under which the instrument is used. You may find that the test interval could be shortened or lengthened; however, such a decision should be based on substantial quantitative data.

---

### Performance Test Record and Calculation Sheet

Performance test record lists all test points, acceptable test limits, test result entry columns, and measurement uncertainties. The listed measurement uncertainties are valid only when the recommended test equipment is used.

The calculation sheet is used as an aid for recording raw measurement data, and for calculating the performance test results.

The procedure for using the calculation sheet and performance test record is;

1. Photo copy the calculation sheet.
2. Follow the performance test procedure and record the measurement values, the E4991A's reading, etc., into the specified column on the calculation sheet.
3. Calculate the test result using the appropriate equation given on the calculation sheet, and record the test result into the Test Result column of the performance test record.

## Frequency Accuracy Test

This test verifies the E4991A's test signal frequency accuracy with an external frequency counter.

### Specification

Frequency Accuracy:  $\pm 10$  ppm (without Option 1D5)  
 $\pm 1$  ppm (with Option 1D5)

### Required Equipment

Description	Recommended Model
Frequency Counter	53131/2A Opt.010 and 030 <sup>*1</sup> or 53181A Opt.010 and 030 <sup>*1</sup>
BNC(m)-BNC(m) Cable, 61 cm	p/n 8120-1839
N(m)-BNC(f) Adapter	p/n 1250-0780
7mm-N(f) Adapter	11524A

\*1. Opt.050 and Opt.124 can be substituted for Opt.030. In this case, a N(m)-BNC(f) adapter is necessary.

### Procedure

---

**NOTE**

In the following procedure, the 53181A is used. Perform the same operation if another frequency counter is used.


1. Connect the equipment as shown in Figure 2-1. For testing the analyzer equipped with Option 1D5, connect a BNC(m)-BNC(m) cable between the Ext Ref In connector and the Ref Oven(Option 1D5) connector on the analyzer rear panel.

---

**NOTE**

For testing without Option 1D5, disconnect the above BNC(m)-BNC(m) cable.

**Figure 2-1** Frequency Accuracy Test Setup 1

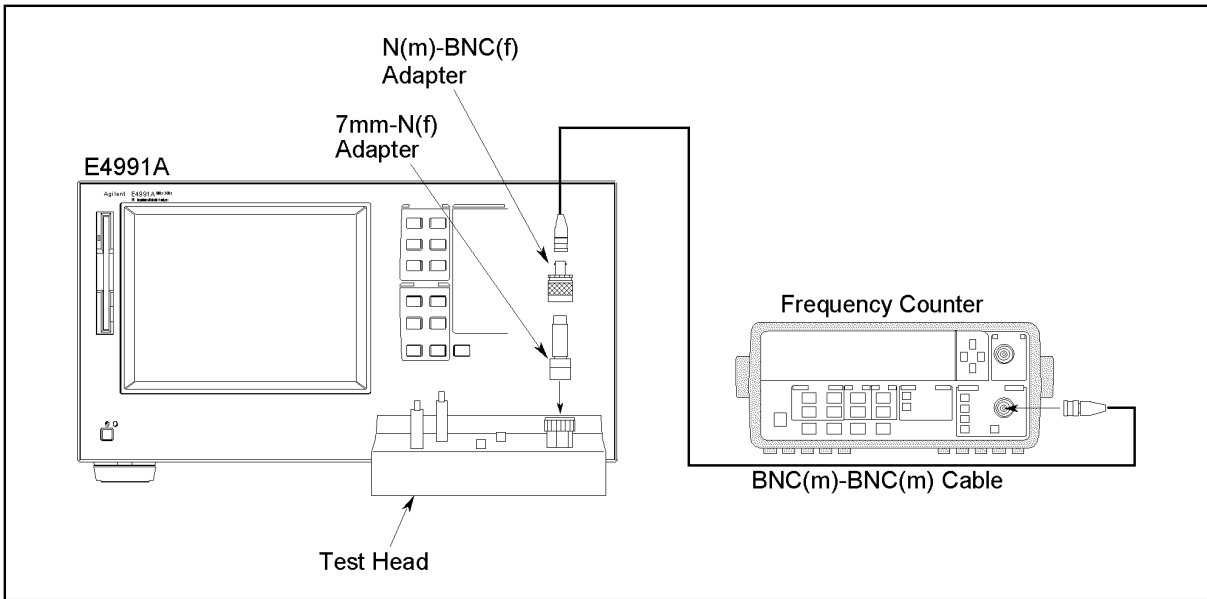


e4991ase001

2. Press **[Preset]** to preset the E4991A.
3. Set the E4991A as follows;

Setting	Operation
Frequency: 1MHz	<b>[start/stop] - Center- [1]-[M/u]</b>
Power: 0dBm	<b>[Source] - Osc Unit- Power [Source] - Osc Level- [0]-[Enter]</b>

4. Press **[Stop/Single]** on the 53181A front panel to make a single measurement.
5. Subtract the analyzer setting(1 MHz) from the frequency counter reading, and record the result on the performance test record.
6. Disconnect the BNC connector from 1 ch in the 53181A front panel, then connect it to the 2 ch as shown in Figure 2-2.

Figure 2-2 Frequency Accuracy Test Setup 2

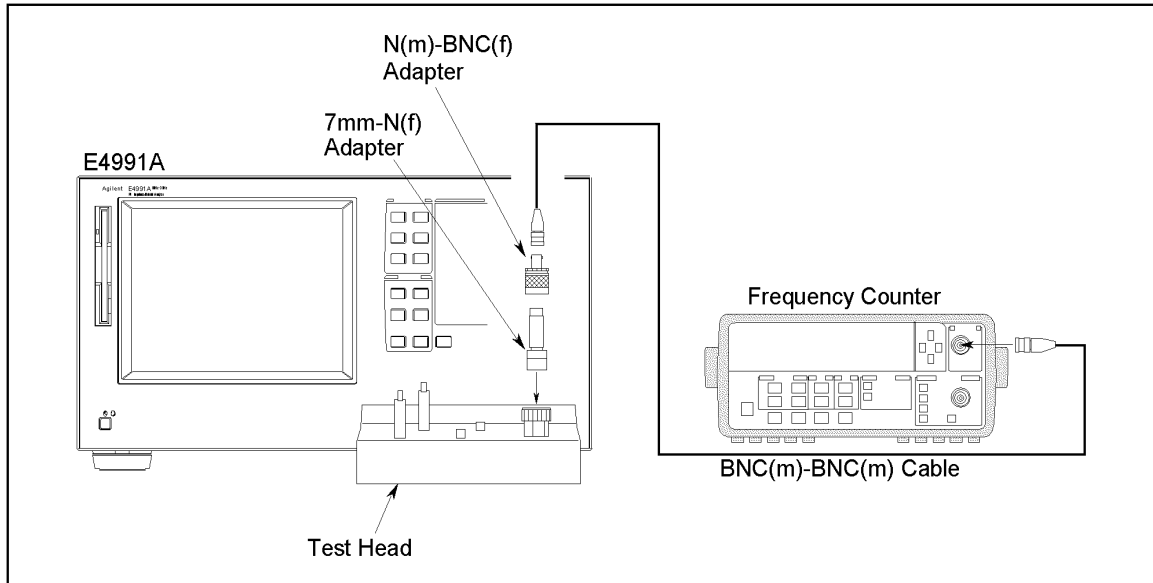

e4991ase002

7. Set the E4991A's frequency to 3GHz by the following procedure.  
**[start/stop] - Center - [3]-[G/n]**
8. Press **[Stop/Single]** on the 53181A front panel to make a single measurement.
9. Subtract the analyzer setting (3 GHz) from the frequency counter reading, and record the result on the performance test record.

## Power Level Accuracy Test

This test verifies the E4991A's test signal power level accuracy with a power meter and a power sensor.

### Specification

Power Level Accuracy:	$\pm 2$ dB @ $\leq 1$ GHz
	+2 dB/-4 dB @ $\leq 1$ GHz (with Opt. 007)
	$\pm 5.5$ dB @ $\leq 1$ GHz (with Opt. 010)
	$\pm 3$ dB @ $> 1$ GHz
	+3 dB/-6 dB @ $> 1$ GHz (with Opt. 007)
	$\pm 7.6$ dB @ $> 1$ GHz (with Opt.010)

### Required Equipment

Description	Recommended Model
Power Meter	E4418A/B, E4419A/B or 438A
Power Sensor	E4412A, E9304A or 8482A+8481D
Multimeter	3458A
BNC(m)-BNC(m) Cable, 61 cm	p/n 8120-1839
N(m)-BNC(f) Adapter	p/n 1250-0780
7mm-N(f) Adapter	11524A
Dual Banana-BNC(f) Adapter	p/n 1251-2277
Feed Through Termination	11048C


### Procedure

1. Connect the equipment as shown in Figure 2-3.

#### NOTE

Refer to Page 42 for the test setup applied to Option 007 and, Page 44 for Option 010.

**Figure 2-3 Power Level Accuracy Test Setup 1**

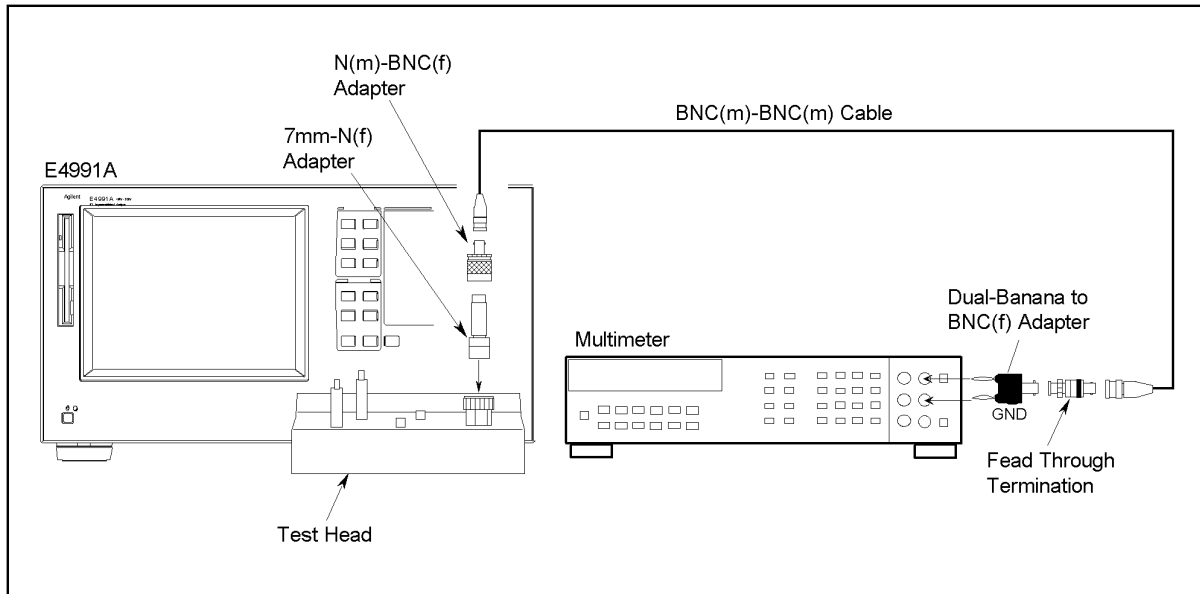

e4991ase032


2. Press **[Preset]** to preset the E4991A.
3. Set the E4991A as follows;

Setting	Operation
Frequency: 1MHz	<b>[start/stop] - Center- [1]-[M/u]</b>
Power: -15 dBm	<b>[Source] - Osc Unit- Power</b> <b>[Source] - Osc Level- [+/-]-[1]-[5]-[Enter]</b>

4. Press **[Trigger Setup]**.
5. Select **Trigger Source-Manual**.
6. Press **[Reset]** key (**[blue] - [->]**) to initialize the 3458A, then Set it as follows;
  - a. Press **[ACV]** to set the measurement mode to AC voltage.
  - b. Press **[S]([blue] - [N Rdgs/Trig])**, $\downarrow$ , $\downarrow$ , $\downarrow$  to display SETACV.
  - c. Press  $\Rightarrow$ , $\downarrow$ , $\downarrow$ , $\downarrow$  to display SYNC, then press **[Enter]**
  - d. Press **[NPLC] - [1] - [0] - [0] - [Enter]**
7. Press **[Trigger]** to make a measurement.
8. Record the multimeter reading to the calculation sheet.
9. Calculate the test result according to the calculation sheet, then record it to the performance test record.
10. Perform zeroing and calibrating the power meter
11. Connect the equipment as shown in Figure 2-4.



**Figure 2-4 Power level Accuracy Test Setup 2**

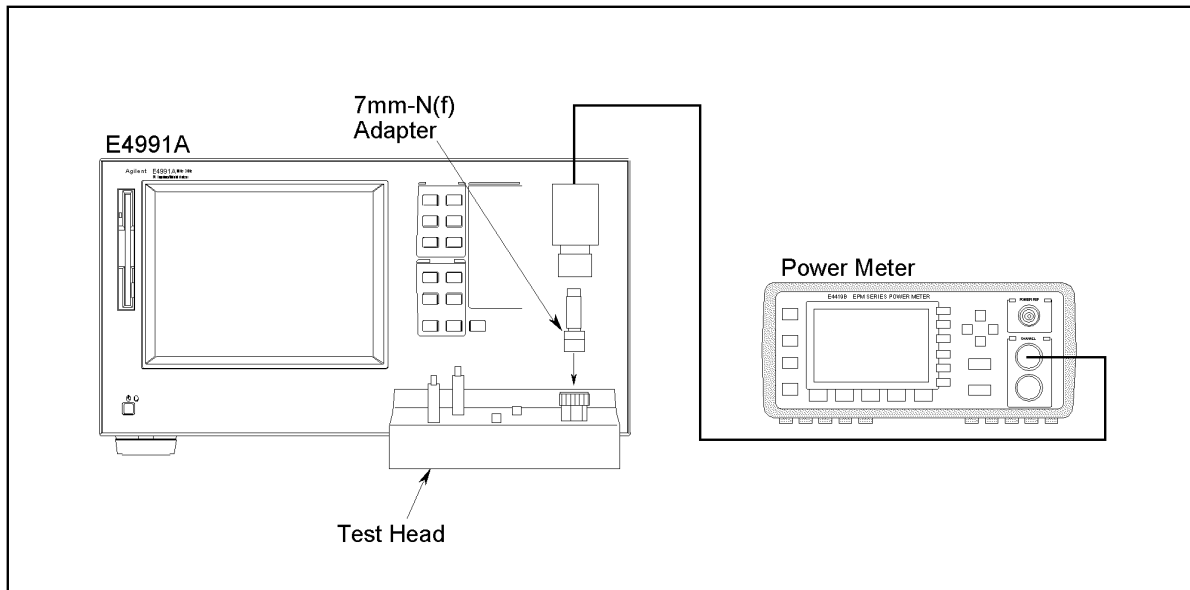

e4991ase005

2. Performance Test and  
 Function Test

12. Set the E4991A as follows;

Setting	Operation
Frequency: 1GHz	[start/stop] - Center- [1]-[G/n]
Power: 1dBm	[Source] - Osc Unit- Power [Source] - Osc Level- [1]-[Enter]

13. Input the E4991A's frequency to the power meter.

14. Press **[Trigger]** to make a measurement.

15. Subtract the E4991A's reading from the power meter reading, then record it to the performance test record.

16. Set the OSC level and Frequency settings as shown in Table 2-1 to test the analyzer and repeat step 12 to 15 for other points.

**Table 2-1**      **Power Level Accuracy Test Settings**

<b>OSC Level</b>	<b>Center Frequency</b>
1 dBm	1 GHz
0 dBm	3 GHz
-7.9 dBm	3 GHz
-10 dBm	300 MHz
-20 dBm	50 MHz
-25 dBm	1 GHz
-30 dBm	10 MHz
-35 dBm	2 GHz
-40 dBm	100 MHz

## Impedance Measurement Accuracy Test

This test verifies the E4991A's impedance measurement accuracy with a calibrated standards(16190B).

### Specification

Basic Accuracy:  $\pm 0.65\%$

### NOTE

See the “Specifications and Supplemental Performance Characteristics” of the Operation Manual.

### Required Equipment


Description	Recommended Model
Performance Test Kit	16190B
Calibration Kit	16195B(furnished with E4991A)

### Procedure

#### Preparation

1. Connect the equipment as shown in Figure 2-5.

Figure 2-5 Impedance Measurement Accuracy Test

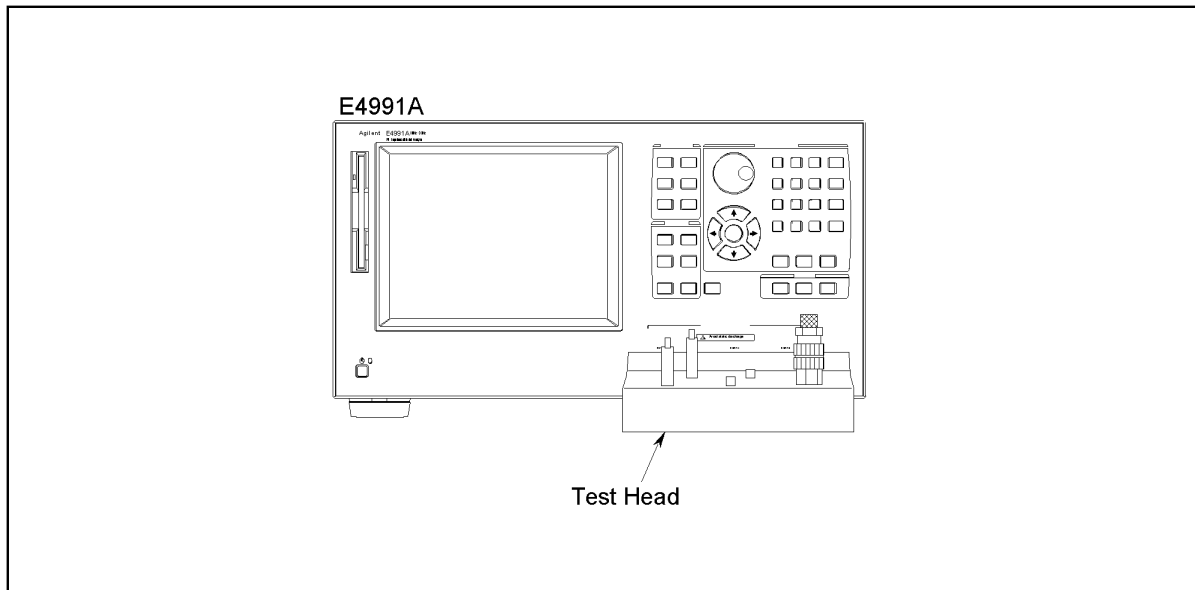

e4991ase006

2. Press **[Preset]** to preset the E4991A.
3. Press **[Sweep]**.
4. Press **Segment Table Menu** to show segment table.
5. Set the measurement points using Add Segment as Figure 2-6.

Figure 2-6

Segment Table 1(Power Level: -3 dBm, Averaging: 8)

Trace 1 - E4991A RF Impedance/Material Analyzer - [E4991A1:2]							
Trace Meas/Format Scale Display Marker Stimulus Trigger Utility Save/Recall System							
No	Start [Hz]	Stop [Hz]	Nop	Avg	Osc [dBm]	Bias Lvl [A]	Bias Lmt [V]
1	1 M	10 M	2	8	-3.0000	100.00 u	1.0000
2	100 M	200 M	2	8	-3.0000	100.00 u	1.0000
3	300 M	500 M	2	8	-3.0000	100.00 u	1.0000
4	600 M	800 M	2	8	-3.0000	100.00 u	1.0000
5	1 G	1.3 G	2	8	-3.0000	100.00 u	1.0000
6	1.6 G	1.8 G	2	8	-3.0000	100.00 u	1.0000
7	2 G	2.2 G	2	8	-3.0000	100.00 u	1.0000
8	2.4 G	2.6 G	2	8	-3.0000	100.00 u	1.0000
9	2.8 G	3 G	2	8	-3.0000	100.00 u	1.0000
10							
11							
12							
13							
14							
15							
16							

Segment Table:

Add Segment

Segment No.

Start Hz

Stop Hz

Number Of Points:

Point Average:

Delete Segment

More

Ready Bias OFF Uncal Comp OFF Avg 1 ExtRef

6. Press **[Sweep]**.
7. Press **Sweep Type-Segment** to use segment table.
8. Press **[Trigger Setup]**.
9. Select **Trigger Source-Manual**.
10. Press **[Cal/Compen]** to show the Cal/Compen menu.
11. Select **Cal Menu[Uncal]**.
12. Select **Cal Type-User Freq & Pwr**.
13. Connect the OPEN Termination included in the 16195B to the 7 mm connector using the Torque Wrench(p/n:8710-1760).
14. Select **Meas Open** to calibrate open termination.
15. Connect the SHORT Termination included in the 16195B to the 7 mm connector using the Torque Wrench(p/n:8710-1760).
16. Select **Meas Short** to calibrate short termination.
17. Connect the 50  $\Omega$  Termination included in the 16195B to the 7 mm connector using the Torque Wrench(p/n:8710-1760).
18. Select **Meas Load** to calibrate 50  $\Omega$  termination.
19. Select **Done**.
20. Press **[Save/Recall]** to show the Save/Recall softkey menu.
21. Select **Save State**.
22. Press **[-],[3],[Enter]**, then E4991A's status is saved to "-3.sta" status file.
23. Set Osc[dBm] to -20 and Avg to 1 for all measurement points as Figure 2-7.

Figure 2-7

Segment Table 2 (Power Level: -20dBm, Averaging: 1)

No	Start [Hz]	Stop [Hz]	Nop	Avg	Osc [dBm]	Bias Lvl [A]	Bias Lmt [V]
1	1 M	10 M	2	1	-20.000	100.00 u	1.0000
2	100 M	200 M	2	1	-20.000	100.00 u	1.0000
3	300 M	500 M	2	1	-20.000	100.00 u	1.0000
4	600 M	800 M	2	1	-20.000	100.00 u	1.0000
5	1 G	1.3 G	2	1	-20.000	100.00 u	1.0000
6	1.6 G	1.8 G	2	1	-20.000	100.00 u	1.0000
7	2 G	2.2 G	2	1	-20.000	100.00 u	1.0000
8	2.4 G	2.6 G	2	1	-20.000	100.00 u	1.0000
9	2.8 G	3 G	2	1	-20.000	100.00 u	1.0000
10							
11							
12							
13							
14							
15							
16							

24. Perform OPEN, SHORT, LOAD calibration as described in step 10 to 19.
25. Press **[Save/Recall]** to show the Save/Recall softkey menu.
26. Select **Save State**.
27. Press **[-],[2],[0][Enter]**, then E4991A's status is saved to "-20.sta" status file.
28. Set OSC[dBm] to -40 and Avg to 1 for all measurement point as Figure 2-8.

Figure 2-8

Segment Table 3 (Power Level: -40dBm, Averaging: 1)

No	Start [Hz]	Stop [Hz]	Nop	Avg	Osc [dBm]	Bias Lvl [A]	Bias Lmt [V]
1	1 M	10 M	2	1	-40.000	100.00 u	1.0000
2	100 M	200 M	2	1	-40.000	100.00 u	1.0000
3	300 M	500 M	2	1	-40.000	100.00 u	1.0000
4	600 M	800 M	2	1	-40.000	100.00 u	1.0000
5	1 G	1.3 G	2	1	-40.000	100.00 u	1.0000
6	1.6 G	1.8 G	2	1	-40.000	100.00 u	1.0000
7	2 G	2.2 G	2	1	-40.000	100.00 u	1.0000
8	2.4 G	2.6 G	2	1	-40.000	100.00 u	1.0000
9	2.8 G	3 G	2	1	-40.000	100.00 u	1.0000
10							
11							
12							
13							
14							
15							
16							

29. Perform OPEN, SHORT, LOAD calibration as described in step 10 to 19.

2. Performance Test and Function Test

## Performance Test and Function Test

### Performance Test

30. Press [**Save/Recall**] to show the Save/Recall softkey menu.
31. Select **Save State**.
32. Press [-],[4],[0],[Enter], then E4991A's status is saved to "-40.sta" status file.

#### **OPEN Termination**

33. Record the 16190B's OPEN termination calibration values on the calculation sheet.
34. Connect the 16190B's OPEN termination to the 7mm connector.
35. Press [**Save/Recall**] to show the Save/Recall softkey menu.
36. Select **Recall State**.
37. Select the file "-3.sta".
38. Press [**Meas/Format**] to show the parameter setup menu.
39. Select **Meas Parameter- |Y|**.
40. Press [**Trigger**] to make a measurement.
41. Record the |Y| readings to the calculation sheet.
42. Calculate the test result according to the calculation sheet, the record it to the performance test record.

#### **SHORT Termination**

43. Record the 16190B's SHORT termination calibration values on the calculation sheet.
44. Connect the 16190B's SHORT termination to the 7mm connector.
45. Press [**Meas/Format**] to show the parameter setup menu.
46. Select **Meas Parameter- |Z|**.
47. Press [**Trigger**] to make a measurement.
48. Record the |Z| readings to the calculation sheet.
49. Calculate the test result according to the calculation sheet, the record it to the performance test record.

#### **50 $\Omega$ Termination**


50. Record the 16190B's 50  $\Omega$  termination calibration values on the calculation sheet.
51. Connect the 16190B's 50  $\Omega$  termination to the 7mm connector.
52. Press [**Trigger**] to make a measurement.
53. Record the |Z| and  $\theta$  readings to the calculation sheet.
54. Calculate the test result according to the calculation sheet, the record it to the performance test record.

#### **10 cm airline with OPEN Termination**

55. Record the 16190B's 10 cm airline with OPEN termination calibration values on the calculation sheet.
56. Connect the 16190B's 10 cm airline and OPEN termination to the 7mm connector, using the following procedure. (see Figure 2-9)

- a. Fully retract the threads on the 7mm connector. Then insert the marked side tip of the airline center conductor.
- b. Gently cover the airline center conductor with the airline outer conductor, with the logo side down. (To prevent damage, don't let the conductor scrape the edge of the outer conductor.) Mate the outer conductors. then torque the connection to 136 N-cm. (A 1/2 inch open end wrench may be necessary to hold the airline stationary.)
- c. Gently inserts the airline center conductor into the open termination center conductor. Mate the outer conductors. Then torque the connection to 136 N-cm using the Torque Wrench(p/n:8710-1760). A 1/2 inch open end wrench may be necessary to hold the airline stationary.

Figure 2-9 10 cm Airline with OPEN Measurement Test Setup

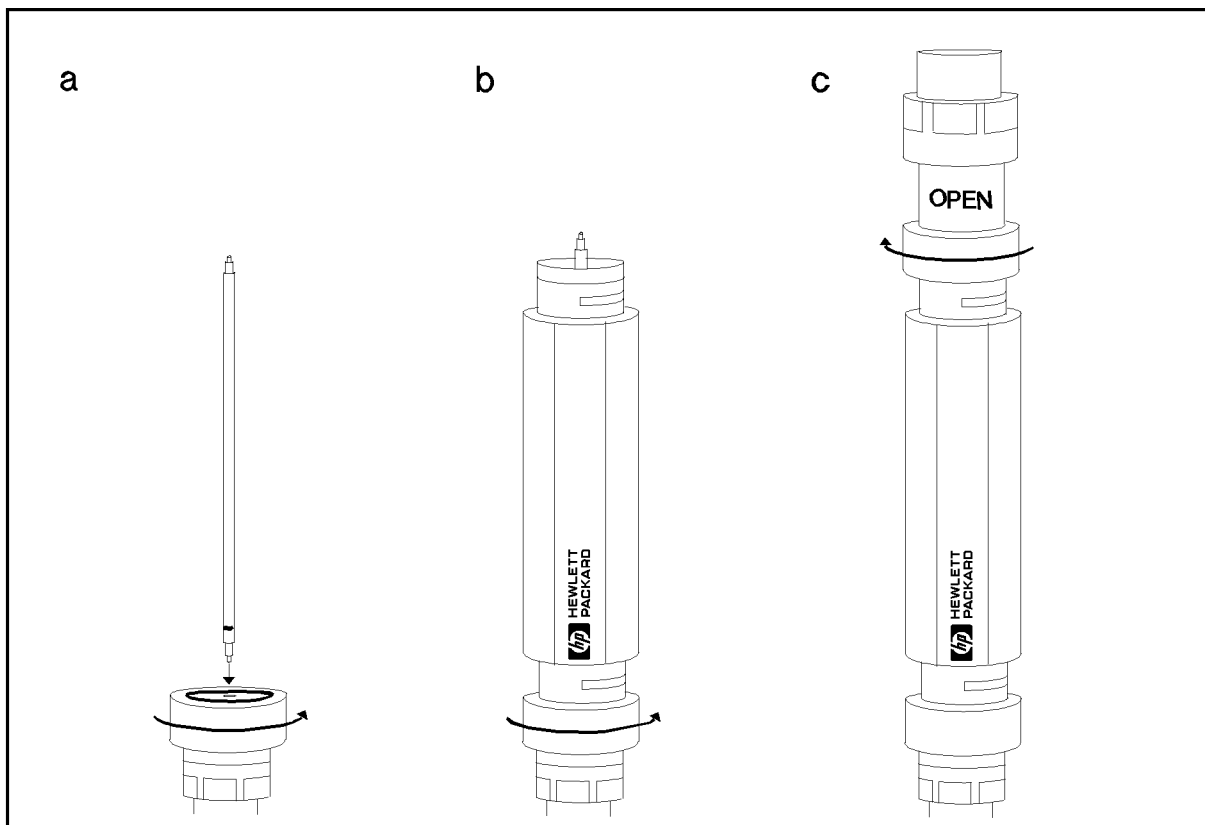

C6S02005

57. Press **[Trigger]** to make a measurement.
58. Record the  $|Z|$  and  $\theta$  readings to the calculation sheet.

**NOTE**

Ignore the reading at 1.3 GHz and 2.8 GHz.

59. Press **[Save/Recall]** to show the Save/Recall menu.
60. Select **Recall State**.
61. Select the file “-20.sta”.
62. Press **[Trigger]** to make a measurement.

Performance Test and Function Test  
**Performance Test**

63. Record the  $|Z|$  and  $\theta$  readings to the calculation sheet.

**NOTE**

Ignore the reading at 1.3 GHz and 2.8 GHz.

64. Calculate the test result according to the calculation sheet, the record it to the performance test record.


**10 cm airline with SHORT Termination**

65. Record the 16190B's 10 cm airline with SHORT termination calibration values on the calculation sheet.

66. Connect the 16190B's 10 cm airline and short termination to the 7mm connector, using the following procedure. (see Figure 2-10)

- a. Remove the open termination from the airline.
- b. Gently inserts the airline center conductor into the short termination center conductor. Mate the outer conductors. Then torque the connection to 136 N-cm using the Torque Wrench(p/n:8710-1760). A 1/2 inch open end wrench may be necessary to hold the airline stationary.

**Figure 2-10** 10 cm Airline with SHORT Measurement Test Setup

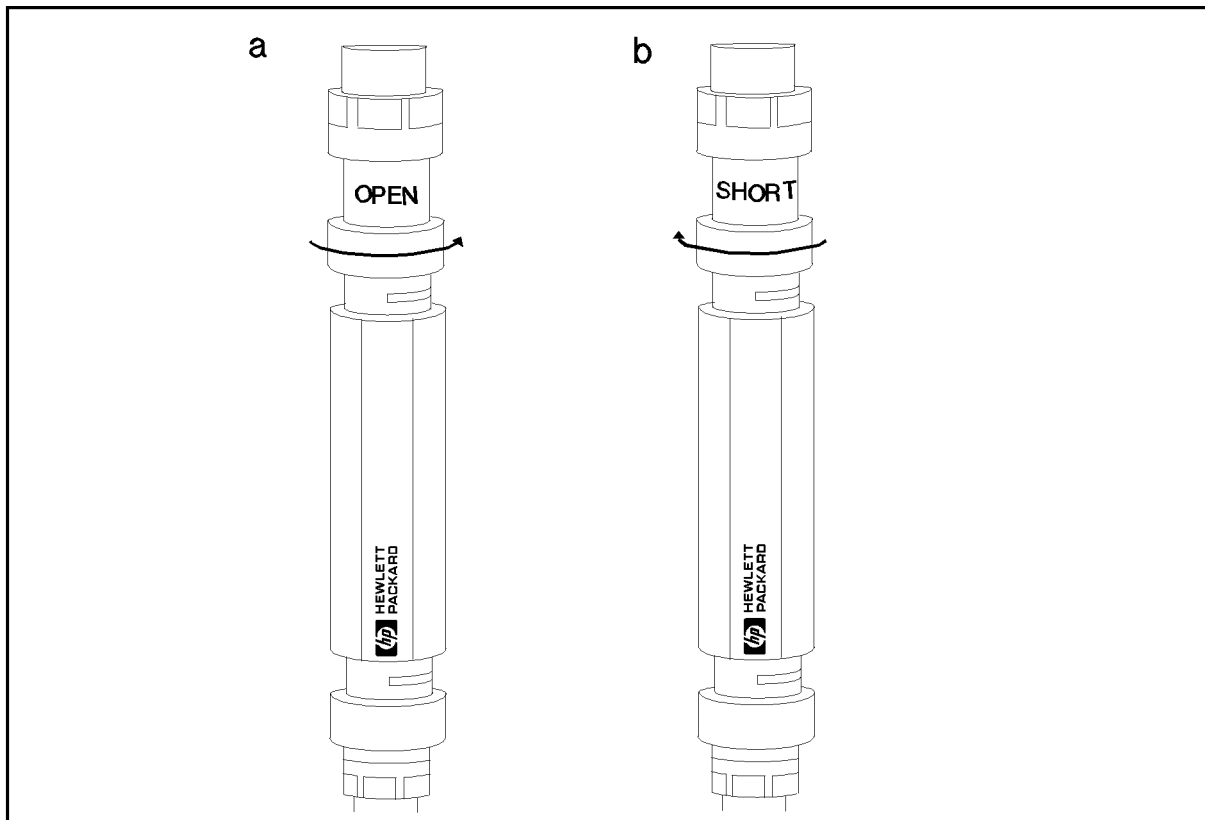

C6S02006

67. Press [**Save/Recall**] to show the Save/Recall menu.

68. Select **Recall State**.

69. Select the file "0.sta".



70. Press **[Trigger]** to make a measurement.
71. Record the  $|Z|$  and  $\theta$  readings to the calculation sheet.

---

**NOTE**

Ignore the reading at 800 MHz, 2.2 GHz and 3.0 GHz.

72. Press **[Save/Recall]** to show the Save/Recall softkey menu.
73. Select **Recall State**.
74. Select the file “-40.sta”.
75. Press **[Trigger]** to make a measurement.
76. Record the  $|Z|$  and  $\theta$  readings to the calculation sheet.
77. Calculate the test result according to the calculation sheet, the record it to the performance test record.

---

**NOTE**

Ignore the reading at 800 MHz, 2.2 GHz and 3.0 GHz.

### DC Bias Level Accuracy Test (Option 001)

This test verifies the E4991A's DC bias level accuracy at several level.

#### Specification

Voltage(open terminal)	$\pm(0.1 \% + 6 \text{ mV})$
Current(short terminal)	$\pm(0.2 \% + 20 \mu\text{A})$


#### Required Equipment

Description	Recommended Model
Multimeter	3458A
BNC(m)-BNC(m) Cable, 61 cm	p/n 8120-1839
N(m)-BNC(f) Adapter	p/n 1250-0780
7mm-N(f) Adapter	11524A
Dual Banana-BNC(f) Adapter	p/n 1251-2277

#### Procedure

1. Connect the test equipment as shown in Figure 2-11. The BNC(f)-Banana adapter must be connected to voltage measurement connectors with the "GND" connector connecting to the "LO" terminal.

**Figure 2-11 DC Bias Level Accuracy Test (voltage) Setup**

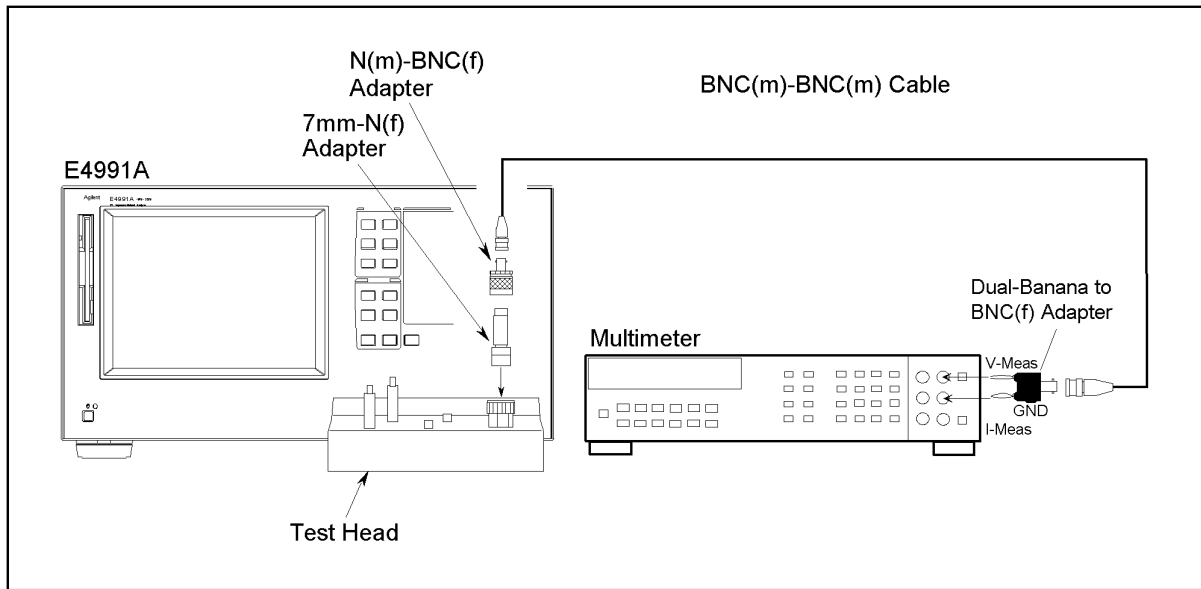

e4991ase014

2. Initialize the multimeter, then set the NPLC to 100 and DCV function.
3. Press **[Preset]** to preset the E4991A, then set it as follows;

Setting	Operation
Osc Level: 0 V *1	<b>[Source]- Osc Level-[0]-[Enter]</b>
DC Bias: On	<b>[Source]- DC Bias-On</b>
Bias Source: Voltage	<b>[Source]-Bias Source-Voltage</b>
Bias Limit: 50 mA	<b>[Source]-Bias Limit-[5]-[0]-[k/m]</b>
Bias Level: -40 V	<b>[Source]-Bias Level-[-]-[4]-[0]-[Enter]</b>

\*1. OSC level is set to 5 mV automatically.


4. Press **[Trigger Setup]-Continuous**.
5. Subtract the analyzer setting(-40V) from the multimeter reading, and record the result on the performance test record.
6. Set the Bias Level to test the analyzer as shown in Table 2-2 and repeat Step 4 to 5 for other test points.

**Table 2-2 DC Bias Level Accuracy Test (Voltage) Settings**

Bias Voltage Setting
-40 V
-4 V
0 V
4 V
40 V

7. Connect the test equipment as shown in Figure 2-12. Connect the BNC(f)-Banana adapter to current measurement connectors with the “GND” connector connecting to the “LO” terminal.

**Figure 2-12 DC Bias Level Accuracy Test (current) Setup**

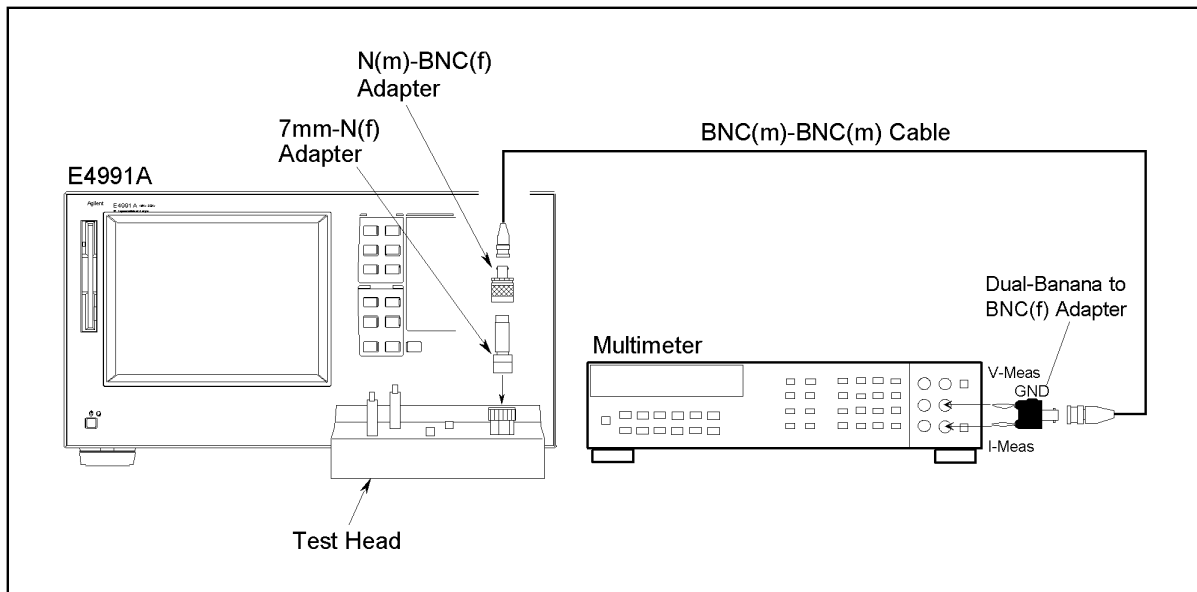

e4991ase013

- 8. Set the multimeter to DCI function.
- 9. Press **[Preset]** to preset the E4991A, then set it as follows;

<b>Setting</b>	<b>Operation</b>
Osc Level: 0 V *1	<b>[Source]- Osc Level-[0]-[Enter]</b>
DC Bias: On	<b>[Source]- DC Bias-On</b>
Bias Source: Current	<b>[Source]-Bias Source-Current</b>
Bias Limit: 40 V	<b>[Source]-Bias Limit-[4]-[0]-[Enter]</b>
Bias Level: -50 mA	<b>[Source]-Bias Level-[-]-[5]-[0]-[k/m]</b>

\*1. OSC level is set to 5 mV automatically.

- 10. Press **[Trigger Setup]**-Single for a single sweep measurement.
- 11. Record the multimeter reading on the performance test record.
- 12. Set the Bias Level to test the analyzer as shown in Table 2-3 and repeat Step 10 to 11 for other test points.

**Table 2-3**

**DC Bias Level Accuracy Test (Current) Settings**

<b>Bias Voltage Setting</b>
-50 mA
-4 mA
-100 μA
100 μA
4 mA
50 mA

## Performance Test (for Option 007 Temperature Characteristic Test Kit)

### Introduction

This section provides the information on the performance test setups and procedures for the E4991A Option 007 Temperature Characteristic Test Kit. To execute the performance tests for the Option 007, both the Temperature Characteristic Test Kit and the E4991A are required.

### Required Test

The E4991A with Option 007 requires the following performance tests with the test setups for Option 007 to be done in addition to the performance tests for standard E4991A.

- Power Level Accuracy Test
- Impedance Measurement Accuracy Test

### Specification

Except for the Power Level Accuracy and Impedance Measurement Accuracy, the E4991A Option 007 specifications are same as the standard E4991A specifications. The Power Level Accuracy and Impedance Measurement Accuracy of the Option 007 E4991A are described below:

Power Level Accuracy:	$\pm 2$ dB @ $\leq 1$ GHz (without Opt. 007)
	+2 dB/-4 dB @ $\leq 1$ GHz (with Opt. 007)
	$\pm 3$ dB @ $> 1$ GHz (without Opt. 007)
	+3 dB/-6 dB @ $> 1$ GHz (with Opt. 007)

Impedance Measurement Accuracy    The values of accuracy equation terms  $E_a$ ,  $Z_s$  and  $Y_o$  for Option 007 are different from those of the standard E4991A. Refer to Specifications on Chapter 11 of the E4991A Operation Manual.

### Required Equipment

The required equipment for the Option 007 performance tests is same as that for the standard E4991A.

### Test Procedure

- Step 1.** Perform all the necessary performance tests for the standard E4991A.
- Step 2.** Install the E4991A and the hardware of the Option 007 Temperature Characteristic Test Kit as shown in Figure 2-13. The installation procedure is as follows:
  - a. Attach the test head of the E4991A to the Test Head Stand (included in the kit).

- b. Mount the cable holder (attached to the 7-mm coaxial connector module of the Heat-Resistant Cable) on the Fixture Stand with its captive screws.
- c. Place the Fixture Stand on a box (a carton or a substitute) to level the Heat-Resistant Cable at the same height as the DUT Port on the test head. Adjust the height of the Fixture Stand for  $223 \text{ mm} \pm 10 \text{ mm}$  with a spacer (another carton or books) inserted between the Fixture Stand and box as shown in the figure.
- d. Connect the 1 meter RF Extension Cable Assembly and Heat-Resistant Cable to the test head of the E4991A as shown in the figure.


**CAUTION**

Do not force the RF extension cable assembly. It is strongly suggested that the RF extension cable assembly be connected last of the setup procedure in order to prevent the joint of SMA connectors on the cable from being forced and damaged.

**CAUTION**

Do not force the high temperature cable or else the cable may be impaired. Avoid bending the cable.

**Figure 2-13** Option 007 Hardware Installation for Performance Tests

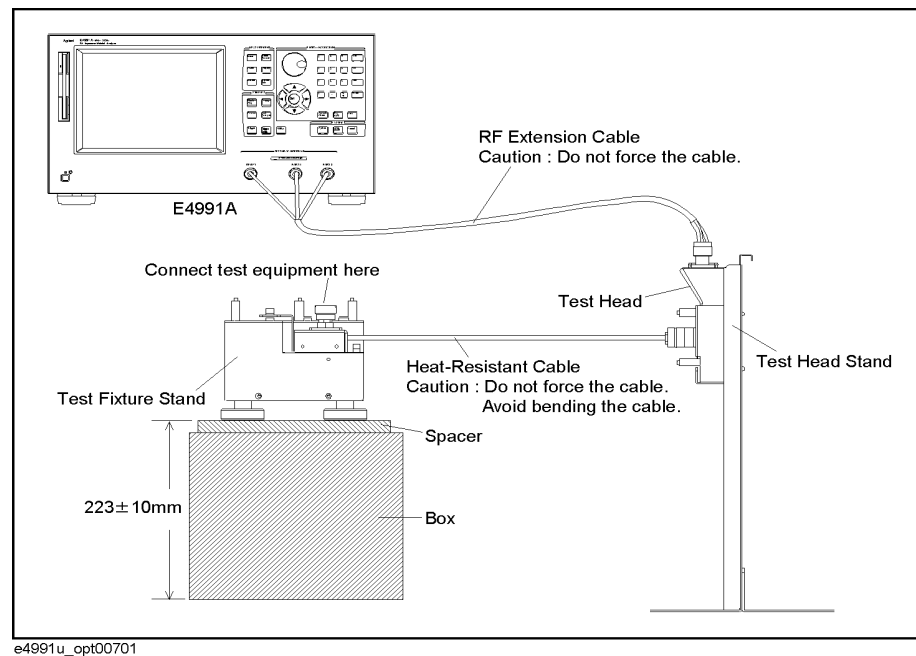

**Step 3.** Connect the test equipment to the 7-mm coaxial connector on the high temperature cable assembly in place of the DUT Port on the test head and, perform the following tests. See Figure 2-13 for the connector to which the test equipment (a power sensor, coaxial terminations or a 10 cm air-line) is connected.

- Power Level Accuracy Test
- Impedance Measurement Accuracy Test

**NOTE**

Record the test results using the performance test record for Option 007.

## Performance Test (for Option 010 Probe Station Connection Kit)

### Introduction

This section provides the information on the performance test setups and procedures for the E4991A Option 010 Probe Station Connection Kit. To execute the performance tests for the Option 010, both the test head for Option 010 and the E4991A are required.

### Required Test

The E4991A with Option 010 requires the following performance tests with the test setups for Option 010 to be done in addition to the performance tests for standard E4991A.

- Frequency Accuracy Test
- Power Level Accuracy Test
- Impedance Measurement Accuracy Test
- DC Bias Level Accuracy Test (Opt. 001)

### Specification

Except for the Power Level Accuracy, the E4991A Option 010 specifications are same as the standard E4991A specifications. Therefore, the Frequency Accuracy, Impedance Measurement Accuracy and DC Bias Level Accuracy of the E4991A with Option 010 are tested to the same test limits as the standard E4991A. The Power Level Accuracy specification of the Option 010 is different from that of the standard E4991A as follows:

Power Level Accuracy:	$\pm 2$ dB @ $\leq 1$ GHz (without Opt. 010)
	$\pm 5.5$ dB @ $\leq 1$ GHz (with Opt. 010)
	$\pm 3$ dB @ $> 1$ GHz (without Opt. 010)
	$\pm 7.6$ dB @ $> 1$ GHz (with Opt. 010)




## Test Procedure

- Step 1.** Perform all the necessary tests using the Option 010 test head. The each test procedure for Opt.010 test head is the same as that for the standard test head. Then, connect the equipment as shown in Figure 2-14.

Figure 2-14

Equipment Setting for Opt.010 Test Head

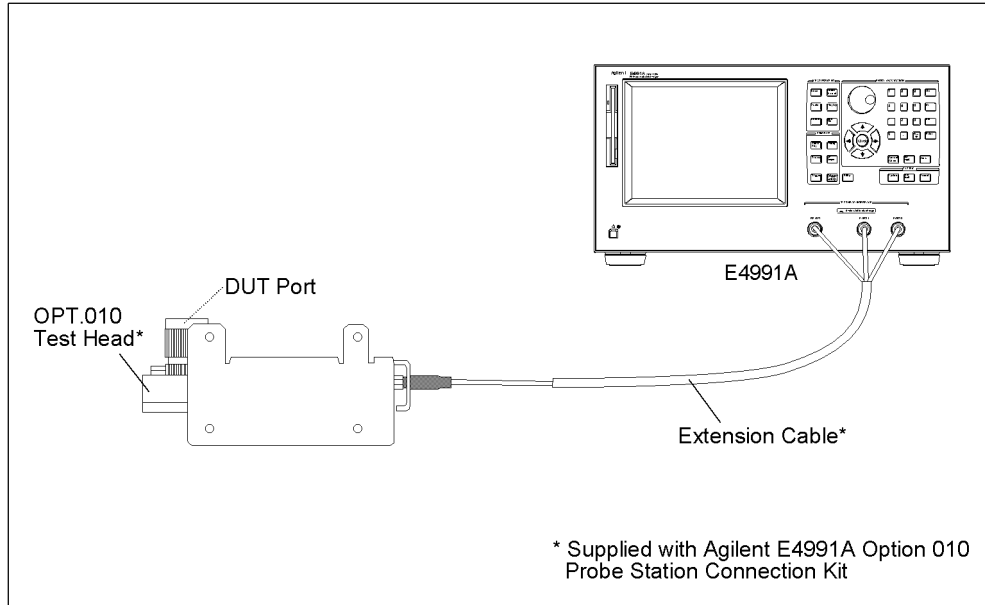

e4991ase4001

Performance Test and Function Test  
**Performance Test (for Option 010 Probe Station Connection Kit)**

---

## Function Test

### Introduction

This section provides the test procedures used to verify that the E4991A's performance characteristics are met. The function tests is recommended to be performed with the E4991A performance test.

### Warm Up Time

Allow the E4991A to warm up for at least 30 minutes before you execute any of the performance tests

### Ambient Conditions

Perform all function tests in ambient conditions of  $23\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ ,  $\leq 70\%$  RH.

## Low Loss Capacitor Check

This test verifies the Low Loss Capacitor included in the 16195B Calibration Kit which is furnished accessory for E4991A.

### Required Equipment

Description	Recommended Model
Network Analyzer	8753ES Opt.006, 8753ET Opt.006 or 8753E Opt.006
7mm Calibration KIT	85031B

### Procedure

1. Press **[Preset]** to preset the network analyzer.
2. Setup the network analyzer as follows;

Parameter Setting	Operation
Conversion: Z(reflection)	<b>[Meas]-CONVERSION-Z:refl</b>
Format: Liner	<b>[Format]-LIN MAG</b>
Source Power: 0 dBm	<b>[Power]-[0]-[×1]</b>
Start Frequency: 5 GHz	<b>[Start]-[5]-[G/n]</b>
Stop Frequency: 6 GHz	<b>[Stop]-[6]-[G/n]</b>
IF BW: ≤100 Hz	<b>[Avg]-IF BW-[1]-[0]-[0]-[×1]</b>
Number of points: 401 or larger	<b>[Sweep Setup]-NUMBER of POINTS-[4]-[0]-[1]-[×1]</b>

3. Perform the S11 1 port full calibration.
4. Connect the low loss capacitor to the port 1.
5. Make a single sweep measurement.
6. Record the minimum impedance value and its frequency to calculation sheet.
7. Record the test result to the function test record.

---

**NOTE**

If the minimum impedance or the frequency is out of limit, check the fail column.

## Calculating Sheet

### Performance Test

#### Power Level Accuracy Test

Power Level	Frequency	Multimeter Reading [a]	Test Result [-16.99+20×log <sub>10</sub> a]
-15 dBm	1 MHz	mV	dBm

#### Impedance Measurement Accuracy Test

##### 16190B Calibration Value

Standard: Open Termination

Frequency	Measurement Parameter	Calibration Value	Reference Designation
1 MHz	Y	μS	CV1
10 MHz	Y	μS	CV2
100 MHz	Y	μS	CV3
200 MHz	Y	μS	CV4
300 MHz	Y	μS	CV5
500 MHz	Y	μS	CV6
600 MHz	Y	μS	CV7
800 MHz	Y	μS	CV8
1.0 GHz	Y	μS	CV9
1.3 GHz	Y	μS	CV10
1.6 GHz	Y	μS	CV11
1.8 GHz	Y	μS	CV12
2.0 GHz	Y	μS	CV13
2.2 GHz	Y	μS	CV14
2.4 GHz	Y	μS	CV15
2.6 GHz	Y	μS	CV16
2.8 GHz	Y	μS	CV17
3.0 GHz	Y	μS	CV18

Performance Test and Function Test  
Calculating Sheet

Standard: Short Termination

Frequency	Measurement Parameter	Calibration Value	Reference Designation
1 MHz	$ Z $	m $\Omega$	CV19
10 MHz	$ Z $	m $\Omega$	CV20
100 MHz	$ Z $	m $\Omega$	CV21
200 MHz	$ Z $	m $\Omega$	CV22
300 MHz	$ Z $	m $\Omega$	CV23
500 MHz	$ Z $	m $\Omega$	CV24
600 MHz	$ Z $	m $\Omega$	CV25
800 MHz	$ Z $	m $\Omega$	CV26
1.0 GHz	$ Z $	m $\Omega$	CV27
1.3 GHz	$ Z $	m $\Omega$	CV28
1.6 GHz	$ Z $	m $\Omega$	CV29
1.8 GHz	$ Z $	m $\Omega$	CV30
2.0 GHz	$ Z $	m $\Omega$	CV31
2.2 GHz	$ Z $	m $\Omega$	CV32
2.4 GHz	$ Z $	m $\Omega$	CV33
2.6 GHz	$ Z $	m $\Omega$	CV34
2.8 GHz	$ Z $	m $\Omega$	CV35
3.0 GHz	$ Z $	m $\Omega$	CV36

Standard: 50  $\Omega$  Termination

Frequency	Measurement Parameter	Calibration Value	Reference Designation
1 MHz	Z	$\Omega$	CV37
	$\theta$	mrad	CV38
10 MHz	Z	$\Omega$	CV39
	$\theta$	mrad	CV40
100 MHz	Z	$\Omega$	CV41
	$\theta$	mrad	CV42
200 MHz	Z	$\Omega$	CV43
	$\theta$	mrad	CV44
300 MHz	Z	$\Omega$	CV45
	$\theta$	mrad	CV46
500 MHz	Z	$\Omega$	CV47
	$\theta$	mrad	CV48
600 MHz	Z	$\Omega$	CV49
	$\theta$	mrad	CV50
800 MHz	Z	$\Omega$	CV51
	$\theta$	mrad	CV52
1.0 GHz	Z	$\Omega$	CV53
	$\theta$	mrad	CV54
1.3 GHz	Z	$\Omega$	CV55
	$\theta$	mrad	CV56
1.6 GHz	Z	$\Omega$	CV57
	$\theta$	mrad	CV58
1.8 GHz	Z	$\Omega$	CV59
	$\theta$	mrad	CV60
2.0 GHz	Z	$\Omega$	CV61
	$\theta$	mrad	CV62
2.2 GHz	Z	$\Omega$	CV63
	$\theta$	mrad	CV64
2.4 GHz	Z	$\Omega$	CV65

Performance Test and Function Test  
Calculating Sheet

Frequency	Measurement Parameter	Calibration Value	Reference Designation
	$\theta$	mrاد	CV66
2.6 GHz	$ Z $	$\Omega$	CV67
	$\theta$	mrاد	CV68
2.8 GHz	$ Z $	$\Omega$	CV69
	$\theta$	mrاد	CV70
3.0 GHz	$ Z $	$\Omega$	CV71
	$\theta$	mrاد	CV72



Standard: Airline with Open Termination

Frequency	Measurement Parameter	Calibration Value	Reference Designation
1 MHz	Z	kΩ	CV73
	θ	mrاد	CV74
10 MHz	Z	Ω	CV75
	θ	mrاد	CV76
100 MHz	Z	Ω	CV77
	θ	mrاد	CV78
200 MHz	Z	Ω	CV79
	θ	mrاد	CV80
300 MHz	Z	Ω	CV81
	θ	mrاد	CV82
500 MHz	Z	Ω	CV83
	θ	mrاد	CV84
600 MHz	Z	Ω	CV85
	θ	mrاد	CV86
800 MHz	Z	Ω	CV87
	θ	mrاد	CV88
1.0 GHz	Z	Ω	CV89
	θ	mrاد	CV90
1.6 GHz	Z	Ω	CV91
	θ	mrاد	CV92
1.8 GHz	Z	Ω	CV93
	θ	mrاد	CV94
2.0 GHz	Z	Ω	CV95
	θ	mrاد	CV96
2.2 GHz	Z	Ω	CV97
	θ	mrاد	CV98
2.4 GHz	Z	Ω	CV99
	θ	mrاد	CV100
2.6 GHz	Z	Ω	CV101

Performance Test and Function Test  
Calculating Sheet

Frequency	Measurement Parameter	Calibration Value	Reference Designation
	$\theta$	mrاد	CV102
3.0 GHz	$ Z $	$\Omega$	CV103
	$\theta$	mrاد	CV104

Standard: Airline with Short Termination

Frequency	Measurement Parameter	Calibration Value	Reference Designation
1 MHz	$ Z $	$\Omega$	CV105
	$\theta$	mrad	CV106
10 MHz	$ Z $	$\Omega$	CV107
	$\theta$	mrad	CV108
100 MHz	$ Z $	$\Omega$	CV109
	$\theta$	mrad	CV110
200 MHz	$ Z $	$\Omega$	CV111
	$\theta$	mrad	CV112
300 MHz	$ Z $	$\Omega$	CV113
	$\theta$	mrad	CV114
500 MHz	$ Z $	$\Omega$	CV115
	$\theta$	mrad	CV116
600 MHz	$ Z $	$\Omega$	CV117
	$\theta$	mrad	CV118
1.0 GHz	$ Z $	$\Omega$	CV119
	$\theta$	mrad	CV120
1.3 GHz	$ Z $	$\Omega$	CV121
	$\theta$	mrad	CV122
1.6 GHz	$ Z $	$\Omega$	CV123
	$\theta$	mrad	CV124
1.8 GHz	$ Z $	$\Omega$	CV125
	$\theta$	mrad	CV126
2.0 GHz	$ Z $	$\Omega$	CV127
	$\theta$	mrad	CV128
2.4 GHz	$ Z $	$\Omega$	CV129
	$\theta$	mrad	CV130
2.6 GHz	$ Z $	$\Omega$	CV131
	$\theta$	mrad	CV132
2.8 GHz	$ Z $	$\Omega$	CV133

Performance Test and Function Test  
**Calculating Sheet**

Frequency	Measurement Parameter	Calibration Value	Reference Designation
	$\theta$	mrad	CV134

**Impedance Measurement Accuracy Test**

Standard: Open  
Averaging 8

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-3 dBm	Y	μS	a-CV1
10 MHz	-3 dBm	Y	μS	a-CV2
100 MHz	-3 dBm	Y	μS	a-CV3
200 MHz	-3 dBm	Y	μS	a-CV4
300 MHz	-3 dBm	Y	μS	a-CV5
500 MHz	-3 dBm	Y	μS	a-CV6
600 MHz	-3 dBm	Y	μS	a-CV7
800 MHz	-3 dBm	Y	μS	a-CV8
1.0 GHz	-3 dBm	Y	μS	a-CV9
1.3 GHz	-3 dBm	Y	μS	a-CV10
1.6 GHz	-3 dBm	Y	μS	a-CV11
1.8 GHz	-3 dBm	Y	μS	a-CV12
2.0 GHz	-3 dBm	Y	μS	a-CV13
2.2 GHz	-3 dBm	Y	μS	a-CV14
2.4 GHz	-3 dBm	Y	μS	a-CV15
2.6 GHz	-3 dBm	Y	μS	a-CV16
2.8 GHz	-3 dBm	Y	μS	a-CV17
3.0 GHz	-3 dBm	Y	μS	a-CV18

Performance Test and Function Test  
Calculating Sheet

Standard: Short  
Averaging 8

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-3 dBm	Z	mΩ	a-CV19
10 MHz	-3 dBm	Z	mΩ	a-CV20
100 MHz	-3 dBm	Z	mΩ	a-CV21
200 MHz	-3 dBm	Z	mΩ	a-CV22
300 MHz	-3 dBm	Z	mΩ	a-CV23
500 MHz	-3 dBm	Z	mΩ	a-CV24
600 MHz	-3 dBm	Z	mΩ	a-CV25
800 MHz	-3 dBm	Z	mΩ	a-CV26
1.0 GHz	-3 dBm	Z	mΩ	a-CV27
1.3 GHz	-3 dBm	Z	mΩ	a-CV28
1.6 GHz	-3 dBm	Z	mΩ	a-CV29
1.8 GHz	-3 dBm	Z	mΩ	a-CV30
2.0 GHz	-3 dBm	Z	mΩ	a-CV31
2.2 GHz	-3 dBm	Z	mΩ	a-CV32
2.4 GHz	-3 dBm	Z	mΩ	a-CV33
2.6 GHz	-3 dBm	Z	mΩ	a-CV34
2.8 GHz	-3 dBm	Z	mΩ	a-CV35
3.0 GHz	-3 dBm	Z	mΩ	a-CV36

Standard: 50  $\Omega$   
Averaging 8

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-3 dBm	Z	$\Omega$	a-CV37
		$\theta$	mrad	a-CV38
10 MHz	-3 dBm	Z	$\Omega$	a-CV39
		$\theta$	mrad	a-CV40
100 MHz	-3 dBm	Z	$\Omega$	a-CV41
		$\theta$	mrad	a-CV42
200 MHz	-3 dBm	Z	$\Omega$	a-CV43
		$\theta$	mrad	a-CV44
300 MHz	-3 dBm	Z	$\Omega$	a-CV45
		$\theta$	mrad	a-CV46
500 MHz	-3 dBm	Z	$\Omega$	a-CV47
		$\theta$	mrad	a-CV48
600 MHz	-3 dBm	Z	$\Omega$	a-CV49
		$\theta$	mrad	a-CV50
800 MHz	-3 dBm	Z	$\Omega$	a-CV51
		$\theta$	mrad	a-CV52
1.0 GHz	-3 dBm	Z	$\Omega$	a-CV53
		$\theta$	mrad	a-CV54
1.3 GHz	-3 dBm	Z	$\Omega$	a-CV55
		$\theta$	mrad	a-CV56
1.6 GHz	-3 dBm	Z	$\Omega$	a-CV57
		$\theta$	mrad	a-CV58
1.8 GHz	-3 dBm	Z	$\Omega$	a-CV59
		$\theta$	mrad	a-CV60
2.0 GHz	-3 dBm	Z	$\Omega$	a-CV61
		$\theta$	mrad	a-CV62
2.2 GHz	-3 dBm	Z	$\Omega$	a-CV63
		$\theta$	mrad	a-CV64

2. Performance Test and Function Test

Performance Test and Function Test  
**Calculating Sheet**

<b>Freq.</b>	<b>Power Level</b>	<b>Measurement Parameter</b>	<b>E4991A Reading [a]</b>	<b>Test Result Equation</b>
2.4 GHz	-3 dBm	Z	$\Omega$	a-CV65
		$\theta$	mrad	a-CV66
2.6 GHz	-3 dBm	Z	$\Omega$	a-CV67
		$\theta$	mrad	a-CV68
2.8 GHz	-3 dBm	Z	$\Omega$	a-CV69
		$\theta$	mrad	a-CV70
3.0 GHz	-3 dBm	Z	$\Omega$	a-CV71
		$\theta$	mrad	a-CV72



Standard: Airline with Open  
Averaging 8

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-3 dBm	Z	kΩ	a-CV73
		θ	mrad	a-CV74
10 MHz	-3 dBm	Z	Ω	a-CV75
		θ	mrad	a-CV76
100 MHz	-3 dBm	Z	Ω	a-CV77
		θ	mrad	a-CV78
200 MHz	-3 dBm	Z	Ω	a-CV79
		θ	mrad	a-CV80
300 MHz	-3 dBm	Z	Ω	a-CV81
		θ	mrad	a-CV82
500 MHz	-3 dBm	Z	Ω	a-CV83
		θ	mrad	a-CV84
600 MHz	-3 dBm	Z	Ω	a-CV85
		θ	mrad	a-CV86
800 MHz	-3 dBm	Z	Ω	a-CV87
		θ	mrad	a-CV88
1.0 GHz	-3 dBm	Z	Ω	a-CV89
		θ	mrad	a-CV90
1.6 GHz	-3 dBm	Z	Ω	a-CV91
		θ	mrad	a-CV92
1.8 GHz	-3 dBm	Z	Ω	a-CV93
		θ	mrad	a-CV94
2.0 GHz	-3 dBm	Z	Ω	a-CV95
		θ	mrad	a-CV96
2.2 GHz	-3 dBm	Z	Ω	a-CV97
		θ	mrad	a-CV98
2.4 GHz	-3 dBm	Z	Ω	a-CV99
		θ	mrad	a-CV100

Performance Test and Function Test  
Calculating Sheet

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
2.6 GHz	-3 dBm	Z	$\Omega$	a-CV101
		$\theta$	mrad	a-CV102
3.0 GHz	-3 dBm	Z	$\Omega$	a-CV103
		$\theta$	mrad	a-CV104

Standard: Airline with Open  
Averaging 1

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-20 dBm	Z	kΩ	a-CV73
		θ	mrad	a-CV74
10 MHz	-20 dBm	Z	Ω	a-CV75
		θ	mrad	a-CV76
100 MHz	-20 dBm	Z	Ω	a-CV77
		θ	mrad	a-CV78
200 MHz	-20 dBm	Z	Ω	a-CV79
		θ	mrad	a-CV80
300 MHz	-20 dBm	Z	Ω	a-CV81
		θ	mrad	a-CV82
500 MHz	-20 dBm	Z	Ω	a-CV83
		θ	mrad	a-CV84
600 MHz	-20 dBm	Z	Ω	a-CV85
		θ	mrad	a-CV86
800 MHz	-20 dBm	Z	Ω	a-CV87
		θ	mrad	a-CV88
1.0 GHz	-20 dBm	Z	Ω	a-CV89
		θ	mrad	a-CV90
1.6 GHz	-20 dBm	Z	Ω	a-CV91
		θ	mrad	a-CV92
1.8 GHz	-20 dBm	Z	Ω	a-CV93
		θ	mrad	a-CV94
2.0 GHz	-20 dBm	Z	Ω	a-CV95
		θ	mrad	a-CV96
2.2 GHz	-20 dBm	Z	Ω	a-CV97
		θ	mrad	a-CV98
2.4 GHz	-20 dBm	Z	Ω	a-CV99
		θ	mrad	a-CV100

Performance Test and Function Test  
Calculating Sheet

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
2.6 GHz	-20 dBm	Z	$\Omega$	a-CV101
		$\theta$	mrad	a-CV102
3.0 GHz	-20 dBm	Z	$\Omega$	a-CV103
		$\theta$	mrad	a-CV104

Standard: Airline with Short  
Averaging 8

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-3 dBm	Z	$\Omega$	a-CV105
		$\theta$	mrad	a-CV106
10 MHz	-3 dBm	Z	$\Omega$	a-CV107
		$\theta$	mrad	a-CV108
100 MHz	-3 dBm	Z	$\Omega$	a-CV109
		$\theta$	mrad	a-CV110
200 MHz	-3 dBm	Z	$\Omega$	a-CV111
		$\theta$	mrad	a-CV112
300 MHz	-3 dBm	Z	$\Omega$	a-CV113
		$\theta$	mrad	a-CV114
500 MHz	-3 dBm	Z	$\Omega$	a-CV115
		$\theta$	mrad	a-CV116
600 MHz	-3 dBm	Z	$\Omega$	a-CV117
		$\theta$	mrad	a-CV118
1.0 GHz	-3 dBm	Z	$\Omega$	a-CV119
		$\theta$	mrad	a-CV120
1.3 GHz	-3 dBm	Z	$\Omega$	a-CV121
		$\theta$	mrad	a-CV122
1.6 GHz	-3 dBm	Z	$\Omega$	a-CV123
		$\theta$	mrad	a-CV124
1.8 GHz	-3 dBm	Z	$\Omega$	a-CV125
		$\theta$	mrad	a-CV126
2.0 GHz	-3 dBm	Z	$\Omega$	a-CV127
		$\theta$	mrad	a-CV128
2.4 GHz	-3 dBm	Z	$\Omega$	a-CV129
		$\theta$	mrad	a-CV130
2.6 GHz	-3 dBm	Z	$\Omega$	a-CV131
		$\theta$	mrad	a-CV132

Performance Test and Function Test  
Calculating Sheet

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
2.8 GHz	-3 dBm	Z	$\Omega$	a-CV133
		$\theta$	mrad	a-CV134

Standard: Airline with Short  
Averaging 1

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
1 MHz	-40 dBm	Z	$\Omega$	a-CV105
		$\theta$	mrad	a-CV106
10 MHz	-40 dBm	Z	$\Omega$	a-CV107
		$\theta$	mrad	a-CV108
100 MHz	-40 dBm	Z	$\Omega$	a-CV109
		$\theta$	mrad	a-CV110
200 MHz	-40 dBm	Z	$\Omega$	a-CV111
		$\theta$	mrad	a-CV112
300 MHz	-40 dBm	Z	$\Omega$	a-CV113
		$\theta$	mrad	a-CV114
500 MHz	-40 dBm	Z	$\Omega$	a-CV115
		$\theta$	mrad	a-CV116
600 MHz	-40 dBm	Z	$\Omega$	a-CV117
		$\theta$	mrad	a-CV118
1.0 GHz	-40 dBm	Z	$\Omega$	a-CV119
		$\theta$	mrad	a-CV120
1.3 GHz	-40 dBm	Z	$\Omega$	a-CV121
		$\theta$	mrad	a-CV122
1.6 GHz	-40 dBm	Z	$\Omega$	a-CV123
		$\theta$	mrad	a-CV124
1.8 GHz	-40 dBm	Z	$\Omega$	a-CV125
		$\theta$	mrad	a-CV126
2.0 GHz	-40 dBm	Z	$\Omega$	a-CV127
		$\theta$	mrad	a-CV128
2.4 GHz	-40 dBm	Z	$\Omega$	a-CV129
		$\theta$	mrad	a-CV130
2.6 GHz	-40 dBm	Z	$\Omega$	a-CV131
		$\theta$	mrad	a-CV132

Performance Test and Function Test  
Calculating Sheet

Freq.	Power Level	Measurement Parameter	E4991A Reading [a]	Test Result Equation
2.8 GHz	-40 dBm	Z	$\Omega$	a-CV133
		$\theta$	mrad	a-CV134



## Function Test

### Low Loss Capacitor Test

Description	Lower Limit	Reading	Upper Limit
Minimum Impedance	0 $\Omega$	m $\Omega$	100 m $\Omega$
Frequency	5.2 GHz	GHz	5.8 GHz

## Test Record

### Performance Test Record

Agilent Technologies E4991A RF Impedance/Material Analyzer

Mainframe: Serial No.		Test Date	
Test Head: Serial No.		Temperature	°C
Calibration Kit Serial No.		Humidity	%R.H.
		Tested by	

#### Frequency Accuracy Test

Without Option 1D5

Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	±10.00 Hz	Hz	±0.491 Hz	20.4
3 GHz	±30.00 kHz	kHz	±0.369 kHz	81.5

With Option 1D5

Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	±1.00 Hz	Hz	±0.003 Hz	3931
3 GHz	±3.00 kHz	kHz	±0.008 kHz	3859

#### OSC Level Accuracy Test

Power Level	Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 dBm	1 GHz	±2.00 dB	dB	±0.22 dB	9.44
0 dBm	3 GHz	±3.00 dB	dB	±0.35 dB	8.72
-7.9 dBm	3 GHz	±3.00 dB	dB	±0.35 dB	8.62
-10 dBm	300 MHz	±2.00 dB	dB	±0.26 dB	7.88
-15 dBm	1 MHz	±2.00 dB	dB	±0.22 dB	9.4
-20 dBm	50 MHz	±2.00 dB	dB	±0.24 dB	8.57
-25 dBm	1 GHz	±2.00 dB	dB	±0.24 dB	8.57

Power Level	Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
-30 dBm	10 MHz	$\pm 2.00$ dB	dB	$\pm 0.22$ dB	9.38
-35 dBm	2 GHz	$\pm 3.00$ dB	dB	$\pm 0.24$ dB	12.69
-40 dBm	100 MHz	$\pm 2.00$ dB	dB	$\pm 0.27$ dB	7.63

Performance Test and Function Test  
**Test Record**

**Impedance Measurement Accuracy Test**

Standard: Open  
 Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Y	±5.13 μS	μS	±0.61 μS	8.42
10 MHz	-3 dBm	Y	±6.26 μS	μS	±0.46 μS	13.61
100 MHz	-3 dBm	Y	±17.6 μS	μS	±3.3 μS	5.45
200 MHz	-3 dBm	Y	±31.4 μS	μS	±6.5 μS	4.85
300 MHz	-3 dBm	Y	±44.7 μS	μS	±9.8 μS	4.58
500 MHz	-3 dBm	Y	±72 μS	μS	±17 μS	4.39
600 MHz	-3 dBm	Y	±95 μS	μS	±21 μS	4.62
800 MHz	-3 dBm	Y	±127 μS	μS	±28 μS	4.63
1.0 GHz	-3 dBm	Y	±161 μS	μS	±35 μS	4.61
1.3 GHz	-3 dBm	Y	±284 μS	μS	±46 μS	6.24
1.6 GHz	-3 dBm	Y	±362 μS	μS	±61 μS	6.03
1.8 GHz	-3 dBm	Y	±420 μS	μS	±69 μS	6.11
2.0 GHz	-3 dBm	Y	±689 μS	μS	±126 μS	5.49
2.2 GHz	-3 dBm	Y	±781 μS	μS	±140 μS	5.60
2.4 GHz	-3 dBm	Y	±881 μS	μS	±155 μS	5.69
2.6 GHz	-3 dBm	Y	±991 μS	μS	±171 μS	5.82
2.8 GHz	-3 dBm	Y	±1111 μS	μS	±186 μS	5.98
3.0 GHz	-3 dBm	Y	±1244 μS	μS	±203 μS	6.14

Standard: Short  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±13.5 mΩ	mΩ	±2.6 mΩ	5.25
10 MHz	-3 dBm	Z	±18.0 mΩ	mΩ	±3.6 mΩ	5.05
100 MHz	-3 dBm	Z	±63 mΩ	mΩ	±15 mΩ	4.49
200 MHz	-3 dBm	Z	±113 mΩ	mΩ	±26 mΩ	4.51
300 MHz	-3 dBm	Z	±163 mΩ	mΩ	±31 mΩ	5.43
500 MHz	-3 dBm	Z	±263 mΩ	mΩ	±51 mΩ	5.25
600 MHz	-3 dBm	Z	±313 mΩ	mΩ	±51 mΩ	6.24
800 MHz	-3 dBm	Z	±413 mΩ	mΩ	±51 mΩ	8.23
1.0 GHz	-3 dBm	Z	±513 mΩ	mΩ	±51 mΩ	10.23
1.3 GHz	-3 dBm	Z	±663 mΩ	mΩ	±101 mΩ	6.63
1.6 GHz	-3 dBm	Z	±813 mΩ	mΩ	±101 mΩ	8.13
1.8 GHz	-3 dBm	Z	±913 mΩ	mΩ	±101 mΩ	9.12
2.0 GHz	-3 dBm	Z	±1013 mΩ	mΩ	±201 mΩ	5.06
2.2 GHz	-3 dBm	Z	±1113 mΩ	mΩ	±201 mΩ	5.56
2.4 GHz	-3 dBm	Z	±1213 mΩ	mΩ	±201 mΩ	6.06
2.6 GHz	-3 dBm	Z	±1313 mΩ	mΩ	±201 mΩ	6.56
2.8 GHz	-3 dBm	Z	±1413 mΩ	mΩ	±201 mΩ	7.06
3.0 GHz	-3 dBm	Z	±1513 mΩ	mΩ	±201 mΩ	7.55

Performance Test and Function Test  
Test Record

Standard: 50  $\Omega$   
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	$\pm 0.35 \Omega$	$\Omega$	$\pm 0.09 \Omega$	4.17
		$\theta$	$\pm 7.0 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	4.20
10 MHz	-3 dBm	Z	$\pm 0.36 \Omega$	$\Omega$	$\pm 0.09 \Omega$	4.26
		$\theta$	$\pm 7.2 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	4.28
100 MHz	-3 dBm	Z	$\pm 0.43 \Omega$	$\Omega$	$\pm 0.09 \Omega$	5.09
		$\theta$	$\pm 8.5 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	5.10
200 MHz	-3 dBm	Z	$\pm 0.58 \Omega$	$\Omega$	$\pm 0.11 \Omega$	5.30
		$\theta$	$\pm 11.5 \text{ mrad}$	mrad	$\pm 2.2 \text{ mrad}$	5.29
300 MHz	-3 dBm	Z	$\pm 0.65 \Omega$	$\Omega$	$\pm 0.14 \Omega$	4.92
		$\theta$	$\pm 13.0 \text{ mrad}$	mrad	$\pm 2.7 \text{ mrad}$	4.93
500 MHz	-3 dBm	Z	$\pm 0.80 \Omega$	$\Omega$	$\pm 0.19 \Omega$	4.44
		$\theta$	$\pm 16.0 \text{ mrad}$	mrad	$\pm 3.7 \text{ mrad}$	4.44
600 MHz	-3 dBm	Z	$\pm 1.08 \Omega$	$\Omega$	$\pm 0.23 \Omega$	4.70
		$\theta$	$\pm 21.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	4.69
800 MHz	-3 dBm	Z	$\pm 1.23 \Omega$	$\Omega$	$\pm 0.23 \Omega$	5.37
		$\theta$	$\pm 24.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	5.36
1.0 GHz	-3 dBm	Z	$\pm 1.38 \Omega$	$\Omega$	$\pm 0.23 \Omega$	5.99
		$\theta$	$\pm 27.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	6.00
1.3 GHz	-3 dBm	Z	$\pm 2.25 \Omega$	$\Omega$	$\pm 0.24 \Omega$	9.60
		$\theta$	$\pm 45.0 \text{ mrad}$	mrad	$\pm 4.7 \text{ mrad}$	9.65
1.6 GHz	-3 dBm	Z	$\pm 2.48 \Omega$	$\Omega$	$\pm 0.24 \Omega$	10.43
		$\theta$	$\pm 49.5 \text{ mrad}$	mrad	$\pm 4.8 \text{ mrad}$	10.47
1.8 GHz	-3 dBm	Z	$\pm 2.63 \Omega$	$\Omega$	$\pm 0.24 \Omega$	11.32
		$\theta$	$\pm 52.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	11.49
2.0 GHz	-3 dBm	Z	$\pm 4.02 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.00
		$\theta$	$\pm 80.5 \text{ mrad}$	mrad	$\pm 10.1 \text{ mrad}$	8.01
2.2 GHz	-3 dBm	Z	$\pm 4.17 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.20
		$\theta$	$\pm 83.5 \text{ mrad}$	mrad	$\pm 10.2 \text{ mrad}$	8.21

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.4 GHz	-3 dBm	Z	±4.32 Ω	Ω	±0.51 Ω	8.58
		θ	±86.5 mrad	mrاد	±10.1 mrad	8.59
2.6 GHz	-3 dBm	Z	±4.47 Ω	Ω	±0.51 Ω	8.84
		θ	±89.5 mrad	mrاد	±10.2 mrad	8.84
2.8 GHz	-3 dBm	Z	±4.62 Ω	Ω	±0.53 Ω	8.79
		θ	±92.5 mrad	mrاد	±10.2 mrad	9.08
3.0 GHz	-3 dBm	Z	±4.77 Ω	Ω	±0.53 Ω	9.07
		θ	±95.5 mrad	mrاد	±10.9 mrad	8.83

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Open  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±2.6 kΩ	kΩ	±254 Ω	10.13
		θ	±117.8 mrad	mrاد	±17.6 mrad	6.71
10 MHz	-3 dBm	Z	±42.8 Ω	Ω	±4.3 Ω	10.03
		θ	±19.6 mrad	mrاد	±2.0 mrad	9.94
100 MHz	-3 dBm	Z	±2.15 Ω	Ω	±0.42 Ω	5.22
		θ	±10.0 mrad	mrاد	±2.0 mrad	5.27
200 MHz	-3 dBm	Z	±1.18 Ω	Ω	±0.22 Ω	5.47
		θ	±11.7 mrad	mrاد	±2.2 mrad	5.50
300 MHz	-3 dBm	Z	±0.78 Ω	Ω	±0.16 Ω	4.96
		θ	±12.8 mrad	mrاد	±2.6 mrad	5.01
500 MHz	-3 dBm	Z	±0.47 Ω	Ω	±0.09 Ω	5.61
		θ	±20.9 mrad	mrاد	±3.7 mrad	5.67
600 MHz	-3 dBm	Z	±0.44 Ω	Ω	±0.09 Ω	5.12
		θ	±44.5 mrad	mrاد	±8.7 mrad	5.17
800 MHz	-3 dBm	Z	±0.59 Ω	Ω	±0.12 Ω	5.02
		θ	±43.5 mrad	mrاد	±8.7 mrad	5.03
1.0 GHz	-3 dBm	Z	±1.25 Ω	Ω	±0.23 Ω	5.50
		θ	±28.2 mrad	mrاد	±5.2 mrad	5.51
1.6 GHz	-3 dBm	Z	±4.17 Ω	Ω	±0.72 Ω	5.83
		θ	±48.6 mrad	mrاد	±8.4 mrad	5.86
1.8 GHz	-3 dBm	Z	±1.95 Ω	Ω	±0.29 Ω	6.88
		θ	±58.7 mrad	mrاد	±8.5 mrad	6.92
2.0 GHz	-3 dBm	Z	±1.34 Ω	Ω	±0.10 Ω	14.69
		θ	±211.6 mrad	mrاد	±14.3 mrad	14.81
2.2 GHz	-3 dBm	Z	±2.05 Ω	Ω	±0.23 Ω	9.24
		θ	±118.2 mrad	mrاد	±12.8 mrad	9.27
2.4 GHz	-3 dBm	Z	±4.37 Ω	Ω	±0.64 Ω	6.92
		θ	±86.4 mrad	mrاد	±12.5 mrad	6.93



Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-3 dBm	Z	±14.8 Ω	Ω	±2.2 Ω	6.88
		θ	±98.6 mrad	mrاد	±14.4 mrad	6.89
3.0 GHz	-3 dBm	Z	±6.9 Ω	Ω	±1.1 Ω	6.71
		θ	±93.0 mrad	mrاد	±13.8 mrad	6.75

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Open  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-20 dBm	Z	±14.5 kΩ	kΩ	±1771 Ω	8.18
		θ	±663.4 mrad	mrاد	±50.6 mrad	13.12
10 MHz	-20 dBm	Z	±161.8 Ω	Ω	±7.7 Ω	21.20
		θ	±74.2 mrad	mrاد	±5.3 mrad	14.20
100 MHz	-20 dBm	Z	±3.33 Ω	Ω	±0.42 Ω	8.05
		θ	±15.5 mrad	mrاد	±2.1 mrad	7.50
200 MHz	-20 dBm	Z	±1.47 Ω	Ω	±0.22 Ω	6.76
		θ	±14.6 mrad	mrاد	±2.2 mrad	6.86
300 MHz	-20 dBm	Z	±0.91 Ω	Ω	±0.16 Ω	5.79
		θ	±14.9 mrad	mrاد	±2.6 mrad	5.80
500 MHz	-20 dBm	Z	±0.52 Ω	Ω	±0.09 Ω	6.19
		θ	±23.1 mrad	mrاد	±3.7 mrad	6.26
600 MHz	-20 dBm	Z	±0.48 Ω	Ω	±0.09 Ω	5.58
		θ	±48.5 mrad	mrاد	±8.7 mrad	5.63
800 MHz	-20 dBm	Z	±0.63 Ω	Ω	±0.12 Ω	5.36
		θ	±46.6 mrad	mrاد	±8.7 mrad	5.37
1.0 GHz	-20 dBm	Z	±1.34 Ω	Ω	±0.23 Ω	5.89
		θ	±30.2 mrad	mrاد	±5.2 mrad	5.89
1.6 GHz	-20 dBm	Z	±4.39 Ω	Ω	±0.72 Ω	6.14
		θ	±51.2 mrad	mrاد	±8.4 mrad	6.16
1.8 GHz	-20 dBm	Z	±2.01 Ω	Ω	±0.29 Ω	7.12
		θ	±60.6 mrad	mrاد	±8.5 mrad	7.15
2.0 GHz	-20 dBm	Z	±1.38 Ω	Ω	±0.10 Ω	14.99
		θ	±217.6 mrad	mrاد	±14.4 mrad	15.19
2.2 GHz	-20 dBm	Z	±2.09 Ω	Ω	±0.23 Ω	9.41
		θ	±120.7 mrad	mrاد	±12.8 mrad	9.46
2.4 GHz	-20 dBm	Z	±4.47 Ω	Ω	±0.64 Ω	7.08
		θ	±88.4 mrad	mrاد	±12.5 mrad	7.09

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-20 dBm	Z	±15.4 Ω	Ω	±2.2 Ω	7.16
		θ	±102.6 mrad	mrad	±14.4 mrad	7.16
3.0 GHz	-20 dBm	Z	±7.1 Ω	Ω	±1.1 Ω	6.88
		θ	±95.4 mrad	mrad	±13.9 mrad	6.91

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Short  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	$\pm 0.010 \Omega$	$\Omega$	$\pm 0.002 \Omega$	7.50
		$\theta$	$\pm 125.4 \text{ mrad}$	mrad	$\pm 19.4 \text{ mrad}$	6.47
10 MHz	-3 dBm	Z	$\pm 0.020 \Omega$	$\Omega$	$\pm 0.005 \Omega$	5.63
		$\theta$	$\pm 23.3 \text{ mrad}$	mrad	$\pm 4.2 \text{ mrad}$	5.60
100 MHz	-3 dBm	Z	$\pm 0.13 \Omega$	$\Omega$	$\pm 0.03 \Omega$	5.13
		$\theta$	$\pm 12.5 \text{ mrad}$	mrad	$\pm 2.5 \text{ mrad}$	5.13
200 MHz	-3 dBm	Z	$\pm 0.30 \Omega$	$\Omega$	$\pm 0.07 \Omega$	4.63
		$\theta$	$\pm 13.6 \text{ mrad}$	mrad	$\pm 3.0 \text{ mrad}$	4.62
300 MHz	-3 dBm	Z	$\pm 0.50 \Omega$	$\Omega$	$\pm 0.11 \Omega$	4.67
		$\theta$	$\pm 13.7 \text{ mrad}$	mrad	$\pm 3.0 \text{ mrad}$	4.68
500 MHz	-3 dBm	Z	$\pm 1.38 \Omega$	$\Omega$	$\pm 0.31 \Omega$	4.57
		$\theta$	$\pm 15.8 \text{ mrad}$	mrad	$\pm 3.5 \text{ mrad}$	4.57
600 MHz	-3 dBm	Z	$\pm 3.75 \Omega$	$\Omega$	$\pm 0.77 \Omega$	4.92
		$\theta$	$\pm 24.1 \text{ mrad}$	mrad	$\pm 5.0 \text{ mrad}$	4.91
1.0 GHz	-3 dBm	Z	$\pm 2.32 \Omega$	$\Omega$	$\pm 0.45 \Omega$	5.20
		$\theta$	$\pm 27.0 \text{ mrad}$	mrad	$\pm 5.2 \text{ mrad}$	5.22
1.3 GHz	-3 dBm	Z	$\pm 1.28 \Omega$	$\Omega$	$\pm 0.19 \Omega$	6.98
		$\theta$	$\pm 58.0 \text{ mrad}$	mrad	$\pm 8.3 \text{ mrad}$	7.01
1.6 GHz	-3 dBm	Z	$\pm 1.10 \Omega$	$\Omega$	$\pm 0.12 \Omega$	9.42
		$\theta$	$\pm 101.6 \text{ mrad}$	mrad	$\pm 10.8 \text{ mrad}$	9.43
1.8 GHz	-3 dBm	Z	$\pm 2.08 \Omega$	$\Omega$	$\pm 0.31 \Omega$	6.81
		$\theta$	$\pm 56.7 \text{ mrad}$	mrad	$\pm 8.3 \text{ mrad}$	6.84
2.0 GHz	-3 dBm	Z	$\pm 6.97 \Omega$	$\Omega$	$\pm 0.91 \Omega$	7.74
		$\theta$	$\pm 79.5 \text{ mrad}$	mrad	$\pm 10.4 \text{ mrad}$	7.76
2.4 GHz	-3 dBm	Z	$\pm 14.38 \Omega$	$\Omega$	$\pm 2.06 \Omega$	7.01
		$\theta$	$\pm 95.1 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	7.02
2.6 GHz	-3 dBm	Z	$\pm 4.86 \Omega$	$\Omega$	$\pm 0.74 \Omega$	6.64
		$\theta$	$\pm 88.5 \text{ mrad}$	mrad	$\pm 13.4 \text{ mrad}$	6.64

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-3 dBm	Z	$\pm 2.65 \Omega$	$\Omega$	$\pm 0.30 \Omega$	8.87
		$\theta$	$\pm 120.6 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	8.90

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Short  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-40 dBm	Z	±0.100 Ω	Ω	±0.010 Ω	10.74
		θ	±892.0 mrad	mrad	±68.1 mrad	8.87
10 MHz	-40 dBm	Z	±0.110 Ω	Ω	±0.011 Ω	10.84
		θ	±104.2 mrad	mrad	±8.5 mrad	8.87
100 MHz	-40 dBm	Z	±0.23 Ω	Ω	±0.03 Ω	9.41
		θ	±21.2 mrad	mrad	±2.9 mrad	8.87
200 MHz	-40 dBm	Z	±0.42 Ω	Ω	±0.07 Ω	7.69
		θ	±18.7 mrad	mrad	±3.0 mrad	8.87
300 MHz	-40 dBm	Z	±0.66 Ω	Ω	±0.12 Ω	7.35
		θ	±18.1 mrad	mrad	±3.0 mrad	8.87
500 MHz	-40 dBm	Z	±1.88 Ω	Ω	±0.31 Ω	7.31
		θ	±21.6 mrad	mrad	±3.6 mrad	8.87
600 MHz	-40 dBm	Z	±5.17 Ω	Ω	±0.80 Ω	6.52
		θ	±33.2 mrad	mrad	±5.1 mrad	8.87
1.0 GHz	-40 dBm	Z	±2.82 Ω	Ω	±0.45 Ω	6.29
		θ	±32.7 mrad	mrad	±5.2 mrad	8.87
1.3 GHz	-40 dBm	Z	±1.39 Ω	Ω	±0.19 Ω	7.61
		θ	±63.2 mrad	mrad	±8.3 mrad	8.87
1.6 GHz	-40 dBm	Z	±1.20 Ω	Ω	±0.12 Ω	10.07
		θ	±110.2 mrad	mrad	±11.0 mrad	8.87
1.8 GHz	-40 dBm	Z	±2.24 Ω	Ω	±0.31 Ω	7.32
		θ	±61.1 mrad	mrad	±8.4 mrad	8.87
2.0 GHz	-40 dBm	Z	±7.48 Ω	Ω	±0.92 Ω	8.20
		θ	±85.3 mrad	mrad	±10.4 mrad	8.87
2.4 GHz	-40 dBm	Z	±15.72 Ω	Ω	±2.06 Ω	7.65
		θ	±104.0 mrad	mrad	±13.6 mrad	8.87
2.6 GHz	-40 dBm	Z	±5.12 Ω	Ω	±0.74 Ω	6.98
		θ	±93.1 mrad	mrad	±13.4 mrad	8.87

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-40 dBm	Z	$\pm 2.76 \Omega$	$\Omega$	$\pm 0.30 \Omega$	9.23
		$\theta$	$\pm 125.8 \text{ mrad}$	mrad	$\pm 13.7 \text{ mrad}$	8.87

Performance Test and Function Test  
**Test Record**

**DC Bias Test (Option 001)**

Bias Level	Test Limit	Test Result	Measurement Uncertainty	TAR
-40 V	±46.00 mV	mV	±0.99 mV	46.50
-4 V	±10.0 mV	mV	±57.3 µV	174.60
0 V	± 6.00 mV	mV	±27.8 µV	216.90
4 V	±10.0 mV	mV	±48.6 µV	205.80
40 V	±46.00 mV	mV	±0.98 mV	47.39
-50 mA	±120.0 µA	µA	±9.4 µA	12.86
-4 mA	±28.0 µA	µA	±1.2 µA	24.11
-100 µA	±20.2 µA	µA	±1.0 µA	21.07
100 µA	±20.2 µA	µA	±1.2 µA	17.44
4 mA	±28.0 µA	µA	±1.2 µA	24.48
50 mA	±120.0 µA	µA	±9.1 µA	13.28



**Performance Test Record (Option 007)**

**OSC Level Accuracy Test (Option 007)**

Power Level	Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 dBm	1 GHz	-4.00/+2.00 dB	dB	±0.22 dB	9.44
0 dBm	3 GHz	-6.00/+3.00 dB	dB	±0.35 dB	8.72
-7.9 dBm	3 GHz	-6.00/+3.00 dB	dB	±0.35 dB	8.62
-10 dBm	300 MHz	-4.00/+2.00 dB	dB	±0.26 dB	7.88
-15 dBm	1 MHz	-4.00/+2.00 dB	dB	±0.22 dB	9.40
-20 dBm	50 MHz	-4.00/+2.00 dB	dB	±0.24 dB	8.57
-25 dBm	1 GHz	-4.00/+2.00 dB	dB	±0.24 dB	8.57
-30 dBm	10 MHz	-4.00/+2.00 dB	dB	±0.22 dB	9.38
-35 dBm	2 GHz	-6.00/+3.00 dB	dB	±0.24 dB	12.69
-40 dBm	100 MHz	-4.00/+2.00 dB	dB	±0.27 dB	7.63

Performance Test and Function Test  
**Test Record**

**Impedance Measurement Accuracy Test (Option 007)**

Standard: Open  
 Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Y	±12.13 µS	µS	±0.38 µS	32.55
10 MHz	-3 dBm	Y	±13.31 µS	µS	±0.80 µS	16.85
100 MHz	-3 dBm	Y	±25.2 µS	µS	±3.4 µS	7.57
200 MHz	-3 dBm	Y	±40.0 µS	µS	±6.6 µS	6.13
300 MHz	-3 dBm	Y	±54.1 µS	µS	±9.8 µS	5.53
500 MHz	-3 dBm	Y	±82 µS	µS	±17 µS	5.09
600 MHz	-3 dBm	Y	±102 µS	µS	±21 µS	4.94
800 MHz	-3 dBm	Y	±134 µS	µS	±28 µS	4.90
1.0 GHz	-3 dBm	Y	±168 µS	µS	±35 µS	4.81
1.3 GHz	-3 dBm	Y	±291 µS	µS	±46 µS	6.40
1.6 GHz	-3 dBm	Y	±369 µS	µS	±61 µS	6.15
1.8 GHz	-3 dBm	Y	±427 µS	µS	±70 µS	6.16
2.0 GHz	-3 dBm	Y	±697 µS	µS	±126 µS	5.55
2.2 GHz	-3 dBm	Y	±789 µS	µS	±140 µS	5.66
2.4 GHz	-3 dBm	Y	±890 µS	µS	±156 µS	5.73
2.6 GHz	-3 dBm	Y	±999 µS	µS	±171 µS	5.76
2.8 GHz	-3 dBm	Y	±1121 µS	µS	±186 µS	6.04
3.0 GHz	-3 dBm	Y	±1254 µS	µS	±205 µS	6.14

Standard: Short  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±30.5 mΩ	mΩ	±3.1 mΩ	10.09
10 MHz	-3 dBm	Z	±35.0 mΩ	mΩ	±3.6 mΩ	9.79
100 MHz	-3 dBm	Z	±80 mΩ	mΩ	±15 mΩ	5.70
200 MHz	-3 dBm	Z	±130 mΩ	mΩ	±26 mΩ	5.16
300 MHz	-3 dBm	Z	±180 mΩ	mΩ	±31 mΩ	5.97
500 MHz	-3 dBm	Z	±280 mΩ	mΩ	±51 mΩ	5.58
600 MHz	-3 dBm	Z	±330 mΩ	mΩ	±51 mΩ	6.57
800 MHz	-3 dBm	Z	±430 mΩ	mΩ	±51 mΩ	8.56
1.0 GHz	-3 dBm	Z	±530 mΩ	mΩ	±51 mΩ	10.57
1.3 GHz	-3 dBm	Z	±680 mΩ	mΩ	±101 mΩ	6.79
1.6 GHz	-3 dBm	Z	±830 mΩ	mΩ	±101 mΩ	8.29
1.8 GHz	-3 dBm	Z	±930 mΩ	mΩ	±101 mΩ	9.28
2.0 GHz	-3 dBm	Z	±1030 mΩ	mΩ	±201 mΩ	5.15
2.2 GHz	-3 dBm	Z	±1130 mΩ	mΩ	±201 mΩ	5.64
2.4 GHz	-3 dBm	Z	±1230 mΩ	mΩ	±201 mΩ	6.15
2.6 GHz	-3 dBm	Z	±1330 mΩ	mΩ	±201 mΩ	6.64
2.8 GHz	-3 dBm	Z	±1430 mΩ	mΩ	±201 mΩ	7.14
3.0 GHz	-3 dBm	Z	±1530 mΩ	mΩ	±201 mΩ	7.65

Performance Test and Function Test  
Test Record

Standard: 50  $\Omega$   
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	$\pm 0.46 \Omega$	$\Omega$	$\pm 0.09 \Omega$	5.51
		$\theta$	$\pm 9.2 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
10 MHz	-3 dBm	Z	$\pm 0.46 \Omega$	$\Omega$	$\pm 0.09 \Omega$	5.60
		$\theta$	$\pm 9.3 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
100 MHz	-3 dBm	Z	$\pm 0.53 \Omega$	$\Omega$	$\pm 0.09 \Omega$	6.39
		$\theta$	$\pm 10.7 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
200 MHz	-3 dBm	Z	$\pm 0.71 \Omega$	$\Omega$	$\pm 0.11 \Omega$	6.54
		$\theta$	$\pm 14.2 \text{ mrad}$	mrad	$\pm 2.2 \text{ mrad}$	8.87
300 MHz	-3 dBm	Z	$\pm 0.78 \Omega$	$\Omega$	$\pm 0.14 \Omega$	5.94
		$\theta$	$\pm 15.7 \text{ mrad}$	mrad	$\pm 2.7 \text{ mrad}$	8.87
500 MHz	-3 dBm	Z	$\pm 0.93 \Omega$	$\Omega$	$\pm 0.19 \Omega$	5.19
		$\theta$	$\pm 18.6 \text{ mrad}$	mrad	$\pm 3.7 \text{ mrad}$	8.87
600 MHz	-3 dBm	Z	$\pm 1.11 \Omega$	$\Omega$	$\pm 0.23 \Omega$	4.84
		$\theta$	$\pm 22.1 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
800 MHz	-3 dBm	Z	$\pm 1.26 \Omega$	$\Omega$	$\pm 0.23 \Omega$	5.52
		$\theta$	$\pm 25.1 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
1.0 GHz	-3 dBm	Z	$\pm 1.41 \Omega$	$\Omega$	$\pm 0.24 \Omega$	6.12
		$\theta$	$\pm 28.1 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
1.3 GHz	-3 dBm	Z	$\pm 2.28 \Omega$	$\Omega$	$\pm 0.24 \Omega$	9.74
		$\theta$	$\pm 45.6 \text{ mrad}$	mrad	$\pm 4.7 \text{ mrad}$	8.87
1.6 GHz	-3 dBm	Z	$\pm 2.51 \Omega$	$\Omega$	$\pm 0.24 \Omega$	10.51
		$\theta$	$\pm 50.2 \text{ mrad}$	mrad	$\pm 4.8 \text{ mrad}$	8.87
1.8 GHz	-3 dBm	Z	$\pm 2.66 \Omega$	$\Omega$	$\pm 0.24 \Omega$	11.49
		$\theta$	$\pm 53.2 \text{ mrad}$	mrad	$\pm 4.8 \text{ mrad}$	8.87
2.0 GHz	-3 dBm	Z	$\pm 4.05 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.07
		$\theta$	$\pm 81.2 \text{ mrad}$	mrad	$\pm 10.2 \text{ mrad}$	8.87
2.2 GHz	-3 dBm	Z	$\pm 4.20 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.27
		$\theta$	$\pm 84.2 \text{ mrad}$	mrad	$\pm 10.3 \text{ mrad}$	8.87

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.4 GHz	-3 dBm	Z	±4.35 Ω	Ω	±0.51 Ω	8.65
		θ	±87.2 mrad	mrاد	±10.2 mrad	8.87
2.6 GHz	-3 dBm	Z	±4.50 Ω	Ω	±0.51 Ω	8.90
		θ	±90.2 mrad	mrاد	±10.3 mrad	8.87
2.8 GHz	-3 dBm	Z	±4.65 Ω	Ω	±0.51 Ω	9.19
		θ	±93.2 mrad	mrاد	±10.3 mrad	8.87
3.0 GHz	-3 dBm	Z	±4.80 Ω	Ω	±0.51 Ω	9.55
		θ	±96.2 mrad	mrاد	±10.3 mrad	8.87

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Open  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±5.9 kΩ	kΩ	±296 Ω	20.13
		θ	±272.0 mrad	mrاد	±10.3 mrad	8.87
10 MHz	-3 dBm	Z	±79.3 Ω	Ω	±5.3 Ω	15.15
		θ	±36.3 mrad	mrاد	±2.3 mrad	8.87
100 MHz	-3 dBm	Z	±2.80 Ω	Ω	±0.42 Ω	6.79
		θ	±13.0 mrad	mrاد	±2.0 mrad	8.87
200 MHz	-3 dBm	Z	±1.47 Ω	Ω	±0.22 Ω	6.75
		θ	±14.5 mrad	mrاد	±2.2 mrad	8.87
300 MHz	-3 dBm	Z	±0.94 Ω	Ω	±0.16 Ω	5.94
		θ	±15.5 mrad	mrاد	±2.6 mrad	8.87
500 MHz	-3 dBm	Z	±0.53 Ω	Ω	±0.09 Ω	6.38
		θ	±23.8 mrad	mrاد	±3.8 mrad	8.87
600 MHz	-3 dBm	Z	±0.45 Ω	Ω	±0.09 Ω	5.20
		θ	±46.3 mrad	mrاد	±8.7 mrad	8.87
800 MHz	-3 dBm	Z	±0.61 Ω	Ω	±0.12 Ω	5.12
		θ	±44.8 mrad	mrاد	±8.7 mrad	8.87
1.0 GHz	-3 dBm	Z	±1.28 Ω	Ω	±0.23 Ω	5.60
		θ	±28.9 mrad	mrاد	±5.2 mrad	8.87
1.6 GHz	-3 dBm	Z	±4.24 Ω	Ω	±0.72 Ω	5.92
		θ	±49.4 mrad	mrاد	±8.4 mrad	8.87
1.8 GHz	-3 dBm	Z	±1.97 Ω	Ω	±0.29 Ω	6.93
		θ	±59.4 mrad	mrاد	±8.5 mrad	8.87
2.0 GHz	-3 dBm	Z	±1.35 Ω	Ω	±0.10 Ω	14.54
		θ	±214.3 mrad	mrاد	±14.4 mrad	8.87
2.2 GHz	-3 dBm	Z	±2.06 Ω	Ω	±0.23 Ω	9.31
		θ	±119.2 mrad	mrاد	±12.8 mrad	8.87
2.4 GHz	-3 dBm	Z	±4.40 Ω	Ω	±0.64 Ω	6.95
		θ	±87.0 mrad	mrاد	±12.6 mrad	8.87

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-3 dBm	Z	$\pm 14.9 \Omega$	$\Omega$	$\pm 2.2 \Omega$	6.94
		$\theta$	$\pm 99.7 \text{ mrad}$	mrad	$\pm 14.4 \text{ mrad}$	8.87
3.0 GHz	-3 dBm	Z	$\pm 6.9 \Omega$	$\Omega$	$\pm 1.1 \Omega$	6.75
		$\theta$	$\pm 93.7 \text{ mrad}$	mrad	$\pm 13.9 \text{ mrad}$	8.87

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Open  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-20 dBm	Z	±19.2 kΩ	kΩ	±969 Ω	19.90
		θ	±883.1 mrad	mrad	±61.5 mrad	8.87
10 MHz	-20 dBm	Z	±212.7 Ω	Ω	±10.5 Ω	20.37
		θ	±97.5 mrad	mrad	±3.4 mrad	8.87
100 MHz	-20 dBm	Z	±4.13 Ω	Ω	±0.42 Ω	9.98
		θ	±19.2 mrad	mrad	±2.0 mrad	8.87
200 MHz	-20 dBm	Z	±1.8 Ω	Ω	±0.23 Ω	7.96
		θ	±17.7 mrad	mrad	±2.2 mrad	8.87
300 MHz	-20 dBm	Z	±1.08 Ω	Ω	±0.17 Ω	6.67
		θ	±17.8 mrad	mrad	±2.6 mrad	8.87
500 MHz	-20 dBm	Z	±0.59 Ω	Ω	±0.09 Ω	7.06
		θ	±26.2 mrad	mrad	±3.8 mrad	8.87
600 MHz	-20 dBm	Z	±0.49 Ω	Ω	±0.09 Ω	5.78
		θ	±50.6 mrad	mrad	±8.7 mrad	8.87
800 MHz	-20 dBm	Z	±0.65 Ω	Ω	±0.12 Ω	5.50
		θ	±48.1 mrad	mrad	±8.8 mrad	8.87
1.0 GHz	-20 dBm	Z	±1.37 Ω	Ω	±0.23 Ω	6.01
		θ	±31.0 mrad	mrad	±5.2 mrad	8.87
1.6 GHz	-20 dBm	Z	±4.48 Ω	Ω	±0.72 Ω	6.26
		θ	±52.3 mrad	mrad	±8.4 mrad	8.87
1.8 GHz	-20 dBm	Z	±2.04 Ω	Ω	±0.29 Ω	7.19
		θ	±61.5 mrad	mrad	±8.5 mrad	8.87
2.0 GHz	-20 dBm	Z	±1.39 Ω	Ω	±0.10 Ω	14.90
		θ	±220.8 mrad	mrad	±14.3 mrad	8.87
2.2 GHz	-20 dBm	Z	±2.11 Ω	Ω	±0.23 Ω	9.54
		θ	±122.0 mrad	mrad	±12.8 mrad	8.87
2.4 GHz	-20 dBm	Z	±4.51 Ω	Ω	±0.64 Ω	7.13
		θ	±89.2 mrad	mrad	±12.6 mrad	8.87



Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-20 dBm	Z	$\pm 15.6\Omega$	$\Omega$	$\pm 2.2\Omega$	7.24
		$\theta$	$\pm 104.1$ mrad	mrad	$\pm 14.4$ mrad	8.87
3.0 GHz	-20 dBm	Z	$\pm 7.1\Omega$	$\Omega$	$\pm 1.1\Omega$	6.94
		$\theta$	$\pm 96.3$ mrad	mrad	$\pm 13.9$ mrad	8.87

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Short  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	$\pm 0.031 \Omega$	$\Omega$	$\pm 0.002 \Omega$	16.85
		$\theta$	$\pm 276.7 \text{ mrad}$	mrad	$\pm 27.2 \text{ mrad}$	8.87
10 MHz	-3 dBm	Z	$\pm 0.043 \Omega$	$\Omega$	$\pm 0.005 \Omega$	9.80
		$\theta$	$\pm 40.5 \text{ mrad}$	mrad	$\pm 4.4 \text{ mrad}$	8.87
100 MHz	-3 dBm	Z	$\pm 0.16 \Omega$	$\Omega$	$\pm 0.03 \Omega$	6.41
		$\theta$	$\pm 15.7 \text{ mrad}$	mrad	$\pm 2.5 \text{ mrad}$	8.87
200 MHz	-3 dBm	Z	$\pm 0.37 \Omega$	$\Omega$	$\pm 0.07 \Omega$	5.62
		$\theta$	$\pm 16.5 \text{ mrad}$	mrad	$\pm 3.0 \text{ mrad}$	8.87
300 MHz	-3 dBm	Z	$\pm 0.60 \Omega$	$\Omega$	$\pm 0.11 \Omega$	5.61
		$\theta$	$\pm 16.4 \text{ mrad}$	mrad	$\pm 3.0 \text{ mrad}$	8.87
500 MHz	-3 dBm	Z	$\pm 1.62 \Omega$	$\Omega$	$\pm 0.31 \Omega$	5.36
		$\theta$	$\pm 18.6 \text{ mrad}$	mrad	$\pm 3.5 \text{ mrad}$	8.87
600 MHz	-3 dBm	Z	$\pm 3.93 \Omega$	$\Omega$	$\pm 0.77 \Omega$	5.15
		$\theta$	$\pm 25.3 \text{ mrad}$	mrad	$\pm 5.0 \text{ mrad}$	8.87
1.0 GHz	-3 dBm	Z	$\pm 2.39 \Omega$	$\Omega$	$\pm 0.46 \Omega$	5.31
		$\theta$	$\pm 27.8 \text{ mrad}$	mrad	$\pm 5.2 \text{ mrad}$	8.87
1.3 GHz	-3 dBm	Z	$\pm 1.30 \Omega$	$\Omega$	$\pm 0.19 \Omega$	7.10
		$\theta$	$\pm 58.9 \text{ mrad}$	mrad	$\pm 8.3 \text{ mrad}$	8.87
1.6 GHz	-3 dBm	Z	$\pm 1.12 \Omega$	$\Omega$	$\pm 0.12 \Omega$	9.55
		$\theta$	$\pm 103.2 \text{ mrad}$	mrad	$\pm 10.9 \text{ mrad}$	8.87
1.8 GHz	-3 dBm	Z	$\pm 2.10 \Omega$	$\Omega$	$\pm 0.31 \Omega$	6.89
		$\theta$	$\pm 57.3 \text{ mrad}$	mrad	$\pm 8.4 \text{ mrad}$	8.87
2.0 GHz	-3 dBm	Z	$\pm 7.04 \Omega$	$\Omega$	$\pm 0.91 \Omega$	7.77
		$\theta$	$\pm 80.3 \text{ mrad}$	mrad	$\pm 10.4 \text{ mrad}$	8.87
2.4 GHz	-3 dBm	Z	$\pm 14.55 \Omega$	$\Omega$	$\pm 2.07 \Omega$	7.06
		$\theta$	$\pm 96.2 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	8.87
2.6 GHz	-3 dBm	Z	$\pm 4.90 \Omega$	$\Omega$	$\pm 0.74 \Omega$	6.69
		$\theta$	$\pm 89.1 \text{ mrad}$	mrad	$\pm 13.4 \text{ mrad}$	8.87

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-3 dBm	Z	$\pm 2.66 \Omega$	$\Omega$	$\pm 0.30 \Omega$	8.99
		$\theta$	$\pm 121.5 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	8.87

Performance Test and Function Test  
Test Record

Standard: 10 cm Airline with Short  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-40 dBm	Z	±0.151 Ω	Ω	±0.007 Ω	23.42
		θ	±1338.0 mrad	mrad	±89.7 mrad	8.87
10 MHz	-40 dBm	Z	±0.168 Ω	Ω	±0.008 Ω	21.07
		θ	±156.2 mrad	mrad	±13.7 mrad	8.87
100 MHz	-40 dBm	Z	±0.33 Ω	Ω	±0.04 Ω	11.23
		θ	±31.6 mrad	mrad	±2.7 mrad	8.87
200 MHz	-40 dBm	Z	±0.63 Ω	Ω	±0.07 Ω	9.37
		θ	±28.4 mrad	mrad	±3.1 mrad	8.87
300 MHz	-40 dBm	Z	±0.99 Ω	Ω	±0.12 Ω	8.85
		θ	±27.2 mrad	mrad	±3.0 mrad	8.87
500 MHz	-40 dBm	Z	±2.69 Ω	Ω	±0.31 Ω	8.90
		θ	±30.9 mrad	mrad	±3.6 mrad	8.87
600 MHz	-40 dBm	Z	±6.16 Ω	Ω	±0.78 Ω	7.98
		θ	±39.6 mrad	mrad	±5.1 mrad	8.87
1.0 GHz	-40 dBm	Z	±3.27 Ω	Ω	±0.45 Ω	7.30
		θ	±38.0 mrad	mrad	±5.3 mrad	8.87
1.3 GHz	-40 dBm	Z	±1.45 Ω	Ω	±0.19 Ω	7.93
		θ	±65.8 mrad	mrad	±8.3 mrad	8.87
1.6 GHz	-40 dBm	Z	±1.25 Ω	Ω	±0.12 Ω	10.60
		θ	±115.0 mrad	mrad	±10.9 mrad	8.87
1.8 GHz	-40 dBm	Z	±2.31 Ω	Ω	±0.31 Ω	7.59
		θ	±63.1 mrad	mrad	±8.4 mrad	8.87
2.0 GHz	-40 dBm	Z	±7.68 Ω	Ω	±0.92 Ω	8.44
		θ	±87.6 mrad	mrad	±10.5 mrad	8.87
2.4 GHz	-40 dBm	Z	±16.23 Ω	Ω	±2.06 Ω	7.89
		θ	±107.3 mrad	mrad	±13.7 mrad	8.87
2.6 GHz	-40 dBm	Z	±5.22 Ω	Ω	±0.74 Ω	7.13
		θ	±95.0 mrad	mrad	±13.4 mrad	8.87

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-40 dBm	Z	$\pm 2.82 \Omega$	$\Omega$	$\pm 0.30 \Omega$	9.49
		$\theta$	$\pm 128.4 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	8.87

**Performance Test Record (Option 010)**

**Frequency Accuracy Test (Option 010)**

Without Option 1D5

Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	±10.00 Hz	Hz	±0.029 Hz	351.40
3 GHz	±30.00 kHz	kHz	±0.085kHz	354.90

With Option 1D5

Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	±1.00 Hz	Hz	±0.003 Hz	4101.90
3 GHz	±3.00 kHz	kHz	±0.008 kHz	3822.90

**OSC Level Accuracy Test (Option 010)**

Power Level	Frequency	Test Limit	Test Result	Measurement Uncertainty	TAR
1 dBm	1 GHz	±3.50 dB	dB	±0.22 dB	16.51
0 dBm	3 GHz	±5.60 dB	dB	±0.35 dB	16.28
-7.9 dBm	3 GHz	±5.60 dB	dB	±0.35 dB	16.08
-10 dBm	300 MHz	±3.50 dB	dB	±0.26 dB	13.79
-15 dBm	1 MHz	±3.50 dB	dB	±0.22 dB	16.44
-20 dBm	50 MHz	±3.50 dB	dB	±0.24 dB	14.99
-25 dBm	1 GHz	±3.50 dB	dB	±0.24 dB	14.99
-30 dBm	10 MHz	±3.50 dB	dB	±0.22 dB	16.42
-35 dBm	2 GHz	±5.60 dB	dB	±0.24 dB	23.68
-40 dBm	100 MHz	±3.50 dB	dB	±0.27 dB	13.35

**Impedance Measurement Accuracy Test (Option 010)**

Standard: Open  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Y	±5.13 μS	μS	±0.61 μS	8.42
10 MHz	-3 dBm	Y	±6.26 μS	μS	±0.46 μS	13.61
100 MHz	-3 dBm	Y	±17.6 μS	μS	±3.3 μS	5.45
200 MHz	-3 dBm	Y	±31.4 μS	μS	±6.5 μS	4.85
300 MHz	-3 dBm	Y	±44.7 μS	μS	±9.8 μS	4.58
500 MHz	-3 dBm	Y	±72 μS	μS	±17 μS	4.39
600 MHz	-3 dBm	Y	±95 μS	μS	±21 μS	4.62
800 MHz	-3 dBm	Y	±127 μS	μS	±28 μS	4.63
1.0 GHz	-3 dBm	Y	±161 μS	μS	±35 μS	4.61
1.3 GHz	-3 dBm	Y	±284 μS	μS	±46 μS	6.24
1.6 GHz	-3 dBm	Y	±362 μS	μS	±61 μS	6.03
1.8 GHz	-3 dBm	Y	±420 μS	μS	±69 μS	6.11
2.0 GHz	-3 dBm	Y	±689 μS	μS	±126 μS	5.49
2.2 GHz	-3 dBm	Y	±781 μS	μS	±140 μS	5.60
2.4 GHz	-3 dBm	Y	±881 μS	μS	±155 μS	5.69
2.6 GHz	-3 dBm	Y	±991 μS	μS	±171 μS	5.82
2.8 GHz	-3 dBm	Y	±1111 μS	μS	±186 μS	5.98
3.0 GHz	-3 dBm	Y	±1244 μS	μS	±203 μS	6.14

Performance Test and Function Test  
**Test Record**

Standard: Short  
 Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±13.5 mΩ	mΩ	±2.6 mΩ	5.25
10 MHz	-3 dBm	Z	±18.0 mΩ	mΩ	±3.6 mΩ	5.05
100 MHz	-3 dBm	Z	±63 mΩ	mΩ	±15 mΩ	4.49
200 MHz	-3 dBm	Z	±113 mΩ	mΩ	±26 mΩ	4.51
300 MHz	-3 dBm	Z	±163 mΩ	mΩ	±31 mΩ	5.43
500 MHz	-3 dBm	Z	±263 mΩ	mΩ	±51 mΩ	5.25
600 MHz	-3 dBm	Z	±313 mΩ	mΩ	±51 mΩ	6.24
800 MHz	-3 dBm	Z	±413 mΩ	mΩ	±51 mΩ	8.23
1.0 GHz	-3 dBm	Z	±513 mΩ	mΩ	±51 mΩ	10.23
1.3 GHz	-3 dBm	Z	±663 mΩ	mΩ	±101 mΩ	6.63
1.6 GHz	-3 dBm	Z	±813 mΩ	mΩ	±101 mΩ	8.13
1.8 GHz	-3 dBm	Z	±913 mΩ	mΩ	±101 mΩ	9.12
2.0 GHz	-3 dBm	Z	±1013 mΩ	mΩ	±201 mΩ	5.06
2.2 GHz	-3 dBm	Z	±1113 mΩ	mΩ	±201 mΩ	5.56
2.4 GHz	-3 dBm	Z	±1213 mΩ	mΩ	±201 mΩ	6.06
2.6 GHz	-3 dBm	Z	±1313 mΩ	mΩ	±201 mΩ	6.56
2.8 GHz	-3 dBm	Z	±1413 mΩ	mΩ	±201 mΩ	7.06
3.0 GHz	-3 dBm	Z	±1513 mΩ	mΩ	±201 mΩ	7.55



Standard: 50  $\Omega$   
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	$\pm 0.35 \Omega$	$\Omega$	$\pm 0.09 \Omega$	4.17
		$\theta$	$\pm 7.0 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
10 MHz	-3 dBm	Z	$\pm 0.36 \Omega$	$\Omega$	$\pm 0.09 \Omega$	4.26
		$\theta$	$\pm 7.2 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
100 MHz	-3 dBm	Z	$\pm 0.43 \Omega$	$\Omega$	$\pm 0.09 \Omega$	5.09
		$\theta$	$\pm 8.5 \text{ mrad}$	mrad	$\pm 1.7 \text{ mrad}$	8.87
200 MHz	-3 dBm	Z	$\pm 0.58 \Omega$	$\Omega$	$\pm 0.11 \Omega$	5.30
		$\theta$	$\pm 11.5 \text{ mrad}$	mrad	$\pm 2.2 \text{ mrad}$	8.87
300 MHz	-3 dBm	Z	$\pm 0.65 \Omega$	$\Omega$	$\pm 0.14 \Omega$	4.92
		$\theta$	$\pm 13.0 \text{ mrad}$	mrad	$\pm 2.7 \text{ mrad}$	8.87
500 MHz	-3 dBm	Z	$\pm 0.80 \Omega$	$\Omega$	$\pm 0.19 \Omega$	4.44
		$\theta$	$\pm 16.0 \text{ mrad}$	mrad	$\pm 3.7 \text{ mrad}$	8.87
600 MHz	-3 dBm	Z	$\pm 1.08 \Omega$	$\Omega$	$\pm 0.23 \Omega$	4.70
		$\theta$	$\pm 21.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
800 MHz	-3 dBm	Z	$\pm 1.23 \Omega$	$\Omega$	$\pm 0.23 \Omega$	5.37
		$\theta$	$\pm 24.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
1.0 GHz	-3 dBm	Z	$\pm 1.38 \Omega$	$\Omega$	$\pm 0.23 \Omega$	5.99
		$\theta$	$\pm 27.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
1.3 GHz	-3 dBm	Z	$\pm 2.25 \Omega$	$\Omega$	$\pm 0.24 \Omega$	9.60
		$\theta$	$\pm 45.0 \text{ mrad}$	mrad	$\pm 4.7 \text{ mrad}$	8.87
1.6 GHz	-3 dBm	Z	$\pm 2.48 \Omega$	$\Omega$	$\pm 0.24 \Omega$	10.43
		$\theta$	$\pm 49.5 \text{ mrad}$	mrad	$\pm 4.8 \text{ mrad}$	8.87
1.8 GHz	-3 dBm	Z	$\pm 2.63 \Omega$	$\Omega$	$\pm 0.24 \Omega$	11.32
		$\theta$	$\pm 52.5 \text{ mrad}$	mrad	$\pm 4.6 \text{ mrad}$	8.87
2.0 GHz	-3 dBm	Z	$\pm 4.02 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.00
		$\theta$	$\pm 80.5 \text{ mrad}$	mrad	$\pm 10.1 \text{ mrad}$	8.87
2.2 GHz	-3 dBm	Z	$\pm 4.17 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.20
		$\theta$	$\pm 83.5 \text{ mrad}$	mrad	$\pm 10.2 \text{ mrad}$	8.87

Performance Test and Function Test  
**Test Record**

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.4 GHz	-3 dBm	Z	$\pm 4.32 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.58
		$\theta$	$\pm 86.5 \text{ mrad}$	mrad	$\pm 10.1 \text{ mrad}$	8.87
2.6 GHz	-3 dBm	Z	$\pm 4.47 \Omega$	$\Omega$	$\pm 0.51 \Omega$	8.84
		$\theta$	$\pm 89.5 \text{ mrad}$	mrad	$\pm 10.2 \text{ mrad}$	8.87
2.8 GHz	-3 dBm	Z	$\pm 4.62 \Omega$	$\Omega$	$\pm 0.53 \Omega$	8.79
		$\theta$	$\pm 92.5 \text{ mrad}$	mrad	$\pm 10.2 \text{ mrad}$	8.87
3.0 GHz	-3 dBm	Z	$\pm 4.77 \Omega$	$\Omega$	$\pm 0.53 \Omega$	9.07
		$\theta$	$\pm 95.5 \text{ mrad}$	mrad	$\pm 10.9 \text{ mrad}$	8.87

Standard: 10 cm Airline with Open  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±2.6 kΩ	kΩ	±254 Ω	10.13
		θ	±117.8 mrad	mrاد	±17.6 mrad	8.87
10 MHz	-3 dBm	Z	±42.8 Ω	Ω	±4.3 Ω	10.03
		θ	±19.6 mrad	mrاد	±2.0 mrad	8.87
100 MHz	-3 dBm	Z	±2.15 Ω	Ω	±0.42 Ω	5.52
		θ	±10.0 mrad	mrاد	±2.0 mrad	8.87
200 MHz	-3 dBm	Z	±1.18 Ω	Ω	±0.22 Ω	5.47
		θ	±11.7 mrad	mrاد	±2.2 mrad	8.87
300 MHz	-3 dBm	Z	±0.78 Ω	Ω	±0.16 Ω	4.96
		θ	±12.8 mrad	mrاد	±2.6 mrad	8.87
500 MHz	-3 dBm	Z	±0.47 Ω	Ω	±0.09 Ω	5.61
		θ	±20.9 mrad	mrاد	±3.7 mrad	8.87
600 MHz	-3 dBm	Z	±0.44 Ω	Ω	±0.09 Ω	5.12
		θ	±44.5 mrad	mrاد	±8.7 mrad	8.87
800 MHz	-3 dBm	Z	±0.59 Ω	Ω	±0.12 Ω	5.02
		θ	±43.5 mrad	mrاد	±8.7 mrad	8.87
1.0 GHz	-3 dBm	Z	±1.25 Ω	Ω	±0.23 Ω	5.50
		θ	±28.2 mrad	mrاد	±5.2 mrad	8.87
1.6 GHz	-3 dBm	Z	±4.17 Ω	Ω	±0.72 Ω	5.83
		θ	±48.6 mrad	mrاد	±8.4 mrad	8.87
1.8 GHz	-3 dBm	Z	±1.95 Ω	Ω	±0.29 Ω	6.88
		θ	±58.7 mrad	mrاد	±8.5 mrad	8.87
2.0 GHz	-3 dBm	Z	±1.34 Ω	Ω	±0.10 Ω	14.69
		θ	±211.6 mrad	mrاد	±14.3 mrad	8.87
2.2 GHz	-3 dBm	Z	±2.05 Ω	Ω	±0.23 Ω	9.24
		θ	±118.2 mrad	mrاد	±12.8 mrad	8.87
2.4 GHz	-3 dBm	Z	±4.37 Ω	Ω	±0.64 Ω	6.92
		θ	±86.4 mrad	mrاد	±12.5 mrad	8.87

Performance Test and Function Test  
Test Record

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-3 dBm	Z	$\pm 14.8 \Omega$	$\Omega$	$\pm 2.2 \Omega$	6.88
		$\theta$	$\pm 98.6 \text{ mrad}$	mrad	$\pm 14.4 \text{ mrad}$	8.87
3.0 GHz	-3 dBm	Z	$\pm 6.9 \Omega$	$\Omega$	$\pm 1.1 \Omega$	6.71
		$\theta$	$\pm 93.0 \text{ mrad}$	mrad	$\pm 13.8 \text{ mrad}$	8.87

Standard: 10 cm Airline with Open  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-20 dBm	Z	±14.5 kΩ	kΩ	±1771 Ω	8.18
		θ	±663.4 mrad	mrاد	±50.6 mrad	8.87
10 MHz	-20 dBm	Z	±161.8 Ω	Ω	±7.7 Ω	21.20
		θ	±74.2 mrad	mrاد	±5.3 mrad	8.87
100 MHz	-20 dBm	Z	±3.33 Ω	Ω	±0.42 Ω	8.05
		θ	±15.5 mrad	mrاد	±2.1 mrad	8.87
200 MHz	-20 dBm	Z	±1.47 Ω	Ω	±0.22 Ω	6.76
		θ	±14.6 mrad	mrاد	±2.2 mrad	8.87
300 MHz	-20 dBm	Z	±0.91 Ω	Ω	±0.16 Ω	5.79
		θ	±14.9 mrad	mrاد	±2.6 mrad	8.87
500 MHz	-20 dBm	Z	±0.52 Ω	Ω	±0.09 Ω	6.19
		θ	±23.1 mrad	mrاد	±3.7 mrad	8.87
600 MHz	-20 dBm	Z	±0.48 Ω	Ω	±0.09 Ω	5.58
		θ	±48.5 mrad	mrاد	±8.7 mrad	8.87
800 MHz	-20 dBm	Z	±0.63 Ω	Ω	±0.12 Ω	5.36
		θ	±46.6 mrad	mrاد	±8.7 mrad	8.87
1.0 GHz	-20 dBm	Z	±1.34 Ω	Ω	±0.23 Ω	5.89
		θ	±30.2 mrad	mrاد	±5.2 mrad	8.87
1.6 GHz	-20 dBm	Z	±4.39 Ω	Ω	±0.72 Ω	6.14
		θ	±51.2 mrad	mrاد	±8.4 mrad	8.87
1.8 GHz	-20 dBm	Z	±2.01 Ω	Ω	±0.29 Ω	7.12
		θ	±60.6 mrad	mrاد	±8.5 mrad	8.87
2.0 GHz	-20 dBm	Z	±1.38 Ω	Ω	±0.10 Ω	14.99
		θ	±217.6 mrad	mrاد	±14.4 mrad	8.87
2.2 GHz	-20 dBm	Z	±2.09 Ω	Ω	±0.23 Ω	9.41
		θ	±120.7 mrad	mrاد	±12.8 mrad	8.87
2.4 GHz	-20 dBm	Z	±4.47 Ω	Ω	±0.64 Ω	7.08
		θ	±88.4 mrad	mrاد	±12.5 mrad	8.87

Performance Test and Function Test  
**Test Record**

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.6 GHz	-20 dBm	Z	$\pm 15.4 \Omega$	$\Omega$	$\pm 2.2 \Omega$	7.16
		$\theta$	$\pm 102.6 \text{ mrad}$	mrad	$\pm 14.4 \text{ mrad}$	8.87
3.0 GHz	-20 dBm	Z	$\pm 7.1 \Omega$	$\Omega$	$\pm 1.1 \Omega$	6.88
		$\theta$	$\pm 95.4 \text{ mrad}$	mrad	$\pm 13.9 \text{ mrad}$	8.87

Standard: 10 cm Airline with Short  
Averaging: 8

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-3 dBm	Z	±0.010 Ω	Ω	±0.002 Ω	7.50
		θ	±125.4 mrad	mrاد	±19.4 mrad	8.87
10 MHz	-3 dBm	Z	±0.020 Ω	Ω	±0.005 Ω	5.63
		θ	±23.3 mrad	mrاد	±4.2 mrad	8.87
100 MHz	-3 dBm	Z	±0.13 Ω	Ω	±0.03 Ω	5.13
		θ	±12.5 mrad	mrاد	±2.5 mrad	8.87
200 MHz	-3 dBm	Z	±0.30 Ω	Ω	±0.07 Ω	4.63
		θ	±13.6 mrad	mrاد	±3.0 mrad	8.87
300 MHz	-3 dBm	Z	±0.50 Ω	Ω	±0.11 Ω	4.67
		θ	±13.7 mrad	mrاد	±3.0 mrad	8.87
500 MHz	-3 dBm	Z	±1.38 Ω	Ω	±0.31 Ω	4.57
		θ	±15.8 mrad	mrاد	±3.5 mrad	8.87
600 MHz	-3 dBm	Z	±3.75 Ω	Ω	±0.77 Ω	4.92
		θ	±24.1 mrad	mrاد	±5.0 mrad	8.87
1.0 GHz	-3 dBm	Z	±2.32 Ω	Ω	±0.45 Ω	5.20
		θ	±27.0 mrad	mrاد	±5.2 mrad	8.87
1.3 GHz	-3 dBm	Z	±1.28 Ω	Ω	±0.19 Ω	6.98
		θ	±58.0 mrad	mrاد	±8.3 mrad	8.87
1.6 GHz	-3 dBm	Z	±1.10 Ω	Ω	±0.12 Ω	9.42
		θ	±101.6 mrad	mrاد	±10.8 mrad	8.87
1.8 GHz	-3 dBm	Z	±2.08 Ω	Ω	±0.31 Ω	6.81
		θ	±56.7 mrad	mrاد	±8.3 mrad	8.87
2.0 GHz	-3 dBm	Z	±6.97 Ω	Ω	±0.91 Ω	7.74
		θ	±79.5 mrad	mrاد	±10.4 mrad	8.87
2.4 GHz	-3 dBm	Z	±14.38 Ω	Ω	±2.06 Ω	7.01
		θ	±95.1 mrad	mrاد	±13.6 mrad	8.87
2.6 GHz	-3 dBm	Z	±4.86 Ω	Ω	±0.74 Ω	6.64
		θ	±88.5 mrad	mrاد	±13.4 mrad	8.87

Performance Test and Function Test  
Test Record

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-3 dBm	Z	$\pm 2.65 \Omega$	$\Omega$	$\pm 0.30 \Omega$	8.87
		$\theta$	$\pm 120.6 \text{ mrad}$	mrad	$\pm 13.6 \text{ mrad}$	8.87



Standard: 10 cm Airline with Short  
Averaging: 1

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
1 MHz	-40 dBm	Z	±0.100 Ω	Ω	±0.010 Ω	10.74
		θ	±892.0 mrad	mrاد	±68.1 mrad	8.87
10 MHz	-40 dBm	Z	±0.110 Ω	Ω	±0.011 Ω	10.84
		θ	±104.2 mrad	mrاد	±8.5 mrad	8.87
100 MHz	-40 dBm	Z	±0.23 Ω	Ω	±0.03 Ω	9.41
		θ	±21.2 mrad	mrاد	±2.9 mrad	8.87
200 MHz	-40 dBm	Z	±0.42 Ω	Ω	±0.07 Ω	7.69
		θ	±18.7 mrad	mrاد	±3.0 mrad	8.87
300 MHz	-40 dBm	Z	±0.66 Ω	Ω	±0.12 Ω	7.35
		θ	±18.1 mrad	mrاد	±3.0 mrad	8.87
500 MHz	-40 dBm	Z	±1.88 Ω	Ω	±0.31 Ω	7.31
		θ	±21.6 mrad	mrاد	±3.6 mrad	8.87
600 MHz	-40 dBm	Z	±5.17 Ω	Ω	±0.80 Ω	6.52
		θ	±33.2 mrad	mrاد	±5.1 mrad	8.87
1.0 GHz	-40 dBm	Z	±2.82 Ω	Ω	±0.45 Ω	6.29
		θ	±32.7 mrad	mrاد	±5.2 mrad	8.87
1.3 GHz	-40 dBm	Z	±1.39 Ω	Ω	±0.19 Ω	7.61
		θ	±63.2 mrad	mrاد	±8.3 mrad	8.87
1.6 GHz	-40 dBm	Z	±1.20 Ω	Ω	±0.12 Ω	10.07
		θ	±110.2 mrad	mrاد	±11.0 mrad	8.87
1.8 GHz	-40 dBm	Z	±2.24 Ω	Ω	±0.31 Ω	7.32
		θ	±61.1 mrad	mrاد	±8.4 mrad	8.87
2.0 GHz	-40 dBm	Z	±7.48 Ω	Ω	±0.92 Ω	8.20
		θ	±85.3 mrad	mrاد	±10.4 mrad	8.87
2.4 GHz	-40 dBm	Z	±15.72 Ω	Ω	±2.06 Ω	7.65
		θ	±104.0 mrad	mrاد	±13.6 mrad	8.87
2.6 GHz	-40 dBm	Z	±5.12 Ω	Ω	±0.74 Ω	6.98
		θ	±93.1 mrad	mrاد	±13.4 mrad	8.87

Performance Test and Function Test  
Test Record

Frequency	Power Level	Measurement Parameter	Test Limit	Test Result	Measurement Uncertainty	TAR
2.8 GHz	-40 dBm	Z	$\pm 2.76 \Omega$	$\Omega$	$\pm 0.30 \Omega$	9.23
		$\theta$	$\pm 125.8 \text{ mrad}$	mrad	$\pm 13.7 \text{ mrad}$	8.87

**DC Bias Test (Option 001 & Option 010)**

Bias Level	Test Limit	Test Result	Measurement Uncertainty	TAR
-40 V	±46.00 mV	mV	±0.87 mV	52.90
-4 V	±10.0 mV	mV	±68.5 µV	146.00
0 V	± 6.00 mV	mV	±13.3 µV	454.70
4 V	±10.0 mV	mV	±45.5 µV	220.10
40 V	±46.00 mV	mV	±0.88 mV	52.80
-50 mA	±120.0 µA	µA	±8.9 µA	13.51
-4 mA	±28.0 µA	µA	±1.2 µA	25.34
-100 µA	±20.2 µA	µA	±1.0 µA	21.67
100 µA	±20.2 µA	µA	±1.2 µA	17.86
4 mA	±28.0 µA	µA	±1.3 µA	22.42
50 mA	±120.0 µA	µA	±8.9 µA	13.57

### Function Test Record

Agilent Technologies E4991A RF Impedance/Material Analyzer

Mainframe: Serial No.		Test Date	
Test Head: Serial No.		Temperature	°C
Calibration Kit Serial No.		Humidity	%R.H.
		Tested by	

### Low Loss Capacitor Test

**Pass**

[ ]

**Fail**

[ ]

---

## 3 Adjustment

This chapter provides the adjustment procedure for the E4991A RF Impedance/Material Analyzer to ensure that the E4991A is within its specifications.

---

## Safety Considerations

This manual contains NOTES, CAUTIONs, and WARNINGs that must be followed to ensure the safety of the operator and to keep the instrument in a safe and serviceable condition. The Adjustment must be performed by qualified service personnel.

---

### WARNING

**Any interruption of the protective ground conductor (inside or outside the equipment) or disconnection of the protective ground terminal can make the instrument dangerous. Intentional interruption of the protective ground system for any reason is prohibited.**

---

---

## Warm-up for Adjustment

Allow the E4991A to warm up for at least 30 minutes before you execute any of the adjustments.

---

## Required Equipment

Table 1-1 lists the equipment required to perform the Adjustment procedures described in this chapter. Use only calibrated test equipment when adjusting the E4991A.

---

### NOTE

The followings are indispensable to perform the adjustment. The service center must receive the following from the customer.

- Agilent E4991A
- 16195B 7-mm Calibration Kit (Furnished Accessory for E4991A)
- Standard Test Head (Furnished Accessory for E4991A)

If the E4991A has an Option 010 Probe Station Connection Kit, you have to perform the adjustment using the Standard Test Head only.

---

---

## Preparation for using the Adjustment Program

The Adjustment must be performed using the Adjustment Program.

To use the Adjustment Program, some preparation is required. This section describes how to its procedure.

### Required Controller

The following controller system is required to run the adjustment program.

Windows PC	PC-AT Compatible, RAM:≥64MBytes, CPU Pentium 200 MHz or faster
OS	Microsoft® Windows NT® (4.0), Windows 95®, Windows 98®, Windows 2000®
Software	Agilent VEE (5.0x or 6.0x)
GPIB Card	82350A, 82340B, 82341C/D

### Installing a GPIB Card (82340B, 82341C/D or 82350A)

Install a GPIB Card into your computer (see the GPIB Card manual). The select code of the GPIB Card should be set to “7”.

### Installing Agilent VEE for Personal Computer

Install the Agilent VEE into your computer (see the Agilent VEE for Windows®).

### Installing Adjustment Program into Your PC

1. Make a copy of the E4991A adjustment program named ADJE4991A.EXE in a directory of the hard disk drive in your PC. The program is downloadable from the CTU-Kobe web site.
2. Double-click on the filename on the Windows Explorer to start extracting the self-extracting archive.
3. You will be prompted to enter directory name for installing the program files. Click UNZIP to use default directory (C:\ADJE4991A)
4. Confirm the message of “unzipped successfully” on WinZip Self-Extractor Display, and then click OK and Close.


Adjustment  
Preparation for using the Adjustment Program

### Equipment Setup

Table 1-1 lists the equipment required to perform the Adjustment procedures described in this chapter. Use only calibrated test equipment when adjusting the E4991A.

Performing adjustments requires the system described in this section. The Hardware Setup is shown in Figure 3-1.

**Figure 3-1** Adjustment Hardware Setup

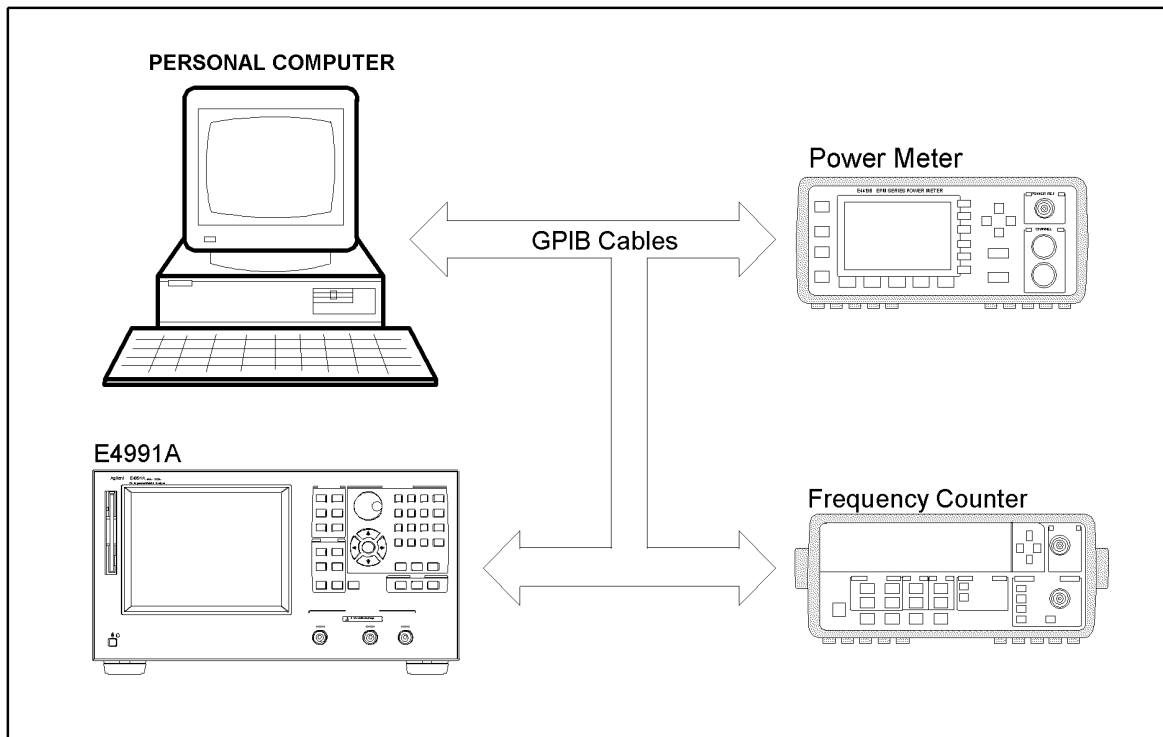

e4991ase007



## E4991A Control Mode

It is necessary to set the E4991A in addressable only mode to perform the adjustments. When your E4991A is set to system controller mode, set the E4991A in addressable only mode by the following E4991A mouse procedure.

- Step 1.** Click **System...** on the **System** menu.
- Step 2.** Click  **GPIB Setup Menu** box.
- Step 3.** Select **Addressable Only** in the **Control Mode** box.
- Step 4.** Turn the E4991A's main power off and then back on again.

Or, set to addressable only mode by the following E4991A front panel procedure.


- Step 1.** Press **[System]** key on the front panel.
- Step 2.** Press **[Click]** key on the front panel.
- Step 3.** Press **[Click]** key again, if system controller mode is selected in the **Control Mode** box.
- Step 4.** Turn the E4991A's main power off and then back on again.

In addition, you can confirm the E4991A GPIB address by the above procedure.

## Order of Adjustment


When performing more than one Adjustment, perform them in the order they appear in this chapter. The procedures are presented in the following order. For example, you need to perform the A4 Local AGC Gain Adjustment, A4 Local Level Adjustment, A4 IF Gain Adjustment, Default Cal Coef Adjustment and System Backup after performing the A3 Local Level Adjustment.

Figure 3-2 Order of Adjustment

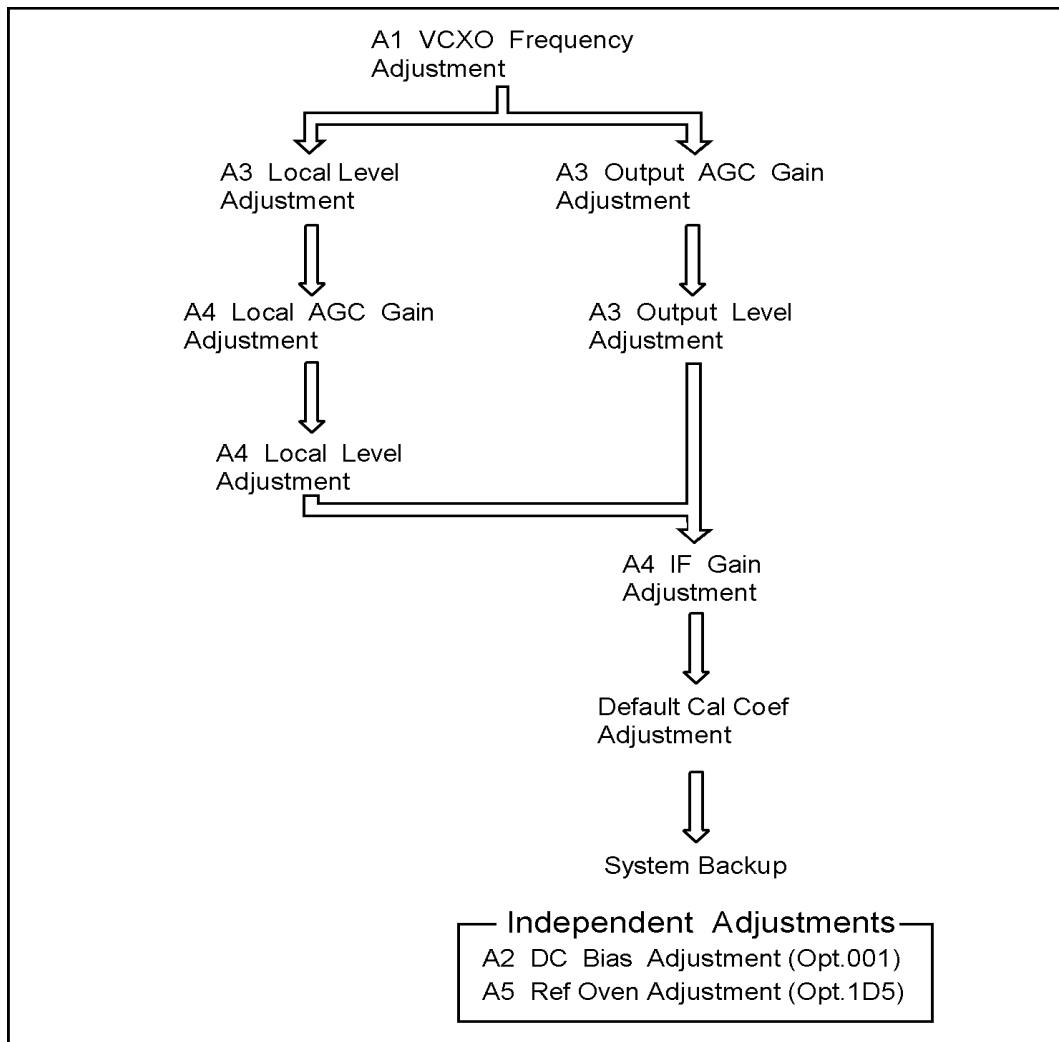

e4991ase015

Figure 3-3 Order of DC Bias Adjustment

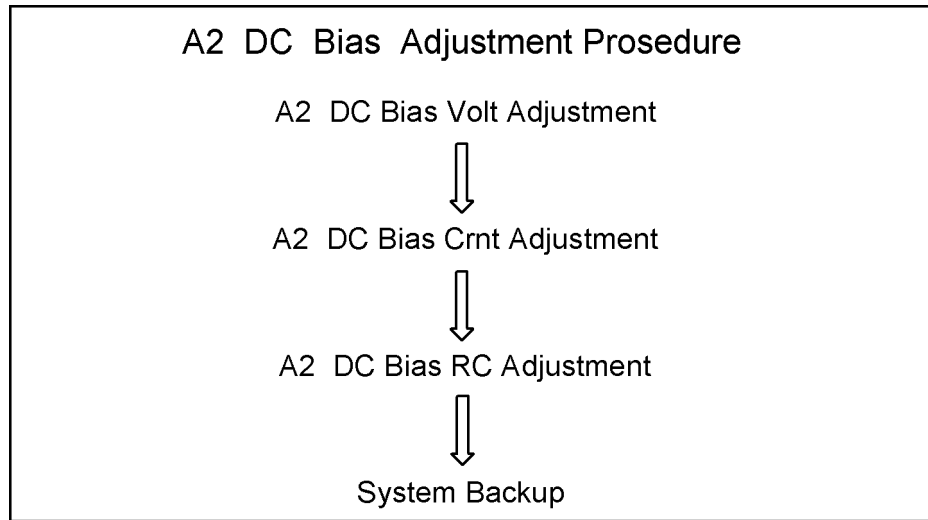

e4991ase022

The Spot Adjustment in the Adjustment Program can perform the following adjustments automatically according to Order of Adjustment as shown in Table 3-1.

Table 3-1 Required Adjustment Items in the Spot Adjustment

Spot Adjustment ( in the Adjustment Program)	Adjustment Items											
	A1 VCXO Frequency Adjustment	A3 Local Level Adjustment	A3 Output AGC Gain Adjustment	A3 Output Level Adjustment	A4 Local AGC Gain Adjustment	A4 Local Level Adjustment	A4 IF Gain Adjustment	Default Cal Coefficient Adjustment	A2 DC Bias Voltage Adjustment (Opt.001)	A2 DC Bias Current Adjustment (Opt.001)	A2 DC Bias R/C Adjustment (Opt.001)	A5 Reference Oven Adjustment(Opt.1D5)
A1 Adjustment	*_>	*_>	*_>	*_>	*_>	*_>	*_>	*				
A3 Adjustment		*_>	*_>	*_>	*_>	*_>	*_>	*				
A4 Adjustment					*_>	*_>	*_>	*				
A2 Adjustment (Opt.001)									*_>	*_>	*	
A5 Adjustment (Opt.1D5)												*
Default Cal Adjustment								*				

3. Adjustment

## Required Adjustment after Replacing Assembly

If you replace the following assembly, the adjustment items as shown in Table 3-2 are required. Then perform the corresponding adjustment using the Spot Adjustment in the Adjustment Program.

**Table 3-2 Required Adjustment Item after Replacing Assembly**

Replaced Assembly	Required Adjustment (Spot Adjustment in Adjustment Program)				
	A1 Adjustment	A3 Adjustment	A4 Adjustment	A2 Adjustment(Opt. 001)	A5 Adjustment(Opt. 1D5)
A1 REFERENCE OSCILLATOR	√				
A3 SOURCE		√		√*1	
A4 RECEIVER			√	√*1	
A6 STANDARD TEST HEAD		√		√*1	
A2 DC Bias(Opt. 001)				√	
A5 10MHz OVEN(Opt.1D5)					√

\*1. If your instrument has an option 001(A2 DC Bias), also perform A2 Adjustment.

---

## Adjustment Program

This section describes the explanation of the function and the procedure of the Adjustment Program. For details, refer to the “Operation Manual for E4991A Adjustment Program”. The operation manual is downloadable from the CTU-Kobe web site

### Adjustment Program Menu

The Adjustment Program has the following main menu.

- All Adjustment
- Spot Adjustment
- Write ID
- EEPROM Initialize

#### All Adjustment

All Adjustment executes all adjustments according to the option the E4991A has. When you replace the EEPROM on the A21 Analog Interface Board or A27 Mass Storage Disk Drive(HDD), All Adjustment must be performed.

All Adjustment consists of the following adjustments.

- EEPROM Initialize
- A1 VCXO Frequency Adjustment
- A3 Local Level Adjustment
- A3 Output AGC Gain Adjustment
- A3 Output Level Adjustment
- A4 Local AGC Gain Adjustment
- A4 Local Level Adjustment
- A4 IF Gain Adjustment
- Default Cal Coefficient Adjustment
- A5 Ref Oven Adjustment (Opt.1D5)
- A2 DC Bias Voltage Adjustment (Opt.001)
- A2 DC Bias Current Adjustment (Opt.001)
- A2 DC Bias R/C Adjustment (Opt.001)

---

#### NOTE

It is necessary to perform the system backup after performing the adjustment so that the system recovery can be performed correctly. For details, refer to “System Backup (for serial prefix JP1KH, JP2KH, and MY432)” on page 149

---

## Adjustment

### Adjustment Program

#### Spot Adjustment

Spot Adjustment executes the corresponding adjustment automatically according to replaced each analog board. Perform the Spot Adjustment when the analog board such as A1,A2,A3,A4,A5 or A6 board is replaced. For example, if you replace or adjustment only A1 board, perform only A1 Adjustment. For details, refer to Table 3-2 on page 124

Spot Adjustment consists of the following adjustments.

- A1 Adjustment

If you replace or adjust A1 Board, perform A1 Adjustment only.

The A1 Adjustment consists of the following adjustments.

- A1 VCXO Frequency Adjustment
- A3 Local Level Adjustment
- A3 Output AGC Gain Adjustment
- A3 Output Level Adjustment
- A4 Local AGC Gain Adjustment
- A4 Local Level Adjustment
- A4 IF Gain Adjustment
- Default Cal Coefficient Adjustment

- A3 Adjustment

If you replace or adjust A3 Board(or the Standard Test Head), perform A3 Adjustment only.

The A3 Adjustment consists of the following adjustments.

- A3 Local Level Adjustment
- A3 Output AGC Gain Adjustment
- A3 Output Level Adjustment
- A4 Local AGC Gain Adjustment
- A4 Local Level Adjustment
- A4 IF Gain Adjustment
- Default Cal Coefficient Adjustment

---

**NOTE**

If your instrument has an option 001(A2 DC Bias), perform A2 Adjustment after performing the A3 Adjustment.

- A4 Adjustment

If you replace or adjust A4 Board, perform A4 Adjustment only.

The A4 Adjustment consists of the following adjustments.

- A4 Local AGC Gain Adjustment
- A4 Local Level Adjustment
- A4 IF Gain Adjustment

— Default Cal Coefficient Adjustment

---

**NOTE**

If your instrument has option 001(A2 DC Bias), perform A2 Adjustment after performing the A4 Adjustment.

- A5 Adjustment (Opt.1D5)

If you replace or adjust A5 Board, perform A5 Adjustment only.

The A5 Adjustment consists of the following adjustment.

— A5 Ref Oven Adjustment (Opt.1D5)

- A2 Adjustment (Opt.001)

If you replace or adjust A2 Board, perform A2 Adjustment only.

The A2 Adjustment consists of the following adjustments.

— A2 DC Bias Voltage Adjustment (Opt.001)

— A2 DC Bias Current Adjustment (Opt.001)

— A2 DC Bias R/C Adjustment (Opt.001)

- Default Cal Adjustment

If you replace A1 or A3 or A4 Board, perform Default Cal Adjustment.

The Default Cal Adjustment consists of the following adjustment.

— Default Cal Coefficient Adjustment

---

**NOTE**

It is necessary to perform the system backup after performing the adjustment so that the system recovery can be performed correctly. For details, refer to “System Backup (for serial prefix JP1KH, JP2KH, and MY432)” on page 149

**Write ID**

Write ID executes writing the serial number and the option information. Perform this procedure whenever you replace EEPROM with new one. This process can not be performed without inputting a password. This password is “ctuKobe”.

**EEPROM Initialize**

EEPROM Initialize executes initializing the EEPROM. When you replace EEPROM with new one, perform this procedure. All Adjustment must be performed after performing this item. This item is included in the “All Adjustment”.

Adjustment  
Adjustment Program

## How to perform the Adjustment Program

The following is the simple procedure to perform the Adjustment Program. For details, refer to the “Operation Manual for E4991A Adjustment Program”.

**Step 1.** If the following equipment is used for the E4991A Adjustment, you need to use Agilent Edit Cal(Calibration Data Editor).

If you don't use the following equipment, go to step 3.

- 8482A Power Sensor

Install the latest version: Rev.A.02.30(as of November 2001)of Agilent Edit Cal before running the Adjustment Program, if it is not installed in your PC. For details, refer to “Operation Manual for Edit Cal”. The program and operation manual for the Edit Cal are downloadable from CTU-Kobe web site.

**Step 2.** Enter the calibration data of the Equipment(8482A) in the Edit Cal.

**Step 3.** Start the Agilent VEE.


**Step 4.** Load the adjustment program file into the Agilent VEE as follows.

1. Pull down the File menu from the Agilent VEE window and select **Open**.
2. Select the file C:\adje4991a\adje4991a.vee and click **Open**.

**Step 5.** You may be asked to add drivers for the equipment during the program loading. Then, click **OK** and the GPIB address for each equipment. Enter 0 as the address for the equipment which are not used for the adjustment. (See Figure 3-4).

Figure 3-4


### Direct I/O configuration

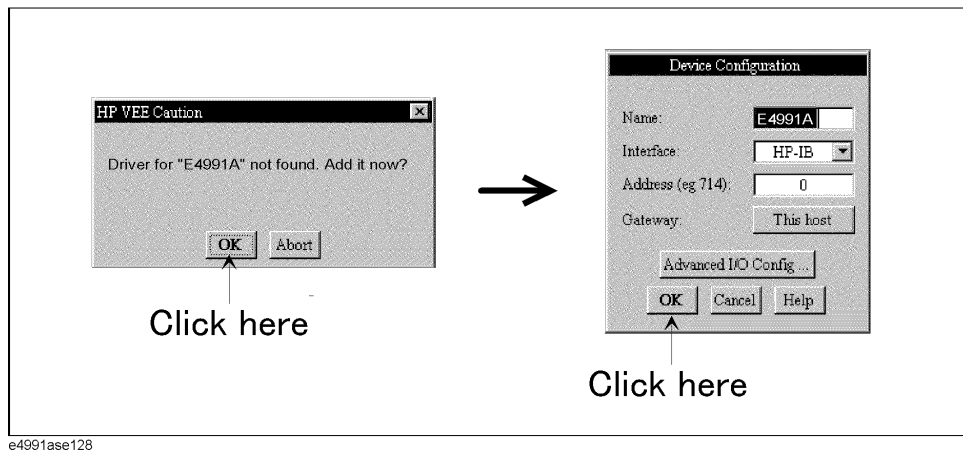

**Step 6.** Click **START** on the Agilent VEE Screen as shown in Figure 3-5.




Figure 3-5 Agilent VEE Screen

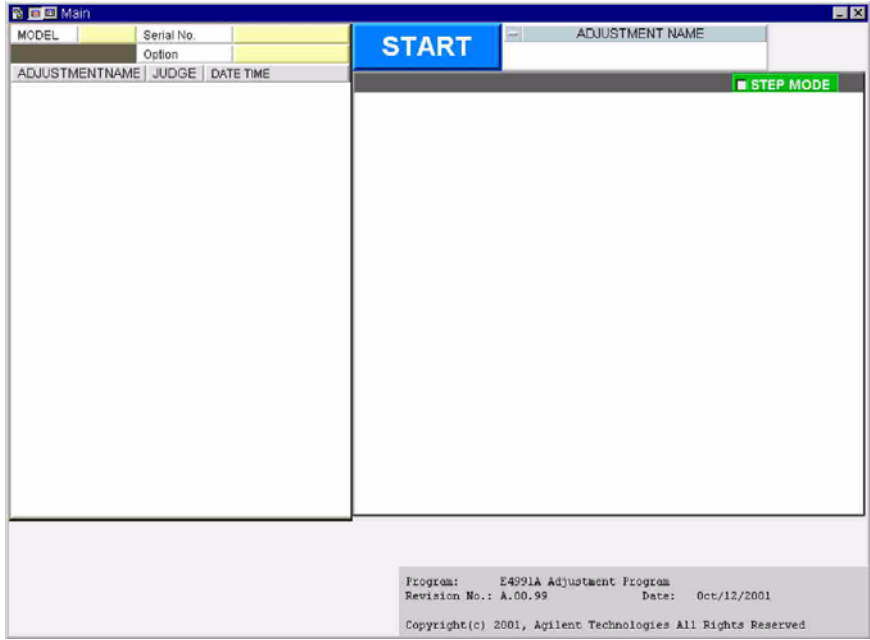

**Step 7.** “ETE Configuration” box is displayed as show in Figure 3-6. Select the model number and the serial number of the equipment and set its GPIB address. In File Folder Setting, enter the path the Adjustment Program installed. Click **Next**, when you complete the settings.

Figure 3-6 ETE Configuration

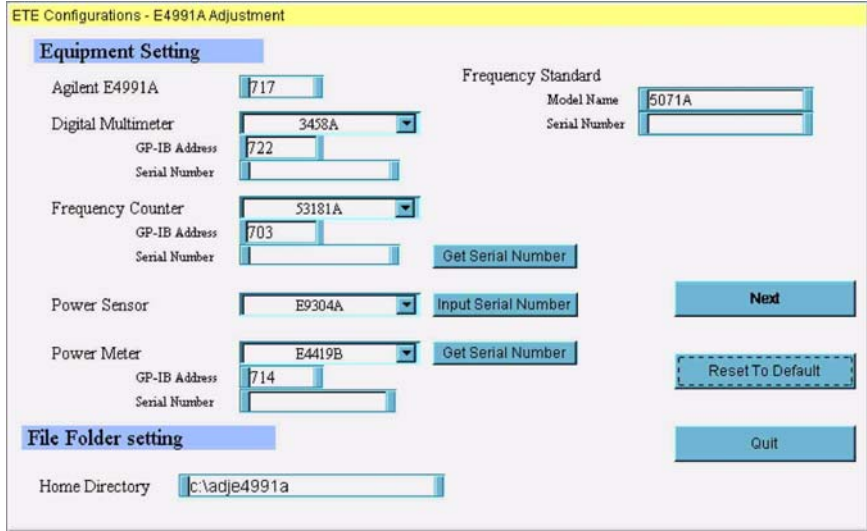

**Step 8.** “E4991A Info and Adjustment Conditions” box is displayed as shown in Figure 3-7. Input the E4991A serial number, option and the test conditions. Generally, use the 16195B Calibration Kit which is a furnished accessory for the E4991A. Click **Next**, when you complete the settings.

3. Adjustment

## Adjustment Adjustment Program

Figure 3-7 E4991A Info and Adjustment Conditions

The screenshot shows a software interface titled "E4991A Info and Adjustment Conditions". It is divided into three main sections:

- E4991A Info and Adjustment Conditions:** Contains a "MODEL" field with the value "E4991A".
- E4991A Serial Number and Option:** Contains input fields for "MainFrame", "Test Head", and "Calibration Kit". Below these are "Options" with checkboxes for "001", "1D5", and "002".
- Adjustment Conditions:** Contains input fields for "Adjusted By", "Customer Name", and "Date". It also features sliders for "Temperature" (set to 23 DEG C) and "Humidity" (set to 50 %). Below these are fields for "Report Number" and "Comment".

At the bottom of the form are two buttons: "NEXT STEP" and "QUIT PROGRAM".

**Step 9.** "Adjustment Program Main Menu" box is displayed as shown in Figure 3-8. For example, click **[F1]All Adjustment**, if you want to perform all adjustments.

Figure 3-8 Adjustment Program Main Menu


The screenshot shows a menu titled "Adjustment Program Main Menu" with several options, each in a colored button:

- [F1] All Adjustment (blue button)
- [F3] Spot Adjustment (light blue button)
- [F5] Write ID (teal button)
- [F6] EEPROM Initialize (teal button)
- [F9] Input Environment Data (pink button)
- [F12] Program End (yellow dashed border button)

When the Spot Adjustment is selected in Main Menu, "Spot Adjustment Menu" box is displayed as shown in Figure 3-9. Then select the corresponding adjustment according to Table 3-2 on page 124.

Figure 3-9

Spot Adjustment Menu

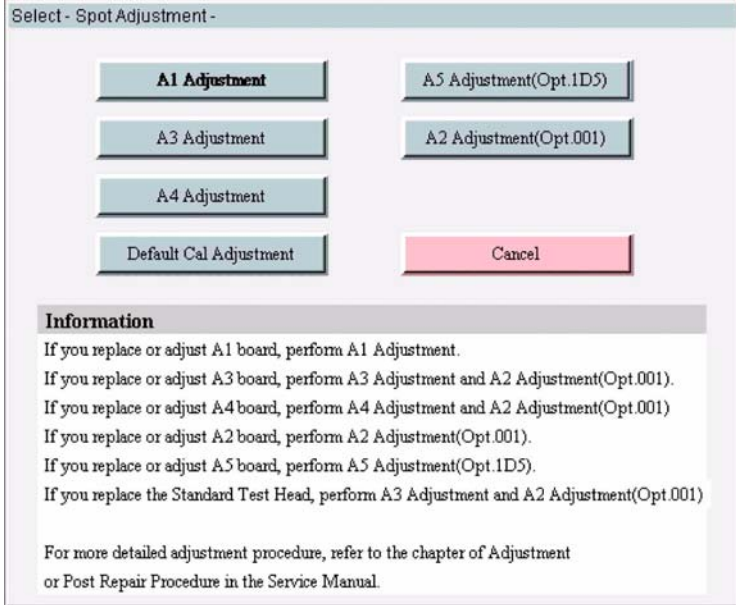

## Initialization of the System Calibration Data

The EEPROM has the system calibration data. When the EEPROM on the A21 Analog Interface Board is replaced, it is necessary to initialize the EEPROM using the “EEPROM Initialize” in the Adjustment Program. All Adjustment must be performed after performing this item. This item is included in the “All Adjustment”. When you encounter the error regarding the EEPROM such as “EEPROM TEST:Fail” or “EEPROM CSUM ERROR”, firstly perform this item to disappear it.

### Required Equipment

Nothing

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the EEPROM Initialize in the Main Menu.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Make sure that nothing is connected to the E4991A.
- Step 4.** Follow the adjustment program instruction to update the correction constant.

---

**NOTE**

All Adjustment must be performed after performing this item.

## A1 VCXO Frequency Adjustment

The purpose of this procedure is to adjust the VCXO on the A1 Reference Oscillator Board.


### Required Equipment

Description	Recommended Model
Frequency Counter	53181A Opt.010 and 030, 53131A Opt.010 and 030 or 53132A Opt.010 and 030
BNC(m)-BNC(m) Cable, 61 cm	p/n 8120-1839

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A1 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Make sure that nothing is connected to the “Ext Ref In” on the E4991A rear panel.
- Step 4.** Connect the instrument as shown in Figure 3-10

**Figure 3-10** A1 VCXO Frequency Adjustment Setup

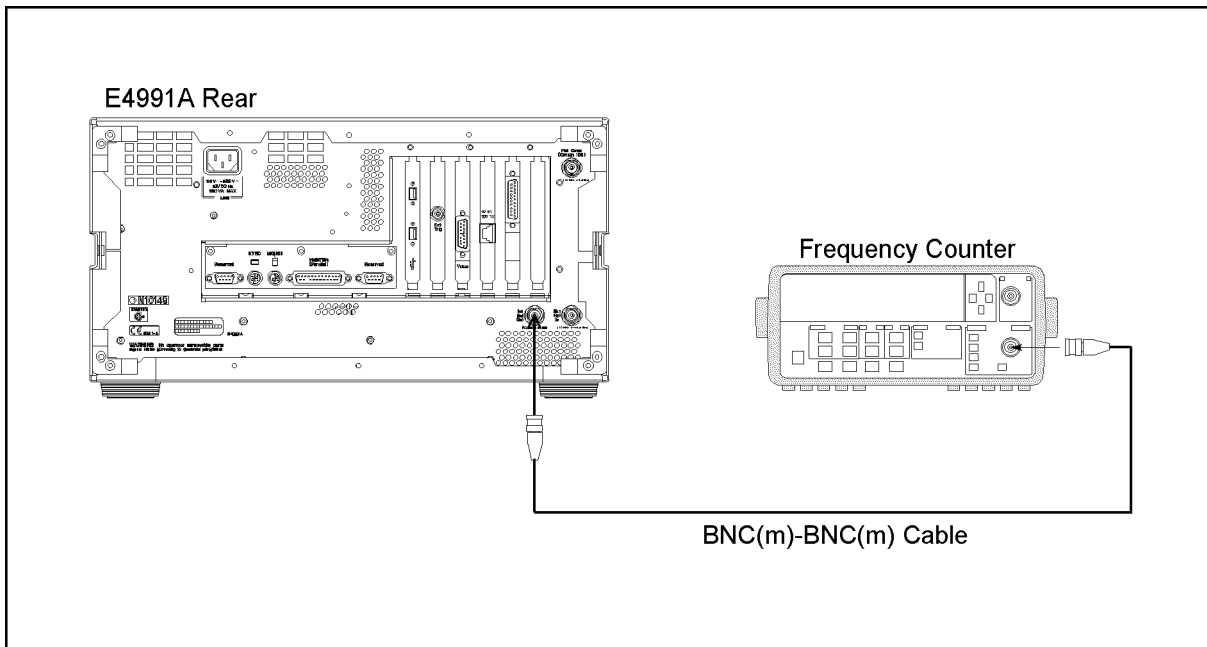

e4991ase010

- Step 5.** Follow the adjustment program instruction to update the correction constant.

## **A3 Local Level Adjustment**

The purpose of this procedure is to adjust the local level on the A3 Source Board.

### **Required Equipment**

Nothing

### **Procedure**

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A3 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Make sure that nothing is connected to the E4991A.
- Step 4.** Follow the adjustment program instruction to update the correction constant.

## A3 Output AGC Gain Adjustment

The purpose of this procedure is to adjust the gain of AGC on the A3 Source Board.


### Required Equipment

Description	Recommended Model
Calibration Kit	16195B(furnished with E4991A)
7mm-N(m) Adapter	11525A

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A3 Adjustment in the Spot Adjustment.  
 It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-11.

**Figure 3-11** A3 AGC Gain Adjustment Setup

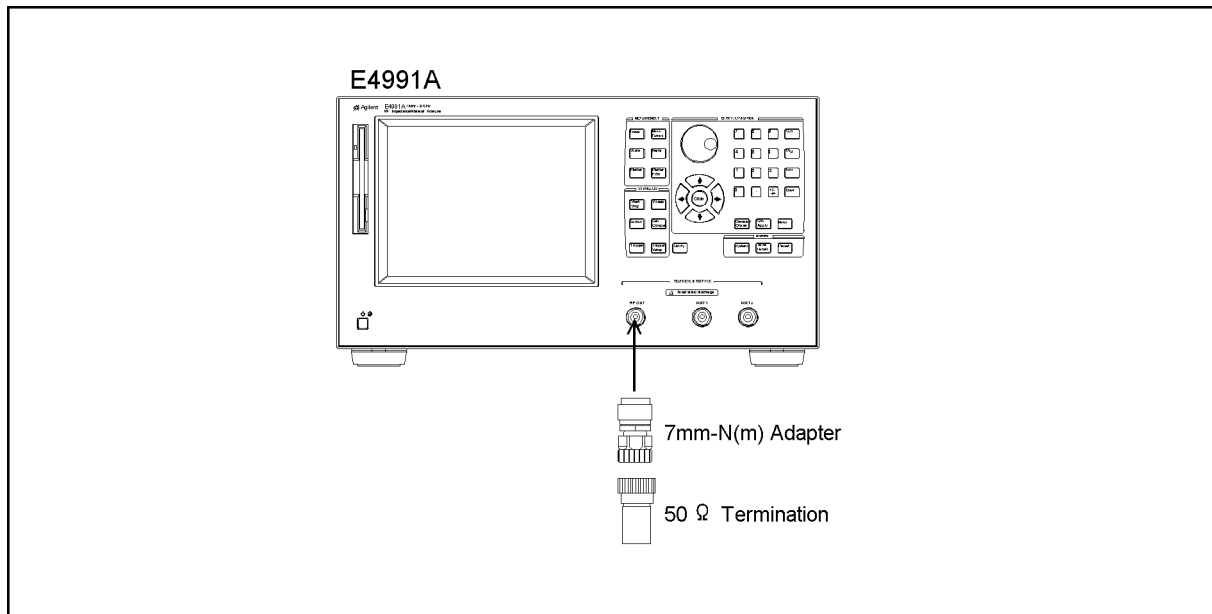

e4991ase016

- Step 4.** Follow the adjustment program instruction to update the correction constant.

## A3 Output Level Adjustment

The purpose of this procedure is to adjust the A3 output level and flatness.

### Required Equipment


Description	Recommended Model
Power Meter	438A, E4418A/B or E4419A/B
Power Sensor	8482A+8481D or E9304A *1
Calibration Kit	16195B
7mm-N(f) Adapter	11524A

\*1. The E9304A cannot be used with the 438A.

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A3 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-12.

Figure 3-12 A3 Output Level Adjustment Setup (1/2)

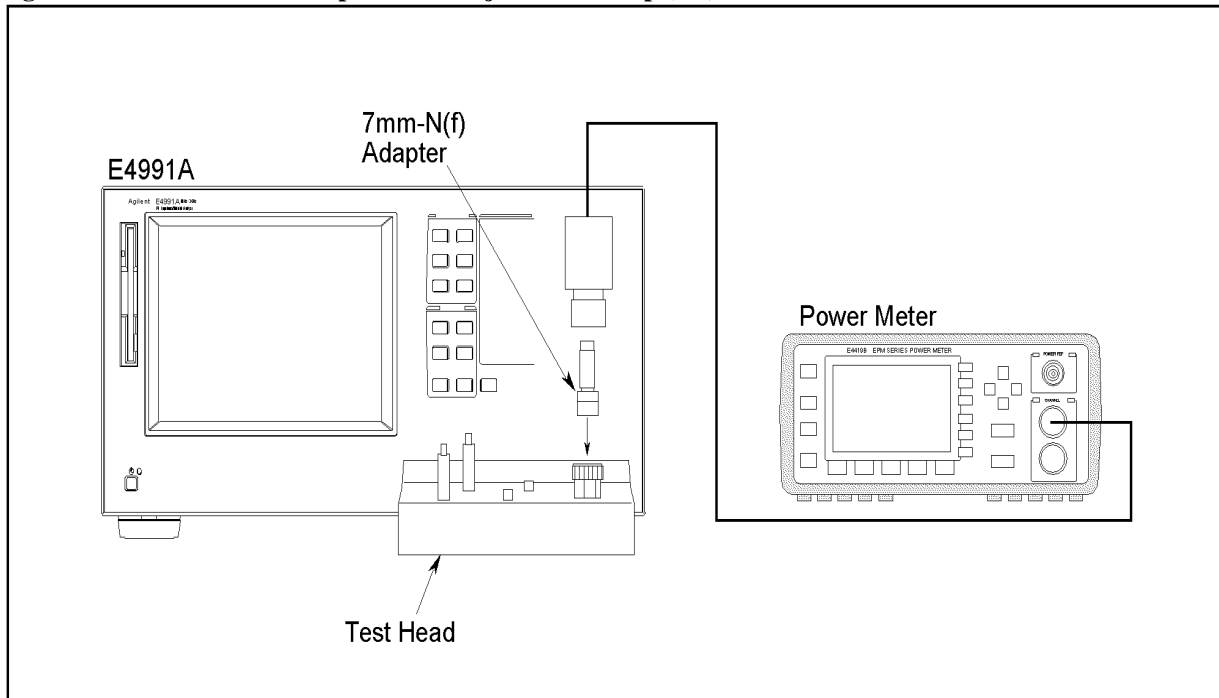

e4991ase005




**Step 4.** Click OK, then wait till the measurement completion.

**Step 5.** Disconnect the power sensor and the adapter from the 7mm connector.

**Step 6.** Connect the instrument as shown in Figure 3-13.

**Figure 3-13** A3 Output Level Adjustment Setup (2/2)

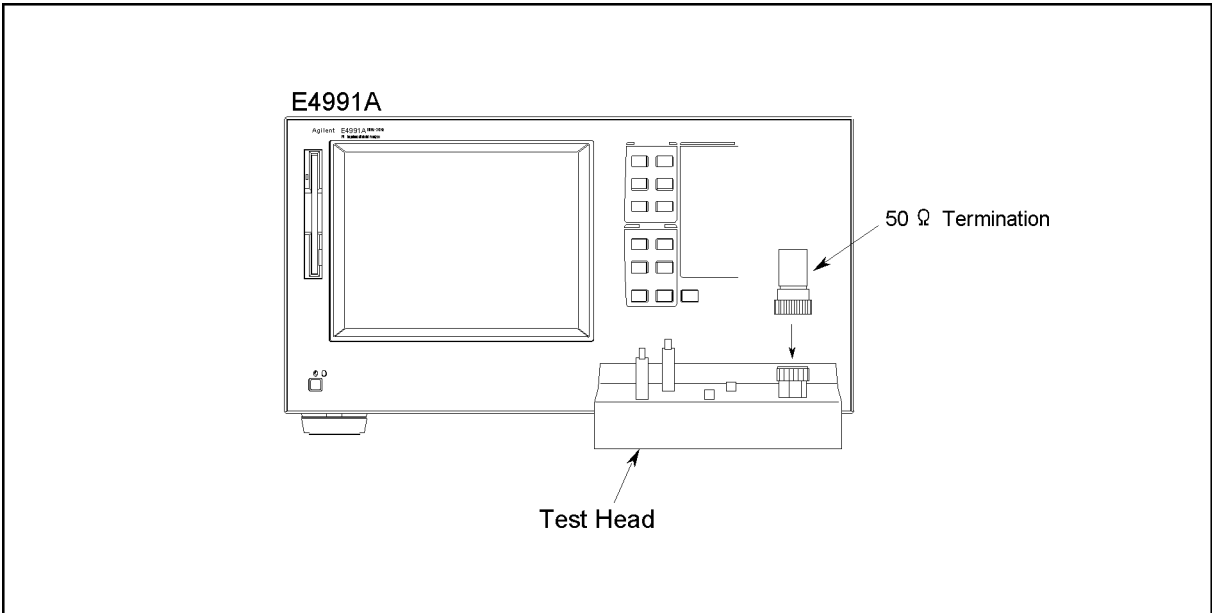

e4991ase009

**Step 7.** Follow the adjustment program instruction to update the correction constant.

## **A4 AGC Gain Adjustment**

The purpose of this procedure is to adjust the Gain of AGC on the A4 Receiver Board.

### **Required Equipment**

Nothing

### **Procedure**

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A4 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Make sure that nothing is connected to the E4991A.
- Step 4.** Follow the adjustment program instruction to update the correction constant.

## A4 Local Level Adjustment

The purpose of this procedure is to adjust the local level in the A4 Receiver Board.

### Required Equipment

Nothing

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A4 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Make sure that nothing is connected to the E4991A.
- Step 4.** Follow the adjustment program instruction to update the correction constant.

## A4 IF Gain Adjustment

The purpose of this procedure is to adjust the IF Gain in the A4 Receiver Board.


### Required Equipment

Description	Recommended Model
Calibration Kit	16195B(furnished with E4991A)

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A4 Adjustment in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-14.

**Figure 3-14** A4 IF Gain Adjustment Setup

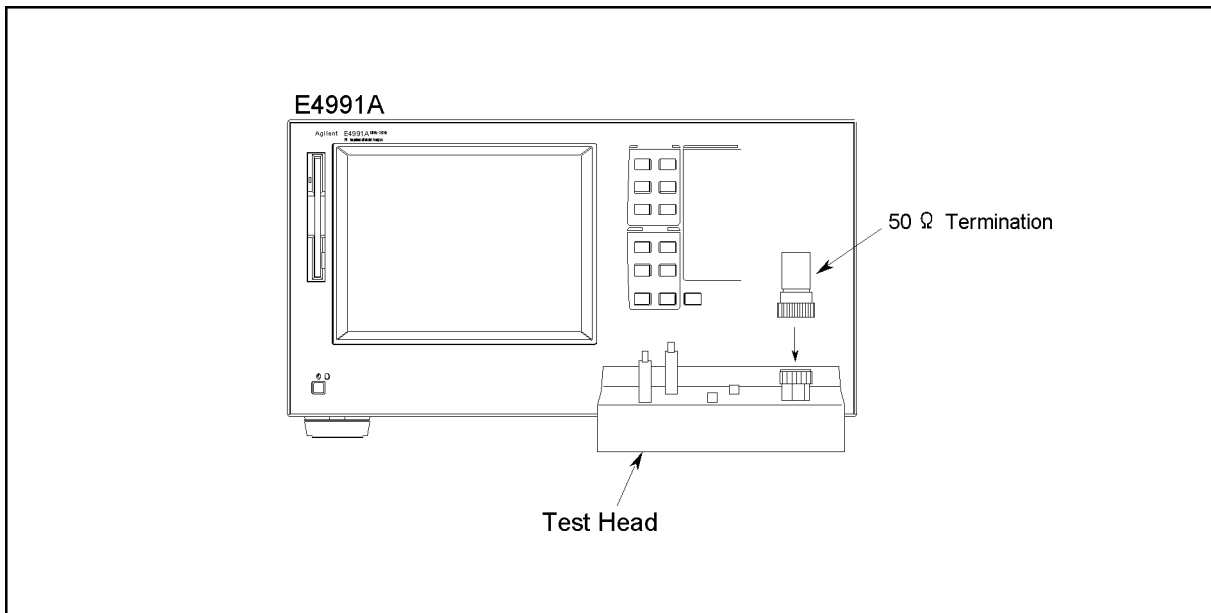

e4991ase009

- Step 4.** Follow the adjustment program instruction to update the correction constant.

## Default Cal Coefficient Adjustment

The purpose of this procedure is to keep the default of the coefficient of calibration.


### Required Equipment

Description	Recommended Model
Calibration Kit	16195B(furnished with E4991A)

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the Default Cal Adjustment in the Spot Adjustment.  
 It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-15.

**Figure 3-15** Default Cal Coefficient Adjustment Setup

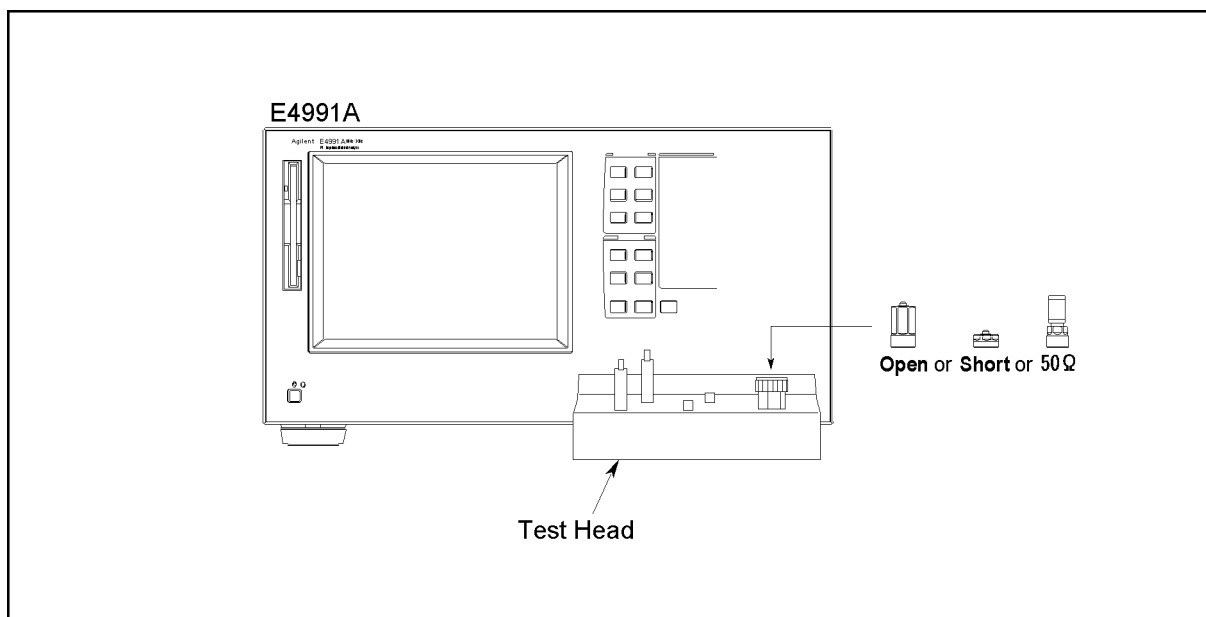

e4991ase018

- Step 4.** Follow the adjustment program instruction to update the correction constant.

---

## **A5 Reference Oven Adjustment (Opt 1D5 only)**

The purpose of this procedure is to adjust the 10MHz high stability reference oscillator (Option 1D5) frequency.


### **Required Equipment**

<b>Description</b>	<b>Recommended Model</b>
Frequency Counter	53181A Opt.010 and 030, 53131A Opt.010 and 030 or 53132A Opt.010 and 030
Frequency Standard	5071A or 5061B
BNC(m)-BNC(m) Cable, 61 cm	p/n 8120-1839
BNC(m)-BNC(m) Cable,122cm	p/n 8120-1840

### **Procedure**

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A5 Adjustment (Opt . 1D5) in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-16.


Figure 3-16 A5 Reference Oven Adjustment Setup

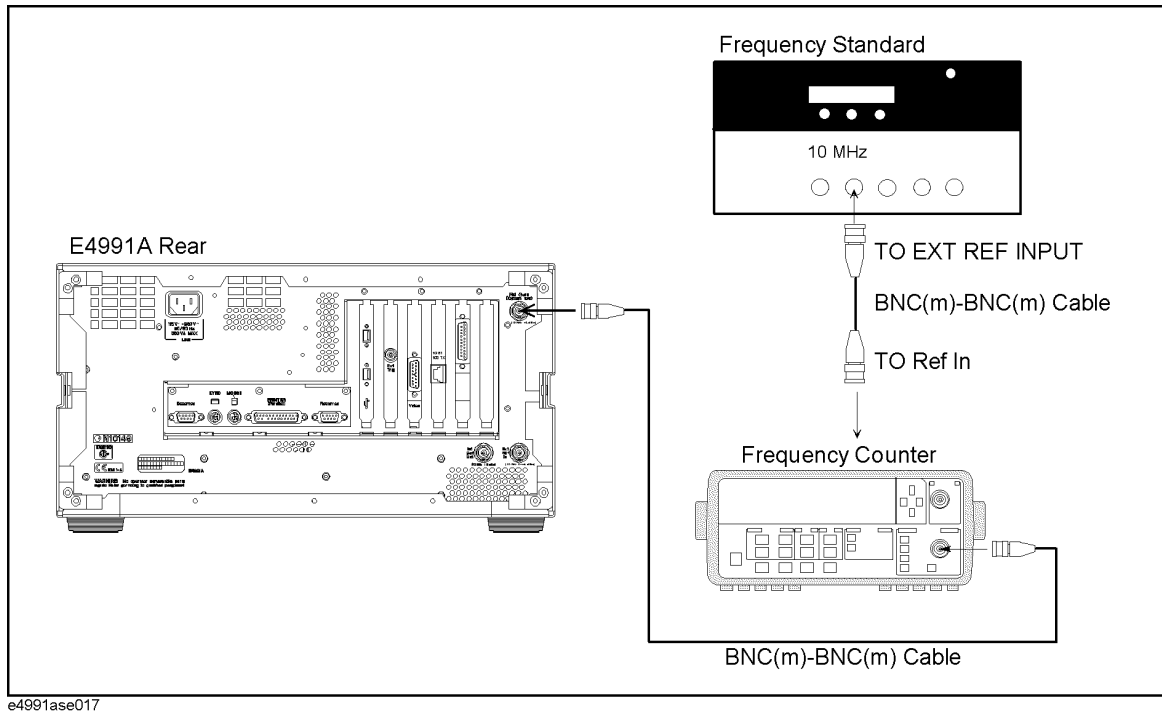

**Step 4.** Follow the adjustment program instruction to update the correction constant.

**Step 5.** Adjust “Reference Oven Adjustment screw” as shown in Figure 3-17 so that the counter reading is  $10\text{MHz} \pm 1\text{Hz}$ , if the counter reading is out of  $10\text{MHz} \pm 1\text{Hz}$ . Then remove side strap handle.

Figure 3-17 Reference Oven Adjustment Screw

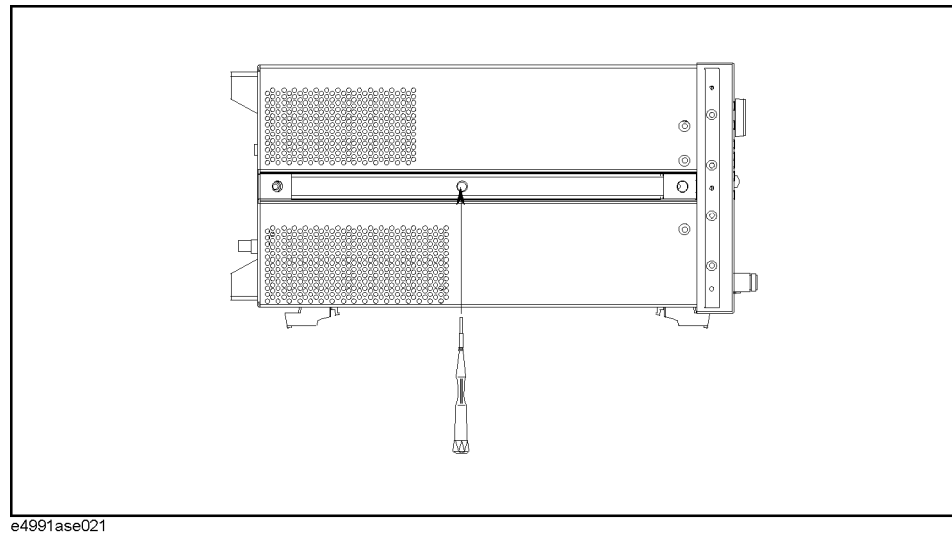

## A2 DC Bias Voltage Adjustment (Opt 001 only)

The purpose of this procedure is to adjust the output voltage and the voltage monitor on the A2 DC Bias Board.


### Required Equipment

Description	Recommended Model
Multimeter	3458A
7mm-N(f) Adapter	11524A
N(m)-BNC(f) Adapter	p/n 1250-0780
BNC(f)-Banana Adapter	p/n 1251-2277
BNC Cable, 61 cm	p/n 8120-1839

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A2 Adjustment (Opt .001) in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-18.

**Figure 3-18** A2 DC Bias Voltage Adjustment Setup

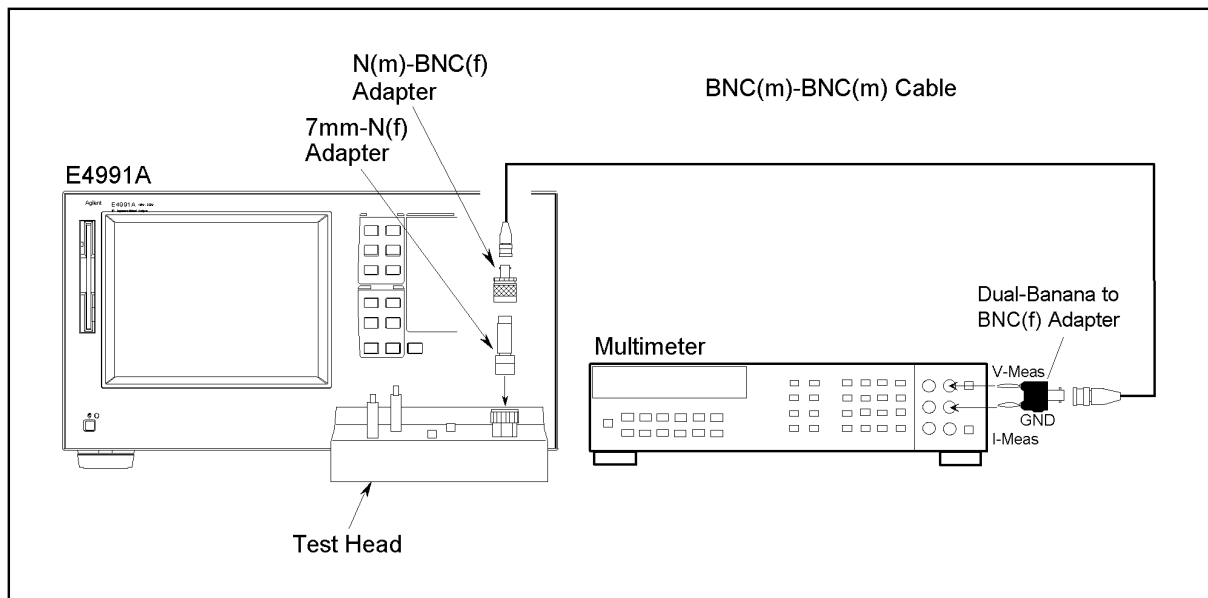

e4991ase014

- Step 4.** Follow the adjustment program instruction to update the correction constant.



## A2 DC Bias Current Adjustment (Opt 001 only)

The purpose of this procedure is to adjust the output current and the current monitor on the A2 DC Bias Board.


### Required Equipment

Description	Recommended Model
Multimeter	3458A
7mm-N(f) Adapter	11524A
N(m)-BNC(f) Adapter	p/n 1250-0780
BNC(f)-Banana Adapter	p/n 1251-2277
BNC Cable, 61 cm	p/n 8120-1839

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A2 Adjustment (Opt . 001) in the Spot Adjustment.  
 It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-19.

**Figure 3-19** A2 DC Bias Current Adjustment Setup

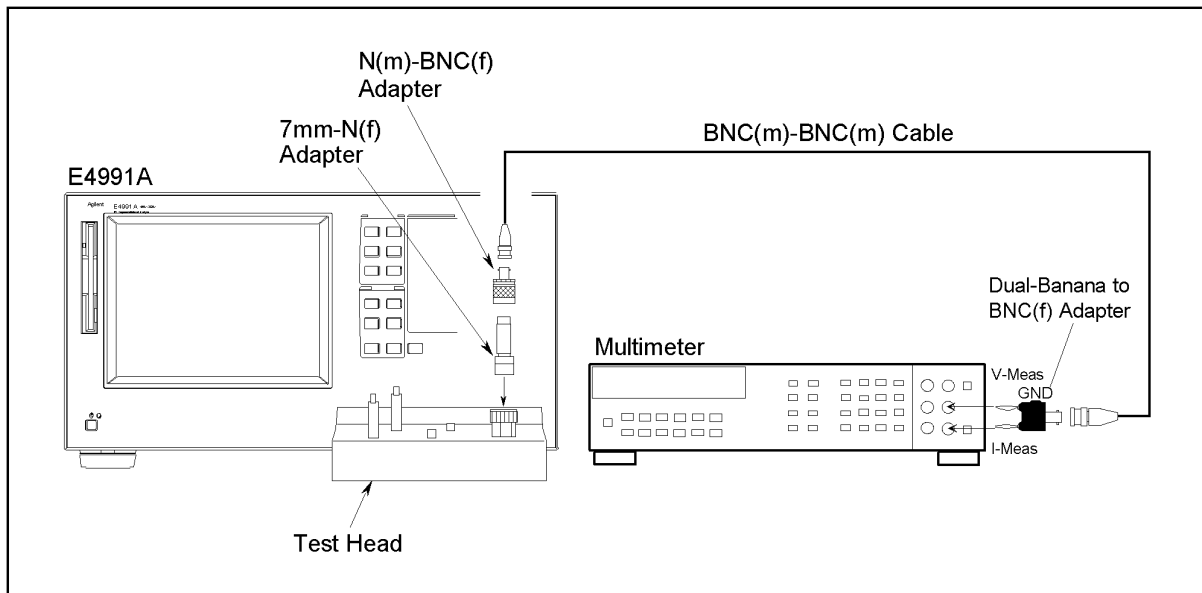

e4991ase013

- Step 4.** Follow the adjustment program instruction to update the correction constant.

## A2 DC Bias Output Resistor/Conductance Adjustment (Opt 001 only)

The purpose of this procedure is to get the output resistor and the output conductance on the A2 DC Bias Board.


### Required Equipment

Description	Recommended Model
Calibration Kit	16195B(furnished with E4991A)


### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose the A2 Adjustment (Opt .001) in the Spot Adjustment.  
It is possible to perform this item with the All Adjustment too.
- Step 3.** Connect the instrument as shown in Figure 3-20 and Figure 3-21.

**Figure 3-20** A2 DC Bias Output R/C Adjustment Setup (1/2)

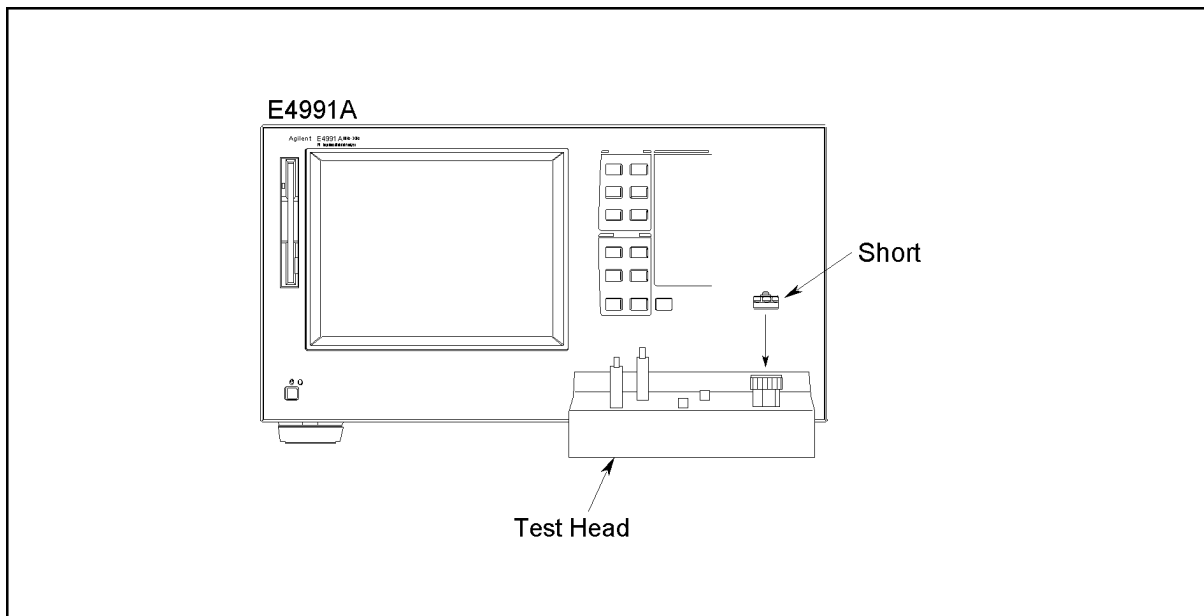

e4991ase019

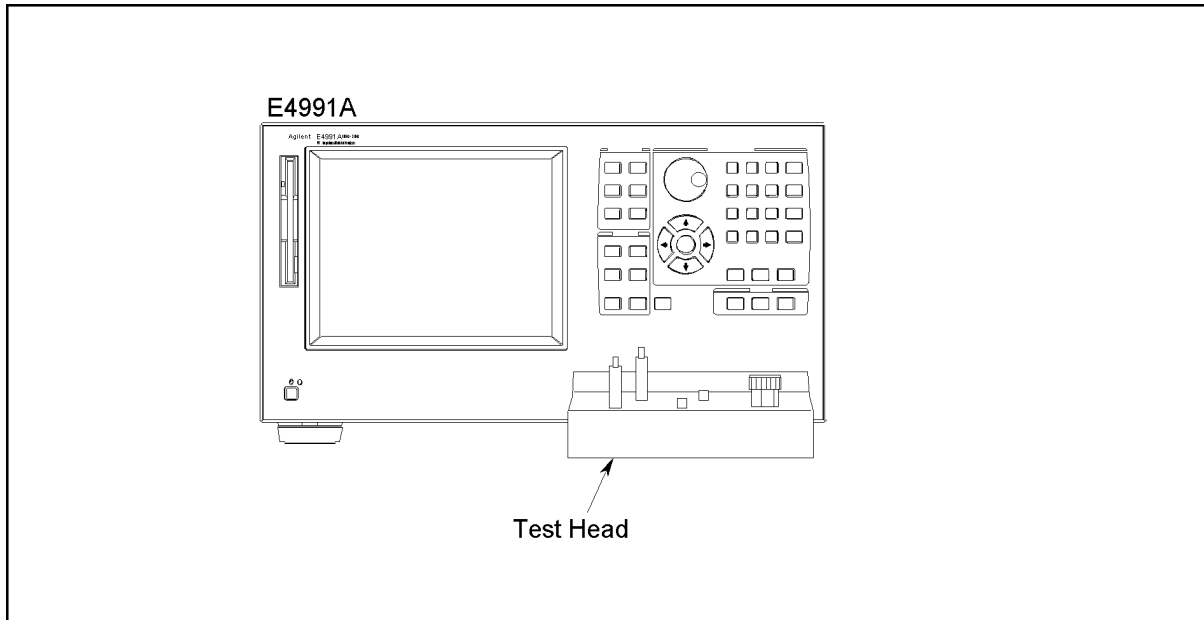**Figure 3-21** A2 DC Bias Output R/C Adjustment Setup (2/2)

e4991ase020

**Step 4.** Follow the adjustment program instruction to update the correction constant.

---

## Writing the Instrument ID

The E4991A has an instrument ID such as a serial number and an option number in the EEPROM. When the option configuration is changed or the EEPROM on the A21 Analog Interface Board is replaced, it is necessary to re-write the instrument ID using the “Write ID” in the Adjustment Program.

### Required Equipment

Nothing

### Procedure

- Step 1.** Run the adjustment program.
- Step 2.** Choose `Write ID` in the Main Menu.
- Step 3.** Make sure that nothing is connected to the E4991A.
- Step 4.** Follow the adjustment program instruction to re-write instrument ID in EEPROM. This process can not be performed without inputting a password. This password is “ctuKobe”.


### How to confirm the E4991A option installed

You can know the E4991A option number and firmware revision by the following E4991A mouse procedure.

- Step 1.** Click **System...** on the E4991A **System** menu.
- Step 2.** Click **About E4991A...**, and then About E4991A dialog box as shown in Figure 3-22 will be open.

Figure 3-22

About E4991A dialog box

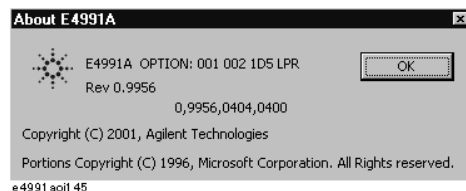

- Step 3.** The E4991A option number and firmware revision are appeared in the dialog box.  
Or, by the following E4991A front panel procedure.
- Step 1.** Press **[System]** key on the E4991A front panel.
- Step 2.** Move the cursor to **About E4991A...** using the arrow key, and press **[Click]** key on the front panel.
- Step 3.** The E4991A option number and firmware revision is displayed in the dialog box.

## **System Backup (for serial prefix JP1KH, JP2KH, and MY432)**

The E4991A has the system files, application files and correction constant data in the C drive of the hard disk. The E4991A also has a backup file in the H drive (Hidden Drive) of the hard disk drive which includes a compression image of the system files, application files, and correction constant data. The System Backup copies the system files, application files and correction constant data in the C drive to the H drive. The correction constant data in the C drive and the EEPROM is updated to new data after performing the adjustment at the same time. It is necessary to perform the System Backup after performing the adjustment so that the System Recovery can be performed correctly. The procedure to perform the System Backup is as follows.

---

**NOTE**

The System Backup must be performed by manual after performing the Adjustment. The Adjustment Program can't perform System Backup.

---

### **How to make a system backup disk**

- Step 1.** Copy the files (copydisk.exe, Backup.bin) which is downloadable from CTU-Kobe web site to the specific directory on the PC.
- Step 2.** Insert a floppy disk in the floppy disk drive of the PC.
- Step 3.** Run the DOS prompt, and change the current directory to the specific directory which includes the above two files.
- Step 4.** Perform the following command. Then, the system backup disk will be made automatically.

“copydisk.exe backup.bin a:“

### **System backup Procedure**

- Step 1.** Connect the external keyboard with the E4991A.
- Step 2.** Insert the above system backup disk in the floppy disk drive of the E4991A.
- Step 3.** Power on E4991A.
- Step 4.** Press **[F]** key on the external keyboard as soon as the AMI BIOS System Configuration Display as shown in Figure 3-23 is displayed after RAM counting.

## Adjustment

### System Backup (for serial prefix JP1KH, JP2KH, and MY432)

Figure 3-23

#### AMIBIOS System Configuration Display

AMIBIOS System Configuration (C) 1985-1997, American Megatrends Inc.,							
Main Processor	:	AMD-K6-2-/400		Base Memory Size	:	640KB	
Math Processor	:	Built-In		Ext. Memory Size	:	64512KB	
Floppy Drive A:	:	1.44 MB 3 1/2"		Display Type	:	VGA/EGA	
Floppy Drive B:	:	None		Serial Port(s)	:	3F8, 2F8	
AMIBIOS Date	:	07/15/95		Parallel Port(s)	:	378	
External Cache	:	512KB,Disabled		Power Management	:	APM, SMI	
ATA(PI) Device(s)	Type	Size		LBA Mode	32Bit Mode	Block Mode	PIO Mode
Primary Master	: Hard Disk	8064MB		LBA	Off	16Sec	4
PCI Devices:							
PCI Onboard Bridge Device				PCI Onboard USB Controller,	IRQ9		
PCI Onboard IDE				PCI Slot 1	Ethernet, IRQ10		
PCI Slot 2	VGA			PCI Slot 3	Unknown Device, IRQ11		

e4991ase069

The contents of the system backup disk are loaded while Figure 3-24 is displayed. After a short time, the system backup start screen as shown in Figure 3-25 is displayed.

Figure 3-24

#### Searching File Display


AMIBIOS System Configuration (C) 1985-1997, American Megatrends Inc.,							
Main Processor	:	AMD-K6-2-/400		Base Memory Size	:	640KB	
Math Processor	:	Built-In		Ext. Memory Size	:	64512KB	
Floppy Drive A:	:	1.44 MB 3 1/2"		Display Type	:	VGA/EGA	
Floppy Drive B:	:	None		Serial Port(s)	:	3F8, 2F8	
AMIBIOS Date	:	07/15/95		Parallel Port(s)	:	378	
Power Management	:	APM,SMI					
ATA(PI) Device(s)	Type	Size		LBA Mode	32Bit Mode	Block Mode	PIO Mode
Primary Master	: Hard Disk	8064MB		LBA	Off	16Sec	4
PCI Devices:							
PCI Onboard Bridge Device				PCI Onboard USB Controller,	IRQ9		
PCI Onboard IDE				PCI Slot 1	Ethernet, IRQ10		
PCI Slot 2	VGA			PCI Slot 3	Unknown Device, IRQ11		

Searching for Boot Record from Floppy..OK

e4991ase070

Figure 3-25

## System Backup Start Screen

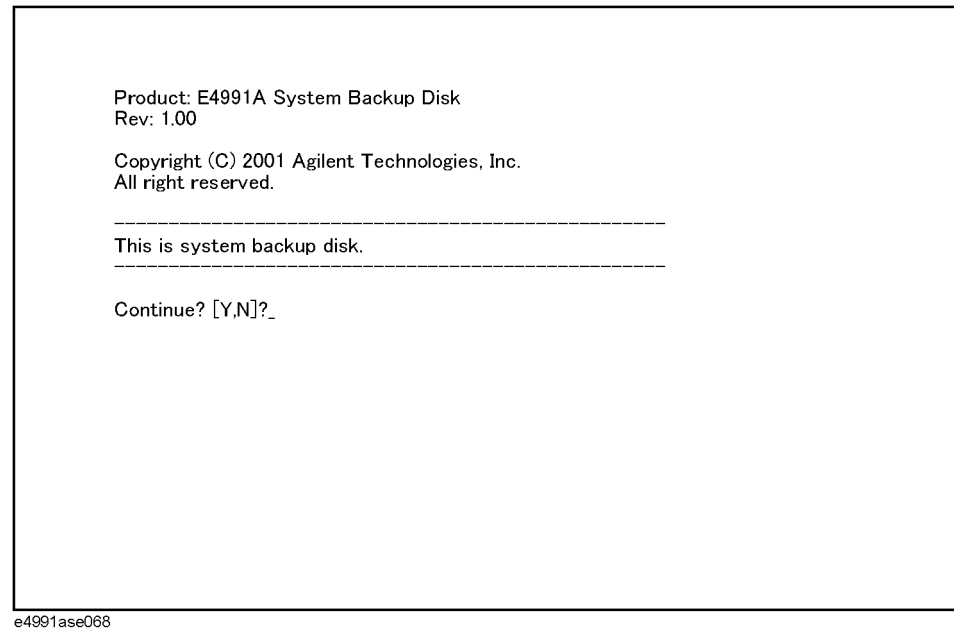

e4991ase068

**Step 5.** Press **[Y]** key on keyboard in the following case.

```
Continue? [Y,N]? Y
```

```
A Backup file is already exist, Overwrite? [Y,N]? Y
```

**Step 6.** Remove the system backup disk from the floppy disk drive after confirming the following display.

```
DONE
```

```
A:\>
```

A:\> is indicated on the screen when the system backup is complete.

**NOTE**

You can confirm if the system backup is complete by the following procedure.

```
A:\> C:
```

```
C:\> dir /a
```

Then, confirm the file size and the time stamp of the following two files.

1. drvspace.000

2. sysbak.dat (the same file size, and the time stamp is the present.)

**Step 7.** Shut down the E4991A by pressing the power switch.

**Step 8.** The E4991A will restart in the system backup complete condition.

**NOTE**

System backup can be suspended without execution by pressing **[N]** instead of **[Y]** Step 5. A:\> is also indicated on the screen after this section is made. Remove the system backup

Adjustment

**System Backup (for serial prefix JP1KH, JP2KH, and MY432)**

\_\_\_\_\_ disk and shut down the E4991A by pressing the power switch.



---

## 4 Troubleshooting

This chapter provides procedure to isolate the failure assembly in the E4991A RF Impedance/Material Analyzer.

## Introduction

---

**WARNING** These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.

---

**WARNING** The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the instrument from its power supply.

---

**CAUTION** Many of the assemblies in this instrument are very susceptible to damage from ESD (electrostatic discharge). Perform the following procedures only at a static-safe workstation and wear a grounding strap.

---

**CAUTION** Do NOT operate without following instructions. Programs or files in the instrument may be broken.

---

## How to exit from the E4991A Measurement View

You need to exit from the E4991A Measurement View to perform the some troubleshooting. The following is the procedure to exit from the E4991A Measurement View.

- Step 1.** Connect the mouse and the external keyboard to the E4991A. Then turn on the E4991A.
- Step 2.** Click **System - Exit** from the menu bar. This opens the **Enter Password to exit** dialog box as shown in Figure 4-1.

Figure 4-1

Enter Password to exit dialog box



- Step 3.** Enter the password: **e4991a** into the **Password** box by using the Enter Password to exit dialog box that appears by clicking the **Keyboard...** button or by using the external keyboard.
- Step 4.** Exit from the E4991A Measurement View by clicking the **OK** button. Then windows desktop screen is displayed.

### NOTE

You have to shut down the E4991A by the following procedure and turn on E4991A after exiting the E4991A Measurement View.

1. Click **Start - Shut Down...**
2. Click the **Shut down** button in the **Shut Down Windows** dialog box to select it.
3. Click the **OK** button.

## To Troubleshoot the Instrument

The primary procedural tool in this section is the flowchart. The flowchart contains entire troubleshooting path from a failed instrument to a working one, and will direct you in an orderly manner through the possible failure symptoms. Reference letters on the flowcharts point to procedural steps that explain the brief instructions in the chart.

### Primary Trouble Isolation

The action in the Primary Trouble Isolation are done without disassembling the E4991A.

**Step 1.** Perform power-up

About few minutes after the E4991A is turned on, the measurement view is displayed on the screen. The display on the screen should be similar to the Figure 4-13, “G: Measurement View,” on page 166.

**Step 2.** Check the display

If there is no display on the LCD after the E4991A is turned on, go to “No Display Troubleshooting” on page 158. If the E4991A stops in booting process in spite of the anything is displayed on the LCD, go to “Booting Process Troubleshooting (for serial prefix JP1KH, JP2KH, and MY432)” on page 161 or “Booting Process Troubleshooting (for serial prefix MY433 and later)” on page 168. The power on self test is performed once automatically after the E4991A measurement view is displayed. If power on self test fails, go to “Troubleshooting Using Internal Test” on page 172.


**Step 3.** Check the Basic Function

If you find the E4991A’s function without measurement part doesn’t work correctly, go to “Function Depend Troubleshooting” on page 175.

**Step 4.** Check the Measurement Function

If you find the measurement function doesn’t work correctly, perform the external test and the performance test. When the external test fails, go to “External Tests Failure Troubleshooting” on page 189. When the performance test fails, go to “Performance Tests Failure Troubleshooting” on page 196.

Figure 4-2 Primary Trouble Isolation Flowchart

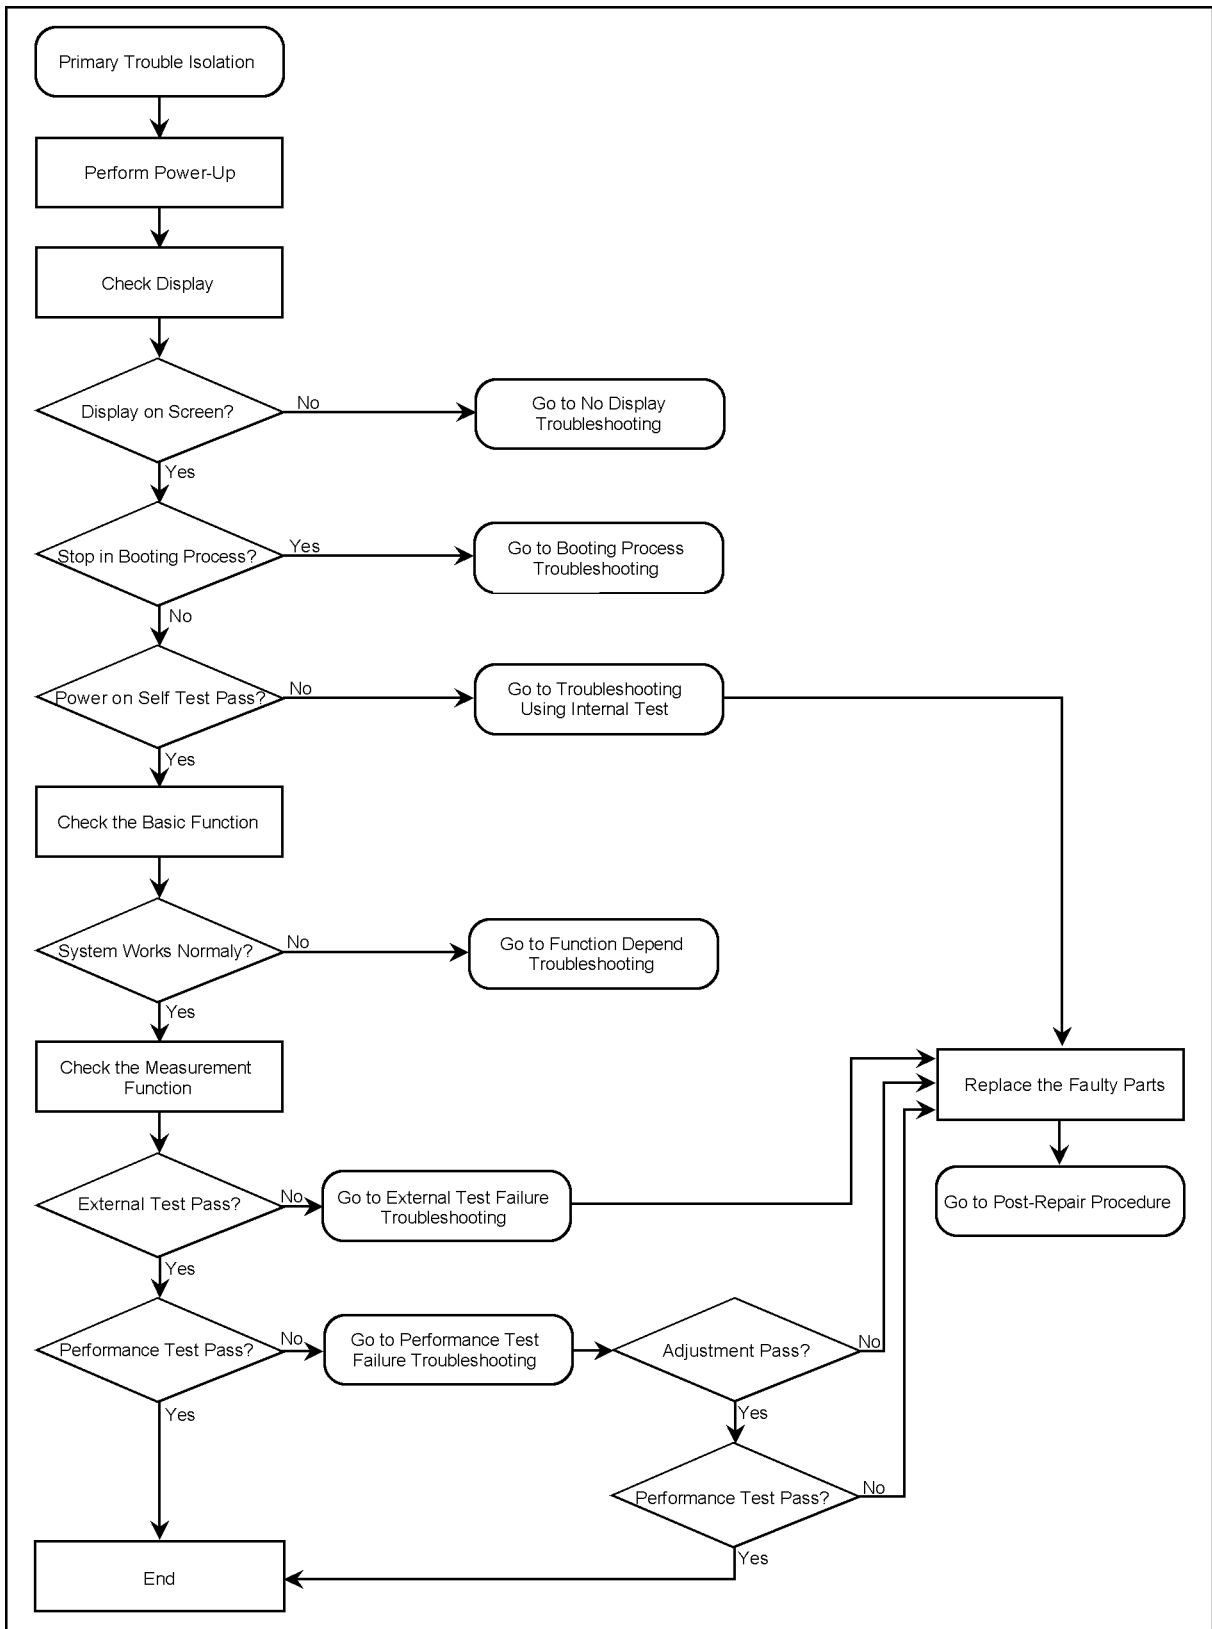

e4991ase051


## No Display Troubleshooting

If you encounter problems which there is no display, isolate the failure part in accordance with the following procedure.

Connect the keyboard to the E4991A rear, and turn the power on. And, start the trouble isolation.

Figure 4-3

No Display Trouble Isolation

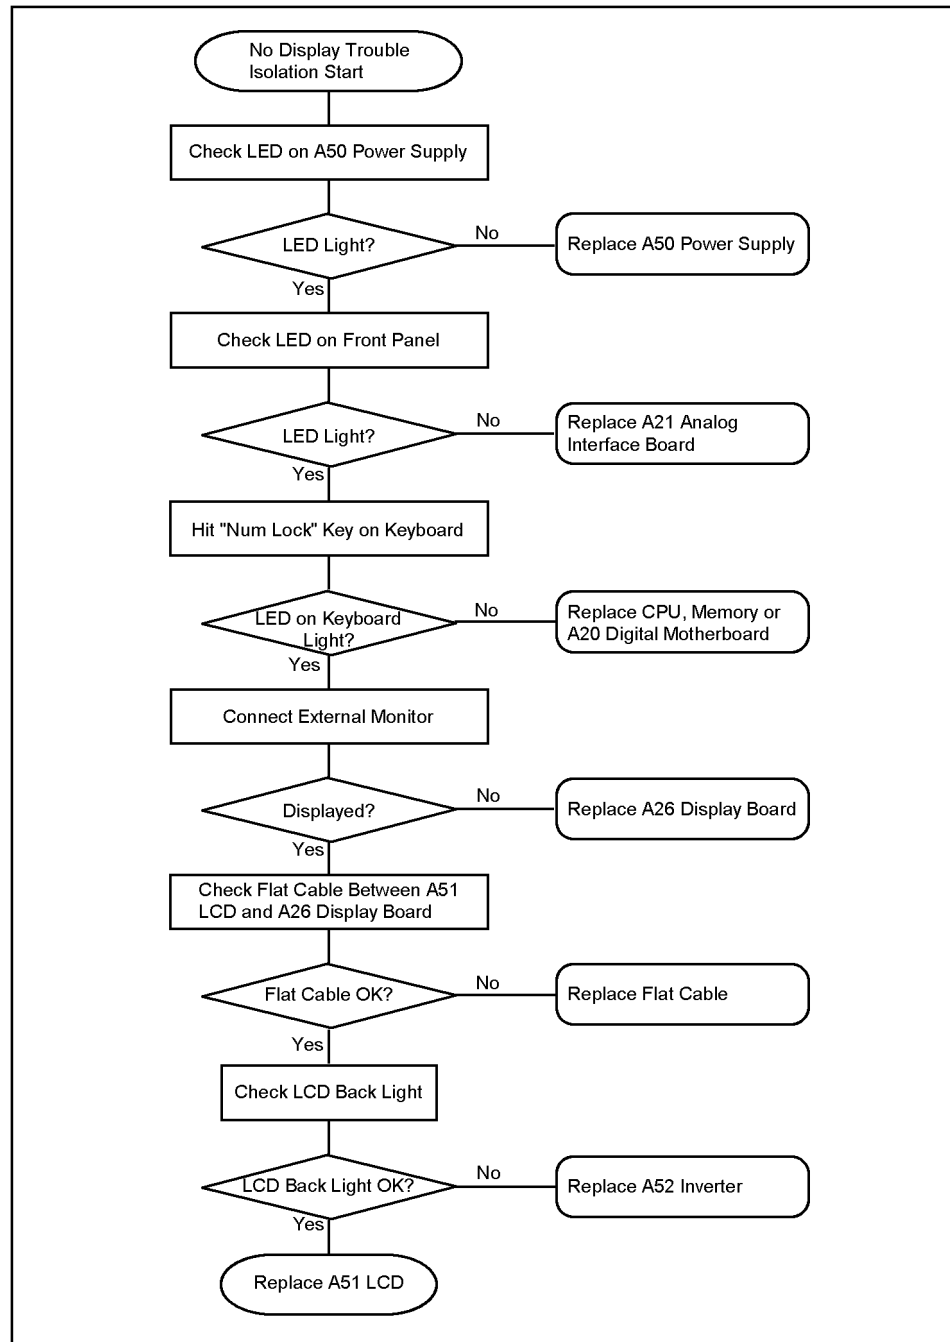

4287ase04012

**Step 1.** Check LED on A50 Power Supply

From the E4991A rear, check the LED inside of the lattice of the rear panel as shown in Figure 4-4. If the LED doesn't light, the A50 Power Supply assembly is failure.

**Figure 4-4**

**LED on the A50 Power Supply**



**Step 2.** Check power LED

If the power LED on Front Panel doesn't light and the fans inside of the E4991A doesn't run, problem seems in the A21 Analog Interface board or the flat cable between the A21 and the A22 Front Panel Keyboard.

If power shutdown occurs immediately after the power LED lights, there is a possibility that the fan stops. The E4991A has three fans inside. There is one CPU fan on the A20 Digital Motherboard. There are two system fans which are secured on the frame. A power shutdown occurs the moment the system fans stops. In this case, remove the E4991A outer cover and make sure whether the fans run or stop.

## Troubleshooting

### No Display Troubleshooting

#### Step 3. Check LED of “Num Lock” key

Hit the “Num Lock” key which is on the keyboard as shown in the Figure 4-5. If the LED doesn’t light, problem seems in the CPU, DIMM (memory), or A20 Digital Motherboard.

**Figure 4-5** LED of the Num Lock key



---

#### NOTE

Make sure of the followings before replacing the CPU, DIMM64MB, or A20.

- Whether CPU, DIMM64MB, and BIOS ROM on the A20 are connection good or not.
  - Whether the jumpers setting on the A20 are correct or not as described in “Configure the Motherboard” on page 198.
  - Whether BIOS options are correct or not as described in “To Confirm or Set the BIOS Options” on page 200.
- 

#### Step 4. Checking with the external monitor

Connect an additional VGA monitor to the VIDEO output on the E4991A rear panel.

- If something is displayed on the external monitor, problem is around the LCD.
- If nothing is displayed even on the external monitor, problem seems in A26 Display board or around the A20 Digital Motherboard.

#### Step 5. Check Flat Cable

Check a flat cable between A51 LCD and A26 display board.

#### Step 6. Check around the Back Light


Check A52 inverter board and cable between A52 and A26 and cables between A51 LCD and A52.



## Booting Process Troubleshooting (for serial prefix JP1KH, JP2KH, and MY432)

Figure 4-6

Booting Process

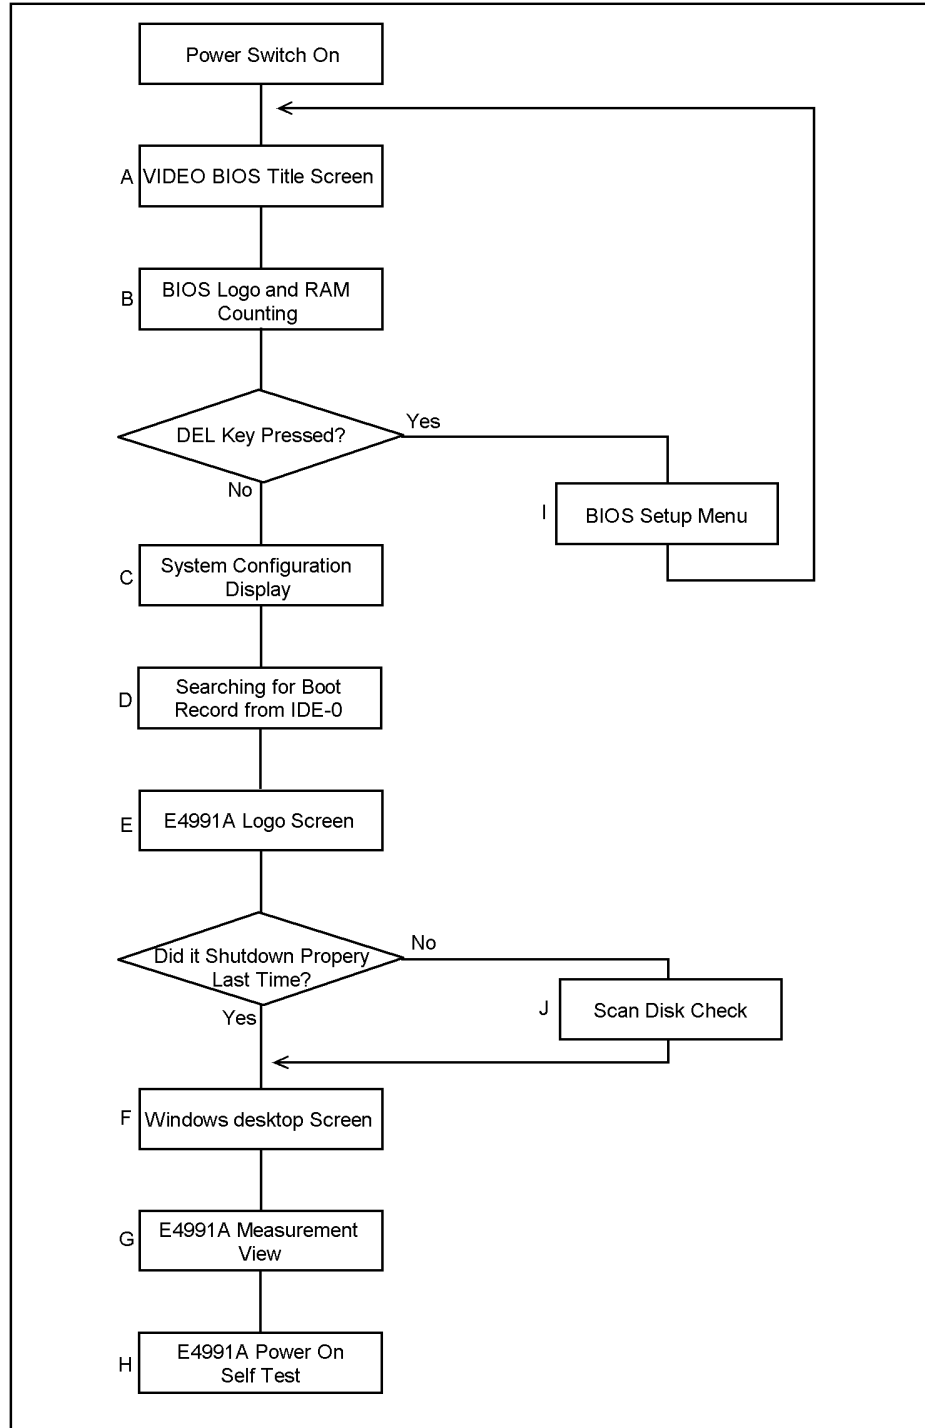


e4991ase033

**Step 1.** Video BIOS Boot

Video BIOS title screen shown in Figure 4-7 is displayed first, when the E4991A turned on. If the Video BIOS title screen doesn't displayed, go to "No Display Troubleshooting" on page 158.

**Figure 4-7**

**A: Video BIOS Title Screen**

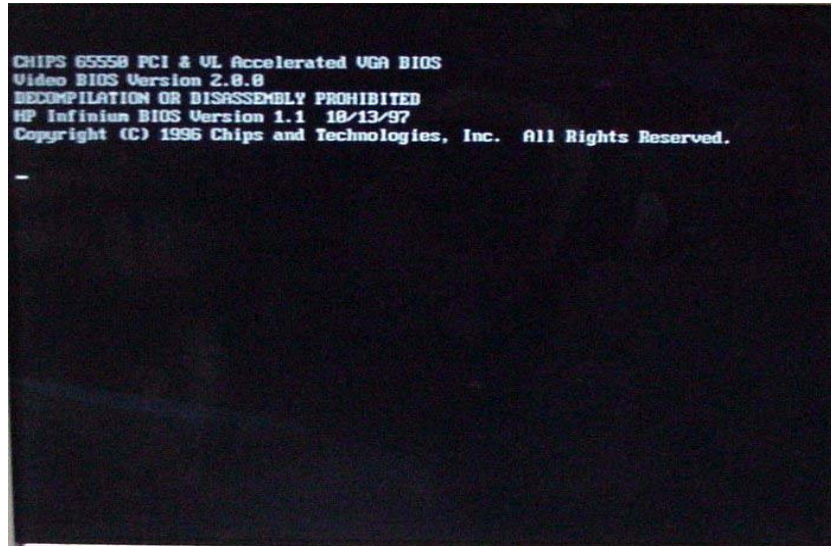

**Step 2.** BIOS, RAM Counting

BIOS logo screen shown in Figure 4-8 describes the BIOS name, model number of the Digital Motherboard, CPU type and RAM size on the Digital Motherboard, and type of the Mass Storage.

If the message is displayed, you can assume that A20 Digital Motherboard, CPU and DIMM64MB are functioning correctly.

If the E4991A stops during checking RAM, you can assume problem is in the A20, or DIMM64MB.

---

**NOTE**


Hit **[Delete]** key on the external keyboard as soon as the message of "Hit DEL if you want to run SETUP" is displayed during RUM counting, if you want run the BIOS setup utility.

It is able to be the followings using the BIOS setup utility. For details of the BIOS options the E4991A is specified, refer to "To Confirm or Set the BIOS Options" on page 200.

- to set the system date and time
  - to change the first boot device (if you want to boot from floppy disk, it is necessary to change it.)
  - to confirm the BIOS options
-

Figure 4-8

## B: BIOS Logo and RAM Counting

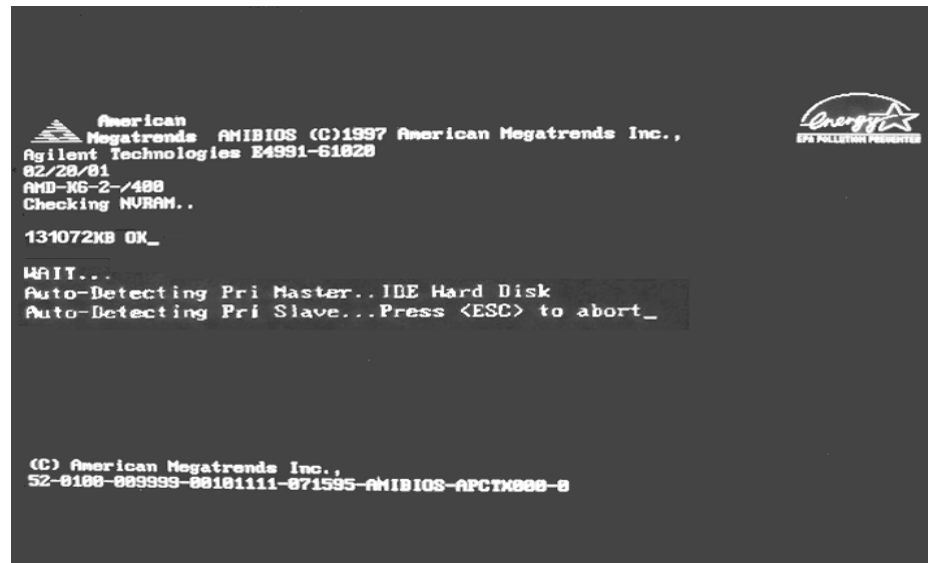**Step 3.** System Configuration

The BIOS checks the E4991A configuration and displays it shown in as Figure 4-9. Three PCI boards, A21, A25, and A26 can be confirmed like below.


- “PCI Slot 1 : Ethernet” is A25 LAN board
- “PCI Slot 2 : VGA” is A26 Display board
- “PCI Slot 3 : Unknown Device” is A21 Analog Interface board

If the BIOS couldn’t detect above boards caused by hardware problem or poor connection, nothing is displayed there. In addition, the BIOS can not check the operation of the above boards. When nothing is displayed there, doubt first whether a PCI slot connection is poor or not.

But A24 GPIB board can’t be confirmed because it is on the ISA slots.

Figure 4-9

C: System Configuration

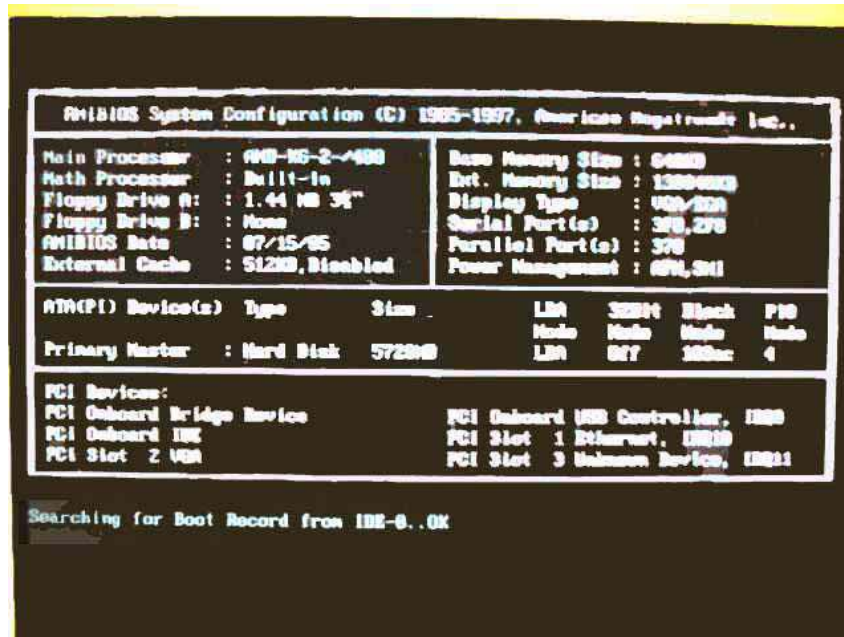


Step 4. Searching for Boot Record

A message of “Searching for Boot Record from IDE-0..OK” shown in Figure 4-9 is displayed after system configuration is displayed when the E4991A starts to boot from the A27 Mass Storage (IDE-0) without problem. However, a message of “Drive Not Ready” shown in Figure 4-10 is displayed when the E4991A could not boot from it. In this case, the E4991A may have a problem around the A27.

Figure 4-10

D: message of Hard Disk not ready

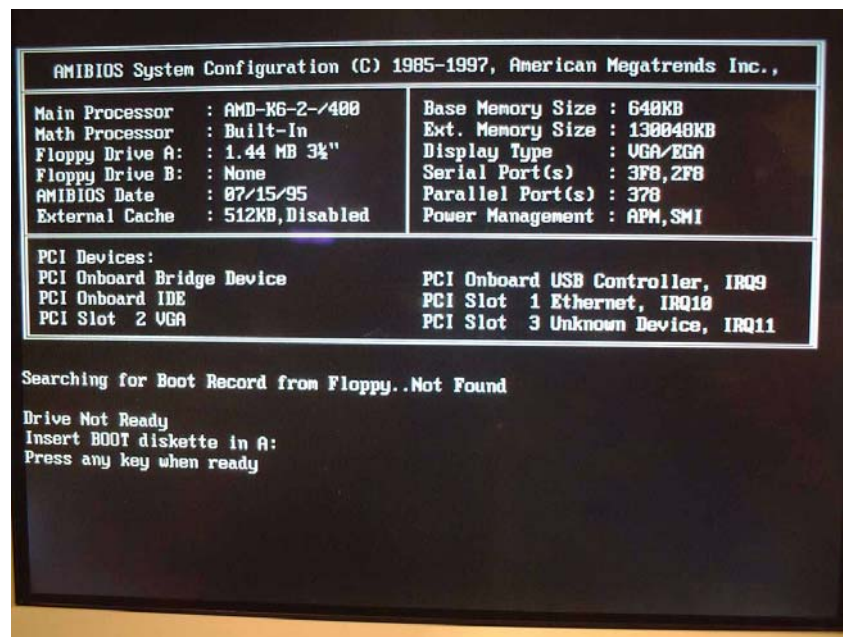


**Booting Process Troubleshooting (for serial prefix JP1KH, JP2KH, and MY432)**

You can check whether the A27 gives hardware problem or not using BIOS setup utility as shown in Figure 4-11. For details of how to run the BIOS setup utility, refer to “Run the BIOS setup utility” on page 200.

Move the cursor to “Auto-Detect Hard Disks” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-11 is displayed.

**Figure 4-11** Auto-Detect Hard Disks page

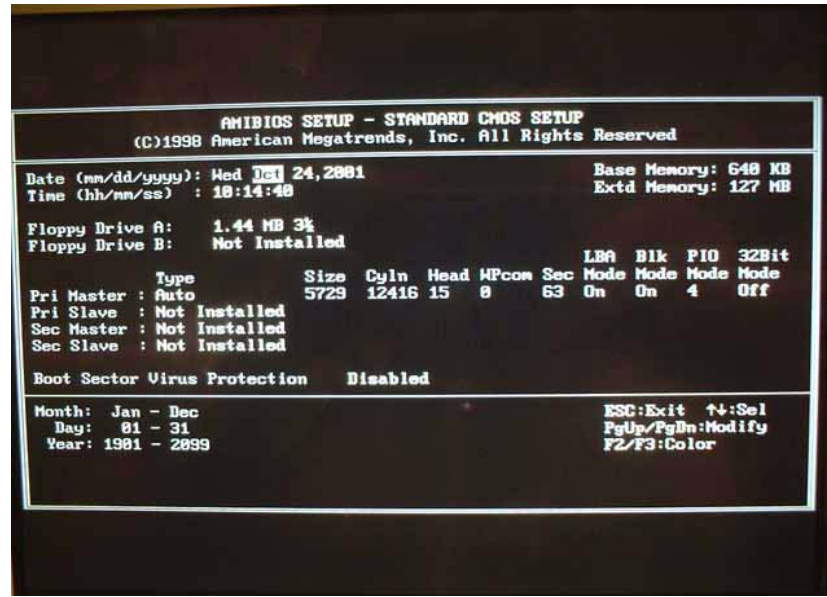

The E4991A has an A27 (hard disk drive) which is connected to the IDE1 connector on the A20 Digital Motherboard. The disk size, cyln and so on are displayed as shown in the Figure 4-11 as soon as the mass storage is detected. If the mass storage is not detected, “Not Installed” is displayed on “Pri Master” right. In this case, check the flat cables first which are connected with the A27 and the A20 via the A26 Display board. If the flat cables are ok, replace the A27.

**Step 5.** E4991A Logo Screen

Files of the E4991A logos are in A27 Mass Storage. If the logos are displayed, the A27 works.

**NOTE**

If the E4991A was turned off without shutdown process, Microsoft Scandisk run after E4991A logo is displayed. If serious trouble is found in the scan disk, reinstall the operating system. For details of the system installation, refer to Appendix B, “System Installation for A27 Mass Storage,” on page 313. And if the operating system still doesn’t boot properly after reinstallation, A27 has to be replaced physically.

And, you encounter the following problems, try to reinstall the operating system before replacing the A27.

- “xxx file is missing” is displayed on the DOS screen.
- The E4991A logo screen is not displayed after “Searching for Boot Record from IDE-0 .. OK” is displayed.
- Windows always boots with Safe Mode.

**NOTE**

To use the E4991A functions are necessary to install its device drivers to the operating system. The Agilent factory installs the necessary device drivers to the E4991A (operating system) and ship it. The operating system checks the necessary device drivers. When the operating system doesn't detect them, the message box is displayed. You need to prepare the device driver and to install it, if you experience the above situation.

**Figure 4-12**

**E: E4991A Logo Screen**




During the logo screen is displayed, an operating system (Windows 98) is loaded from A27 to DIMM64MB.

**Step 6. Measurement View**

The measurement View as shown in Figure 4-13 is displayed after the E4991A firmware is loaded without problem.

**Figure 4-13**

**G: Measurement View**

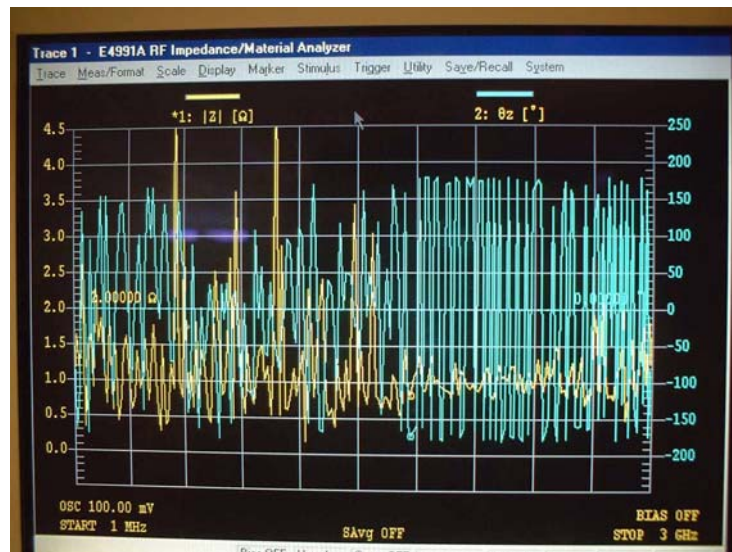

**Step 7.** Power On Self Test


The power on self test is executed once automatically before the measurement starts. For details, refer to “Troubleshooting Using Internal Test” on page 172. In addition, a message of the “Internal Test In Progress...” is displayed during the power on self test in progress. If an hang-up occurs during the power on self test, problem seems in analog block such as A1 Reference OSC, A3 Source, A4 Receiver or A2 DC Bias(Opt.001).

## Booting Process Troubleshooting (for serial prefix MY433 and later)

Figure 4-14 represents the booting process flow in the E4991A. If the E4991A stops in the booting process, troubleshoot using the following step-by-step procedure.

Figure 4-14

Booting process flowchart

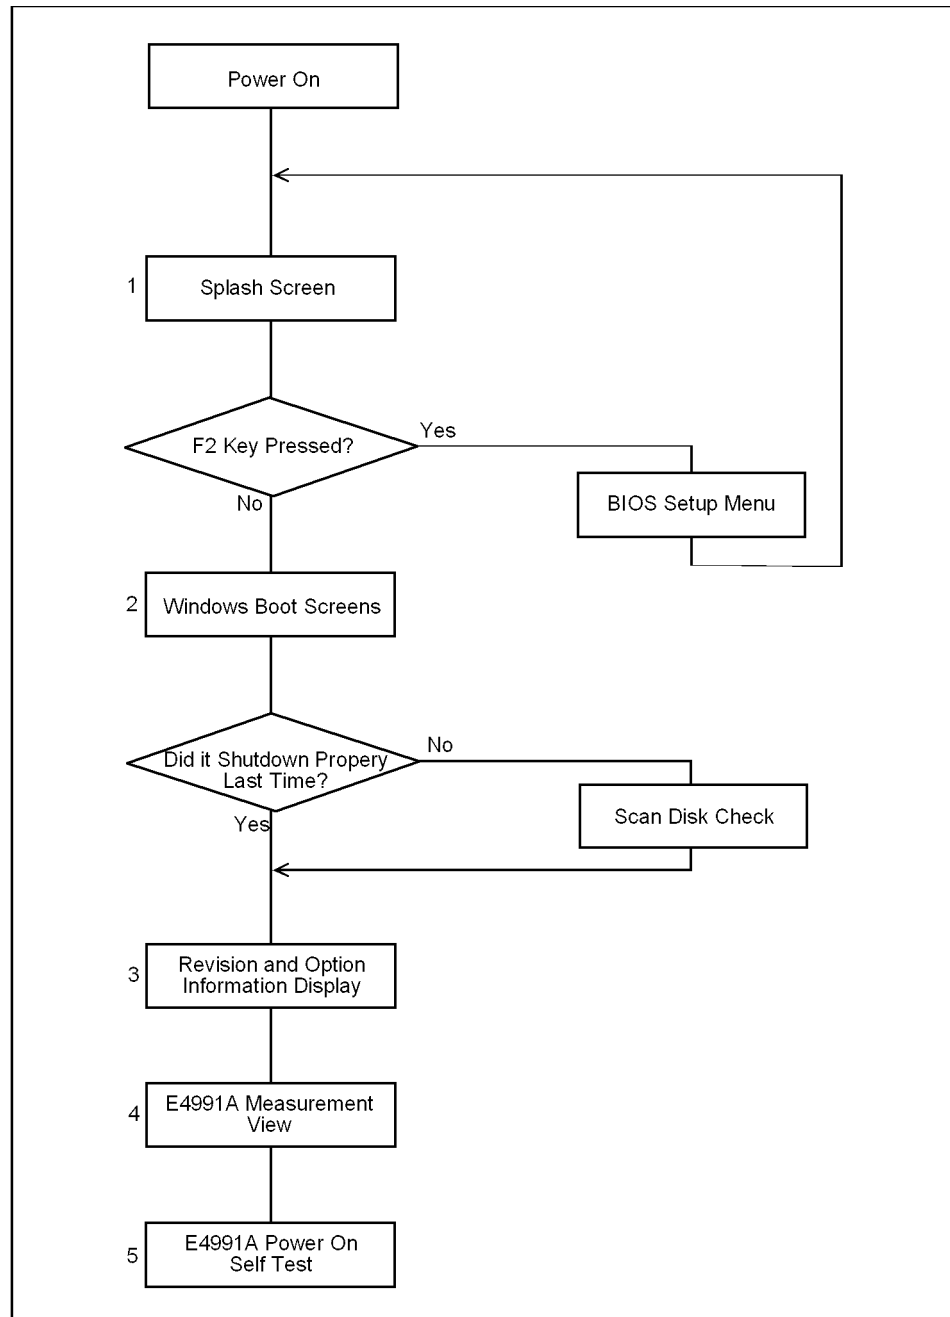



**Step 1.** Splash Screen

The splash screen is displayed with Agilent logo as shown in Figure 4-15.

If the splash screen is displayed, you can assume that the A20 digital motherboard is functioning correctly.

---

**NOTE**

While the splash screen is displayed, if you want to run the BIOS setup utility, push F2 key as soon as in the screen.


---

**Figure 4-15****Splash Screen****Step 2.** Windows boot screens

The Windows boot screens are displayed. The Windows boot screens consists of two screens. Each screen is displayed in the order as shown in Figure 4-15. If the Windows boot screens are displayed, it is assumed that the A27 HDD works. While the Window screens are displayed, Windows operating system is starting up.

Figure 4-16

Windows boot screens

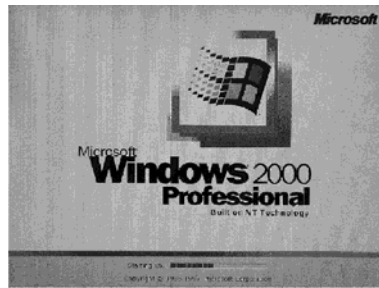

e5061ase051

If you encounter the following problems, try to reinstall the operating system before replacing the A27.

- "xxx file is missing" is displayed on DOS screen.
- The Window boot screen is not displayed after the splash screen is displayed.
- Windows always boots up with Safe Mode.

---

**NOTE**

If the E4991A was turned off without shutdown process, Microsoft Scandisk runs while the windows boot screens are displayed. If a serious problem is found in the scandisk, reinstall the operating system. For details of the operating system installation, refer to Appendix B, "System Installation for A27 Mass Storage," on page 313. If the operating system still doesn't boot up properly after reinstallation, replace the A27.

---

**NOTE**


The operating system automatically checks the device drivers, which are necessary to use the E4991A functions and are installed in the system before the E4991A is shipped from Agilent factory. If the operating system doesn't detect them, a message box is displayed. In this case, install the device driver.

---

**Step 3.** Measurement view

The measurement view as shown in Figure 4-17 is displayed after the system initialization is completed without problem.

Figure 4-17 Measurement view

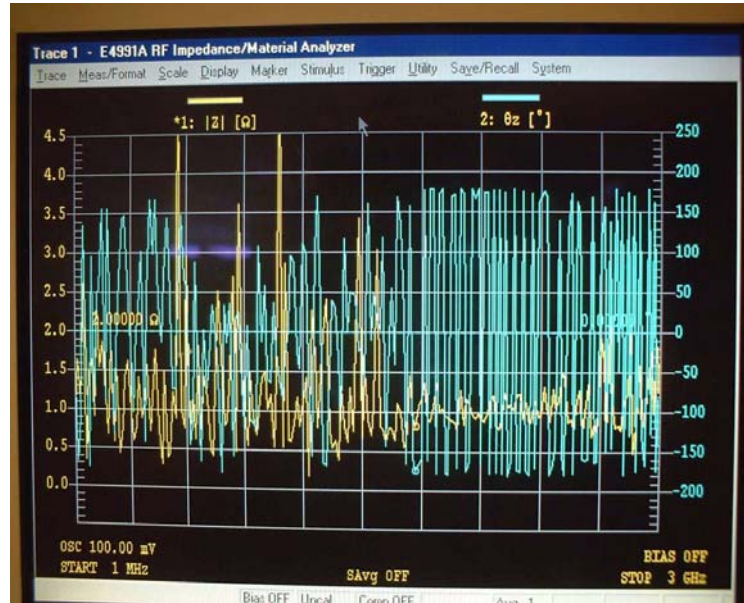

**Step 4. Power On Self Test**

The power on self test is executed once automatically before the measurement starts. For details, refer to “Troubleshooting Using Internal Test” on page 172. In addition, a message of the “Internal Test In Progress...” is displayed during the power on self test in progress. If an hang-up occurs during the power on self test, problem seems in analog block such as A1 Reference OSC, A3 Source, A4 Receiver or A2 DC Bias(Opt.001).

## Troubleshooting Using Internal Test

### Power On Self Test

The E4991A performs the power on self test once after the E4991A is turned on. When the failure part is detected in the E4991A, a message of the “Power on test failed” is displayed. The content of the power on self test is same as the internal test.








### PLL unlock

When phase lock loop doesn't work in the E4991A, not “Power on test failed” but “PLL unlock” is displayed.

- If you use the external reference signal (Opt.1D5), check to see if it is correct. If you use the correct signal or you don't use it, there is a possibility to need repair and/or adjustment.
- When the E4991A is turned on from cold, “PLL unlock” is displayed during few time very occasionally because warm-up time is not enough. If “PLL unlock” is displayed continuously after warm-up, there is a possibility to need repair and/or adjustment. There is a possibility that A1 Reference OSC or A3 Source or A5 10MHz Oven(Opt.1D5) gives problem.

### To Execute the Internal Test

If the “Power on test failed” is displayed after the E4991A is turned on, you should perform the internal test to isolate the faulty assembly. You can execute the internal test by the following procedure.

- Step 1.** Press **[Menu]** on the front panel.
- Step 2.** Select System Menu using  key.
- Step 3.** Select **Diagnostic** using  key and press  key.
- Step 4.** Select **Internal Test** using  key and press  key.
- Step 5.** Select **Test Start** using  key and press  key in the internal test menu.

### Internal Test

The internal test contains the following two tests.

- Analog Test  
This is the test to check the function related to the analog section. When the analog test fails, “Analog Test: FAIL” will be displayed.
- System Test  
This is the test to check the function related to the digital section. When the system test fails, “System Test: FAIL” will be displayed.

### Analog Test Failure Troubleshooting in the Internal Test

When “Analog Test: Fail” is displayed in the internal test, replace the faulty assembly as shown in Table 4-1. The contents of the analog test is as follows;

**Table 4-1 Troubleshooting Information for Analog Test Failure**

Test No.	First Failed Test	Test Point	Probable Faulty Assembly					
			A1 Ref OSC	A3 Source	A4 Receiver	A2 DC Bias(001)	A5 Freq Ref(1D5)	A6 Test Head
1	DC_A1_P9V	+9V on A1	†††					
2	DC_A1_N9V	-9V on A1	†††					
3	DC_A1_P5VRF1	+5V for RF1 on A1	†††					
4	DC_A1_P5VRF2	+5V for RF2 on A1	†††					
5	DC_A1_P5V	+5V on A1	†††					
6	DC_A3_P5VPLL	+5V for PLL on A3		†††				
7	DC_A3_P10V	-10V on A3		†††				
8	DC_A3_N5V	-5V on A3		†††				
9	DC_A3_N10VPLL	-10V on A3		†††				
10	DC_A3_OUTDET	Detect Level of RFOUT AGC on A3		†††				
11	DC_A3_LODET	Detect Level of Local AGC on A3		†††				
12	DC_A4_P10V	+10.5V on A4			†††			
13	DC_A4_P5V	+5V on A4			†††			
14	DC_A4_P8VA	+8V for CH1 on A4			†††			
15	DC_A4_P8VB	+8V for CH2 on A4			†††			
16	DC_A4_N10_5V	-10.5V on A4			†††			
17	DC_A4_N5V	-5V on A4			†††			
18	DC_A4_LODET	Detect Level of Local AGC on A4		††	†††			
19	A2_STAT	Status of A2				†††		
20	DC_A2_P50V	+50V on A2				†††		
21	DC_A2_N50V	-50V on A2				†††		
22	DC_A2_P5VREF	+5V for Reference on A2				†††		
23	FREQ_A1_VCO1	VCO Output for RF1 on A1	†††					
24	FREQ_A1_REF1	PLL Reference for RF1 on A1	†††					
25	FREQ_A1_VCO2	VCO Output for RF2 on A1	†††					
26	FREQ_A1_REF2	PLL Reference for RF2 on A1	†††					

**Table 4-1 Troubleshooting Information for Analog Test Failure**

Test No.	First Failed Test	Test Point	Probable Faulty Assembly					
			A1 Ref OSC	A3 Source	A4 Receiver	A2 DC Bias(001)	A5 Freq Ref(1D5)	A6 Test Head
27	FREQ_A3_VCO	VCO Output for A3	††	†††				

†††: Most suspicious assembly

††: Suspicious assembly

**NOTE**

When many tests fails in Table 4-1, replace A21 Analog Interface Board or A10 Analog Mother Board.

**System Test Failure Troubleshooting in the Internal Test**

When “System Test: Fail” is displayed in the internal test, check each error using the following procedure.

- ANALOG IF TEST
  1. Turn off the instrument, and then turn on it.
  2. If this fail still remains, replace A21 Analog Interface Board.
- EEPROM TEST
  1. Turn off the instrument, and then turn on it.
  2. If this fail still remains, perform “EEPROM Initialize” and all adjustments using the Adjustment Program as shown in Chapter 3, “Adjustment,”.
  3. If this fail still remains, replace EEPROM, and then perform “Write ID”, “EEPROM Initialize” and all adjustments using the Adjustment Program as shown in Chapter 3, “Adjustment,” and Chapter 8, “Post-Repair Procedures,”.
  4. If this fail still remains, replace A27 HDD, and then perform all adjustments using Adjustment Program as shown in Chapter 3, “Adjustment,” and Chapter 8, “Post-Repair Procedures,”.
- KEYBD TEST
  1. Check the status of each front key and turn off the instrument, and then turn on it.
  2. If this fail still remains, replace A22 Front Keyboard.

**NOTE**

When “KEYBD TEST” is failed, perform the internal test using the mouse.

- SYSTEM COLOR TEST
  1. Turn off the instrument, and then turn on it.
  2. Usually, this fail is disappeared after rebooting

---

## Function Depend Troubleshooting

### Functions

The E4991A has the following typical functions.

- The hardkeys and knob located on the front panel are divided 4 blocks labeled “Entry/Navigation block”, “Measurement block”, “Stimulus block”, and “System block” respectively. Some of the front panel keys control the E4991A functions directly. Refer to “To check the Front Panel” on page 179, if you want to check the front panel.
- Almost all the information required for the measurement value, setup state, result data processing, menu bar, softkey label and others is indicated on the color LCD display. An 8.4-inch TFT display is used. Refer to “To check the LCD” on page 179, if you want to check the LCD.
- Use of the external keyboard ensures effective entry of the numerical value and character string which is connected to the E4991A rear panel. Refer to “To check the External Keyboard” on page 179, if you want to check the external keyboard.
- Use of the mouse allow you to freely move the pointer on the E4991A LCD display, and effective perform a great variety setups which is connected to the **E4991A** rear panel. Refer to “To check the Mouse” on page 180, if you want to check the mouse.
- The floppy disk drive is used to save the E4991A setup state and measurement data in the floppy disk and to call them up. It is compatible with a 3.5-inch, 720KB or 1.44MB, DOS format floppy disk. Refer to “To check the FDD” on page 180, if you want to check the FDD.
- The external color monitor is available to display the same information as the E4991A LCD. Refer to “To check the VGA Display Output” on page 180, if you want to check the VGA Display Output.
- The external trigger input terminal allows you to enter the trigger signal to command execution of measurement. Refer to “To check the External Keyboard” on page 179, if you want to check the external trigger input.
- You can use the LAN port to connect the E4991A to the LAN. Refer to “To check the LAN (for serial prefix JP1KH, JP2KH, and MY432)” on page 181, if you want to check the LAN.
- A specified printer is available to print out the E4991A measurement display, setup display and others. You can use it to connect the printer parallel port. Refer to “To check the Printer Parallel port ( for serial prefix JP1KH, JP2KH, and MY432)” on page 188, if you want to check the printer parallel port.
- It is available to build an automatic measurement by connecting the external controller and other equipment through GPIB connector. Refer to “To check the GPIB” on page 188, if you want to check the GPIB.


### To check the Device Driver (for serial prefix JP1KH, JP2KH, and MY432)

Make sure first whether the E4991A device drivers are installed properly or not by the following procedure, if you experience the E4991A function doesn't work.

- Step 1.** Exit from the E4991A Measurement Display as shown in “How to exit from the E4991A Measurement View” on page 155. Then windows desktop screen is displayed.
- Step 2.** Right mouse click “My Computer” icon, and click “Properties”. Then System Properties dialog box is displayed.
- Step 3.** Click **Device Manager** tag. The operating system detects all the necessary device driver, Figure 4-18 is displayed. However, if it doesn't detect the necessary device driver, a yellow back grounded “!” icon as shown in Figure 4-19 is displayed. The Figure 4-19 shows the example of the operating system doesn't detect the LAN board (3Com EtherLink 10/100 PCI TX NIC [3C905B-TX]) properly. So, the device of the LAN board with the yellow back grounded “!” icon is displayed.


Figure 4-18

View Installed Device Drivers

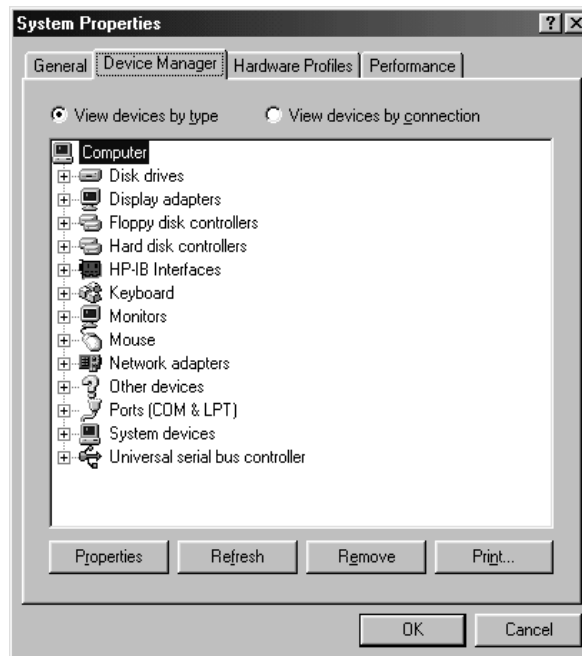



**Figure 4-19** Example of no device driver file in system

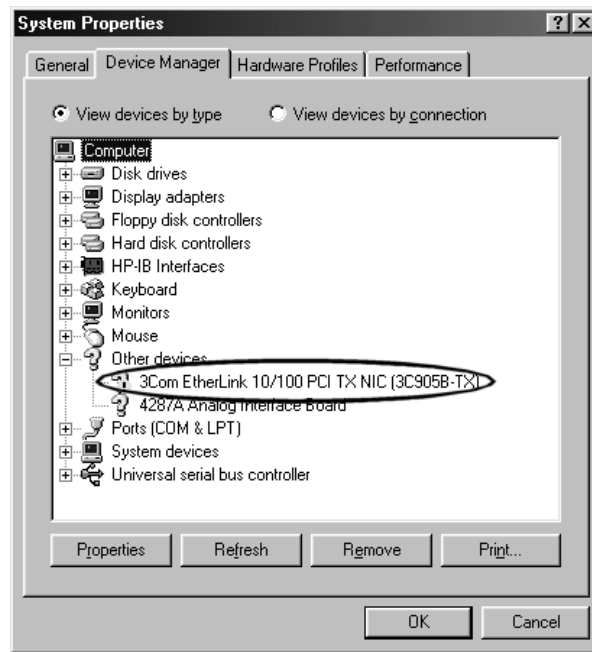

**To check the Device Driver (for serial prefix MY433 and later)**


Make sure first whether the E4991A device drivers are installed properly or not by the following procedure, if you experience the E4991A function doesn't work.

- Step 1.** Exit from the E4991A Measurement Display as shown in "How to exit from the E4991A Measurement View" on page 155. Then windows desktop screen is displayed.
- Step 2.** Click "My Computer" with the right button and select "Properties" as shown in Figure 4-20. Then, the System Properties(Figure 4-21) will appear.

**Figure 4-20** Opening System Property Window



Figure 4-21 System Properties Window (General)

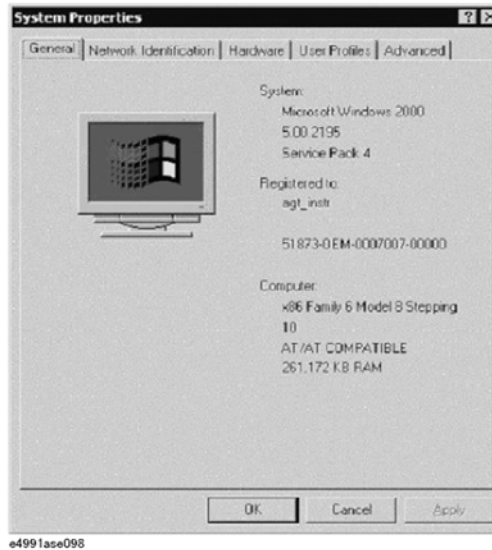


**Step 3.** Click Hardware tab and Device Manager button. The operating system detects all the necessary device drivers and displays the device names as shown in Figure 4-22.

Figure 4-22 System Properties Window (Hardware)



Click the icon with the right button and click Property to show the detail of the status, as shown in Figure 4-23.

Figure 4-23 Opening Device Driver Property

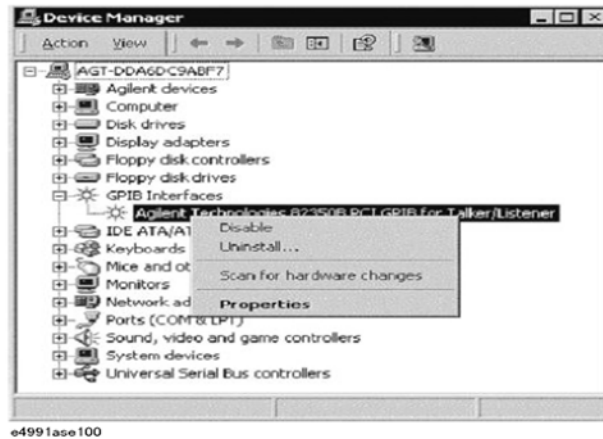

## To check the Front Panel

### Procedure

Randomly press the front panel keys and rotate the knob to verify that they work correctly.

You can check this function using the external test as showing in “To Execute the Internal Test” on page 172

If any fail to work, it assumes that the A22 Front keyboard or A21 Analog Interface board gives problem. Or, it assume that any front panel key has been subsided in the panel.

## To check the LCD

You can check this function using the external test as showing in “To Execute the Internal Test” on page 172

## To check the External Keyboard

### Procedure

- Step 1.** Connect the external keyboard to the E4991A rear.
- Step 2.** Turn the E4991A on.
- Step 3.** Press [Menu] key.
- Step 4.** Press the [↑], [↓] keys on the external keyboard, and make sure that the cursor on the menu bar moves to up or down. If any fail to work, there is a possibility that the external keyboard or the A20 Digital Motherboard gives problem.

## To check the Mouse

### Procedure

- Step 1.** Connect the mouse to the E4991A rear.
- Step 2.** Turn the E4991A on.
- Step 3.** Move the mouse and press the mouse buttons, and make sure that the mouse pointer moves smoothly and the mouse buttons work correctly. If any fail to work, there is a possibility that the mouse or the A20 Digital Motherboard gives problem.

## To check the FDD

### Procedure

- Step 1.** Inset the floppy disk into the E4991A FDD.
- Step 2.** Click the followings. Then “Save As” dialog box is displayed.

#### Save/Recall - SAVE STATE

- Step 3.** Select the drive and file name as follows;

Drive: [-a-]

File name: e4991a

Then, click **OK**. If any fail to work, there is a possibility that the floppy disk, the A28 FDD or the flat cables between the FDD and the A20 Digital Motherboard via the A26 Display board gives problem.

- Step 4.** Next, click the followings to recall the state file you saved. Then “Open” dialog box is displayed.

#### Save/Recall - RECALL STATE

- Step 5.** Select the drive and file name as follows;

Drive: [-a-]

File name: e4991a

Then, click **OK**. If any fail to work, there is a possibility that the floppy disk, the A28 FDD or cable between the FDD and the A20 Digital Motherboard gives problem.

## To check the VGA Display Output

### Procedure

- Step 1.** Connect the external monitor to the E4991A rear.
- Step 2.** Turn the external monitor on.
- Step 3.** Make sure that the screen on the external monitor is the same as the screen on the LCD. If screen is not displayed on the external monitor, there is a possibility that the A26 Display board gives problem.

## To check the External Trigger Input

### Procedure


- Step 1.** Press [**Preset**] key. Then the E4991A is initialized.
- Step 2.** Select the trigger source to “EXTERNAL” by following front panel procedure.  
[**Trigger Setup**] - **Trigger Source** - External
- Step 3.** Attach the 50ohm termination(BNC) to the E4991A Ext Trig connector rear, then a trigger is generated and measurement data is displayed.
- Step 4.** Remove the 50ohm termination(BNC) from the E4991A Ext Trig connector rear, then a trigger is generated and measurement data is displayed.
- Step 5.** If measurement doesn't execute under the external trigger in spite of the internal trigger works properly, there is a possibility that the A21 Analog Interface board gives problem.

## To check the LAN (for serial prefix JP1KH, JP2KH, and MY432)

### Procedure

- Step 1.** Connect the LAN cable between the E4991A rear and the personal computer. If you have a crossed LAN cable, it is available to connect with them directly. Or, if have a straight LAN cable, it is available to connect with them via multi port Hub.
- Step 2.** Exit from the E4991A Measurement Display as shown in “How to exit from the E4991A Measurement View” on page 155. Then windows desktop screen is displayed.
- Step 3. Set up the IP address/subnet mask**
  - a.** Open the shortcut menu by right-clicking the **Network Neighborhood** icon on the desktop and click **Properties**. This opens up the **Network** dialog box (Figure 4-24).


Figure 4-24 Network dialog box

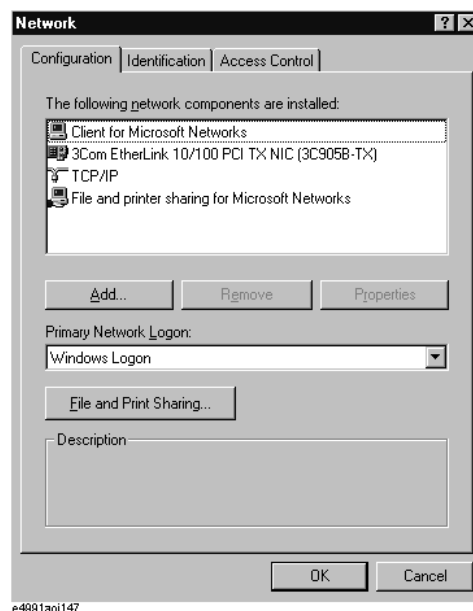

Troubleshooting  
Function Depend Troubleshooting

- b. Click the **TCP/IP** icon in the **Configuration** tab to select it.
- c. Click the **Properties** button. This opens the **TCP/IP Properties** dialog box (Figure 4-25).

**Figure 4-25** TCP/IP Properties dialog box (IP Address tab)

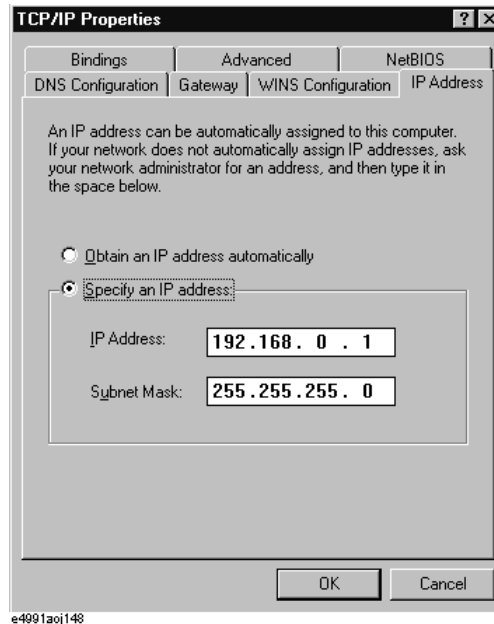

- d. If the IP Address and the Subnet Mask are not assigned yet, enter them as follows.

IP Address            192.168.0.1  
Subnet Mask         255.255.255.0

If they are already assigned, go to step 4.


The following is how to enter the IP Address and the Subnet Mask.

Click the **Specify an IP address** option button in the **IP Address** tab to select it and input your IP address in the **IP Address** box and your subnet mask in the **Subnet Mask** box (overwrite the initial values) to assign a specific IP address and subnet mask.

**Step 4. Shut down the E4991A**

- a. Click the **OK** button to close the **TCP/IP Properties** dialog box.
- b. Click the **OK** button to close **Network** dialog box. This opens the **System Setup Change** dialog box (Figure 4-26).

**Figure 4-26** System Setup Change dialog box

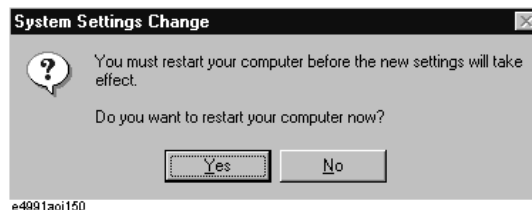

- c. Click the **Yes** button to restart the E4991A.

**NOTE**

Shut down the E4991A by following the procedure below if you click the **No** button by mistake.

1. Click **Start - Shut Down...**
2. Click the **Shut down** button in the **Shut Down Windows** dialog box to select it.
3. Click the **OK** button.

**Step 5.** Turn the E4991A on again, after shutdown. Then, the LAN settings take effect.

**Step 6.** Open the DOS prompt by the following the mouse procedure from personal computer.

**Start - Programs - MS-DOS Prompt**

You can confirm whether the E4991A LAN hardware and setting is available or not using ping command. Type “ping xxx.xxx.xxx.xxx”, and press **[Enter]** key from the Command Prompt window. Where “xxx.xxx.xxx.xxx” is the IP address of the E4991A you assigned.

Figure 4-27 and Figure 4-28 are examples of the ping command response. When the E4991A returns response to the personal computer, such a Figure 4-27 is displayed. When the E4991A doesn't return the response, such a Figure 4-28 is displayed.

If the E4991A doesn't return the response, there is a possibility that the A25 LAN Interface board gives problem.

**Figure 4-27**

**Example of the ping command succeeds**


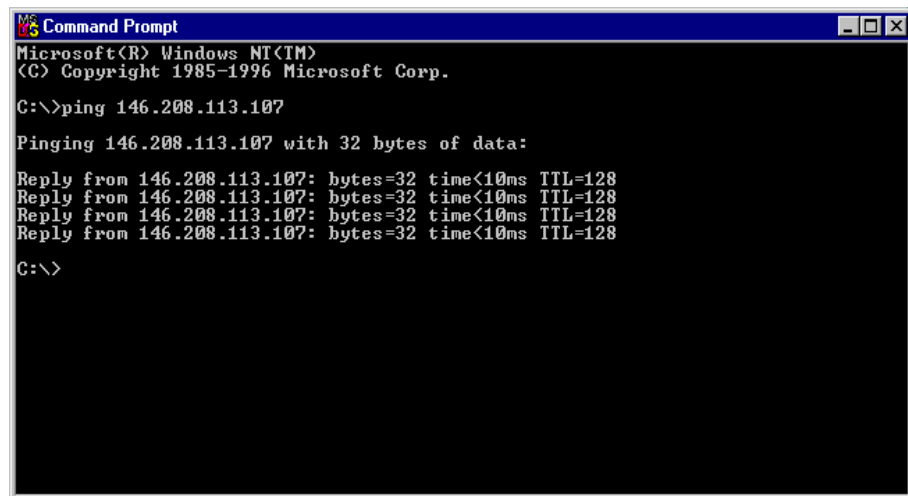


Figure 4-28 Example of the ping command fails

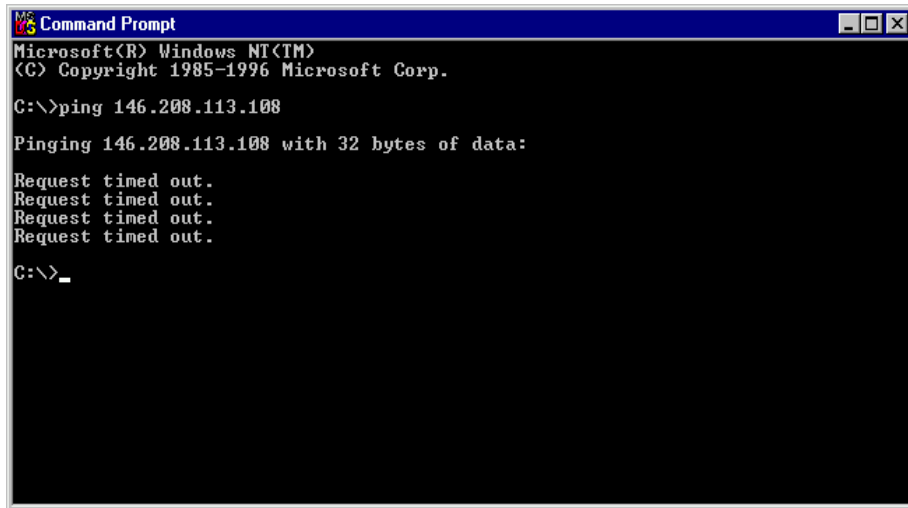

### To Check the LAN (for serial prefix MY433 and later)

#### Procedure

- Step 1.** Exit from the E4991A Measurement Display as shown in “How to exit from the E4991A Measurement View” on page 155. Then windows desktop screen is displayed.
- Step 2.** Connect a LAN cable between the LAN port on the rear panel and an external computer (PC).

---


#### NOTE

Use a crossed LAN cable to enable the peer-to-peer communication between the E4991A and the PC. If the E4991A needs to be connected to the PC via a multi port Hub, use a straight LAN cable.

- Step 3.** Double-click “**My Computer**” icon on Windows desktop of the E4991A. And double-click “**Control Panel**”. The Control Panel window will appear.
- Step 4.** Double-click “**Network and Dial-up Connections**” icon to show the Network and Dial-up Connections window as shown in the left of Figure 4-29.




**Figure 4-29** Network and Dial-up Connections window

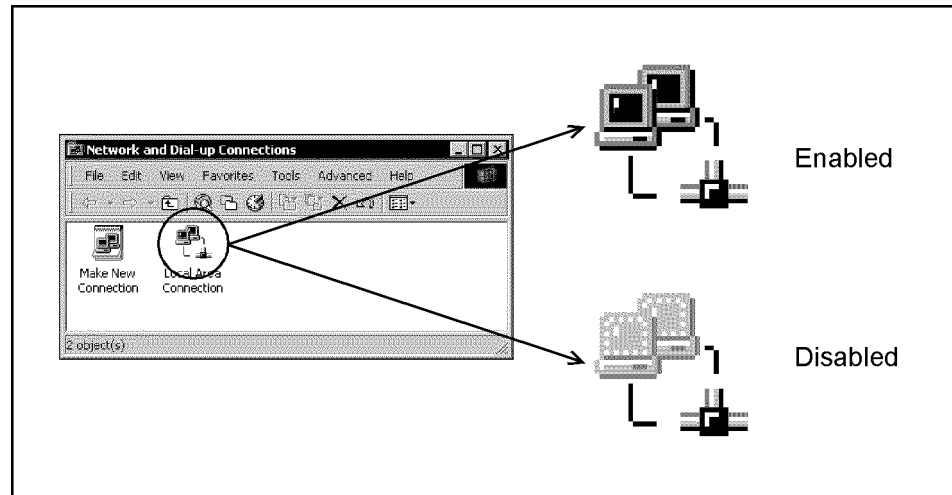

e5070bse117

- Step 5.** Check the Local Area Connection icon to confirm whether the network connection is enabled or disabled. The meaning of the icon is shown in the right of Figure 4-29. If the connection is disabled, Double-click the Local Area Connection icon.
- Step 6.** Set up the IP address/subnet mask as follows.
- a. Click the Local Area Connection icon with the right button and click "Properties". This opens the "Local Area Connection Properties" dialog box as shown in Figure 4-30.


**Figure 4-30** Network dialog box

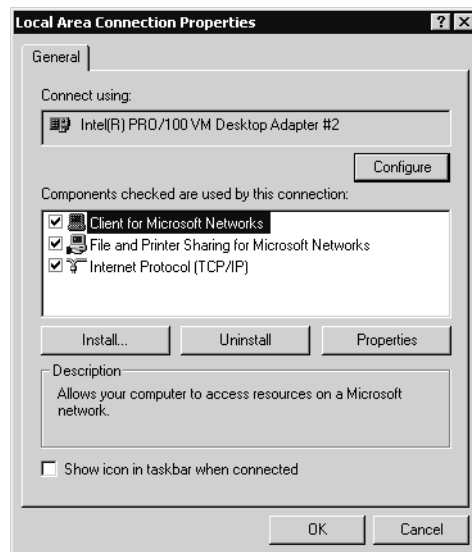

e5070bse115

- b. Click "Internal Protocol (TCP/IP)" icon.
- c. Click the "Properties" button. This opens the "TCP/IP Properties" dialog box as shown in Figure 4-31.

Figure 4-31 TCP/IP Properties dialog box (IP Address tab)

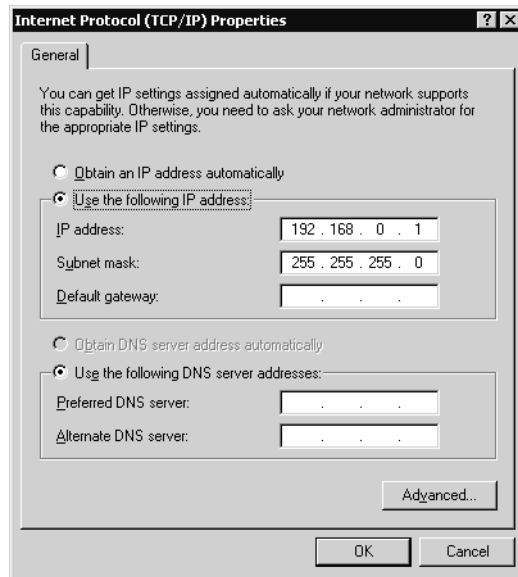

- d. If the IP Address and the Subnet Mask are already assigned, go to Step 7. If they are not assigned yet, enter them as follows:


IP Address 192.168.0.1  
Subnet Mask 255.255.255.0  
Default Gateway blank

To enter a specific IP Address and Subnet Mask, click "Use the following IP address" option button to select it. Input your IP address in the "IP Address" box and your subnet mask in the Subnet Mask box (overwrite the initial values).

- Step 7.** By clicking "OK" button, the network settings take effect. Verify the E4991A LAN settings and response to a command from the external computer as follows:

- a. On the external computer, click "Start" button in the Windows Start menu bar using a mouse.
- b. Click "Programs" and "Accessories" and "Command Prompt" to open the DOS (Command) Prompt window.
- c. Type a ping command followed by the E4991A IP address as "ping xxx.xxx.xxx.xxx" (where, xxx.xxx.xxx.xxx is the IP address such as 192.168.0.1 assigned in Step 6-d.) Press  key on the keyboard.
- d. The external computer displays a message of ping command response from the E4991A. Figure 4-32 shows an example of normal result that indicates the IP address, packet size, and a response time counted by the computer. The ping command is repeated 4 times.

Figure 4-32 Example of normal ping command test result

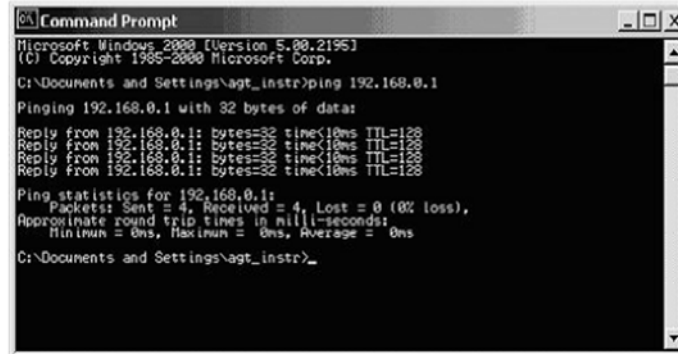

```
Microsoft Windows [Version 5.00.2196]
(C) Copyright 1985-2000 Microsoft Corp.

C:\Documents and Settings\agt_instr>ping 192.168.0.1

Pinging 192.168.0.1 with 32 bytes of data:

Reply from 192.168.0.1: bytes=32 time<10ms TTL=128
Reply from 192.168.0.1: bytes=32 time<10ms TTL=128
Reply from 192.168.0.1: bytes=32 time<10ms TTL=128
Reply from 192.168.0.1: bytes=32 time<10ms TTL=128

Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Documents and Settings\agt_instr>
```

e4991ase101

If the E4991A doesn't return the response, the external computer displays a message of "Request timed out" as shown in Figure 4-33. In this case, a failure in the A20 digital motherboard is suspected.

Figure 4-33 Example of no response for ping command



```
Microsoft Windows [Version 5.00.2196]
(C) Copyright 1985-2000 Microsoft Corp.

C:\Documents and Settings\agt_instr>ping 192.168.0.100

Pinging 192.168.0.100 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.0.100:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Documents and Settings\agt_instr>
```

e4991ase102

### **To check the Printer Parallel port ( for serial prefix JP1KH, JP2KH, and MY432)**

#### **Test Equipment**

Please refer

[http://www.agilent.com/find/ctdkobe\\_printers](http://www.agilent.com/find/ctdkobe_printers)

for the latest supported printers.

Printer Cable (Parallel Cable)

#### **Procedure**

- Step 1.** Connect the printer cable between the printer and the E4991A printer parallel port.
- Step 2.** Press **[Preset]** key. Then the E4991A is initialized.
- Step 3.** Start printing by following mouse procedure. Then Press **OK** on Print Menu.

#### **Display - PRINT - Graph[Mono]**

- Step 4.** If any fail to work, there is a possibility that the A20 Digital Mother board, connection of the printer cable or the printer driver gives problem.

### **To check the Printer USB port ( for serial prefix MY433 and later)**

#### **Test Equipment**

Please refer

[http://www.agilent.com/find/ctdkobe\\_printers](http://www.agilent.com/find/ctdkobe_printers)

for the latest supported printers.

Printer Cable (USB Cable)

#### **Procedure**

- Step 1.** Connect the printer cable between the printer and the E4991A USB port.
- Step 2.** Press **[Preset]** key. Then the E4991A is initialized.
- Step 3.** Start printing by following mouse procedure. Then Press **OK** on Print Menu.

#### **Display - PRINT - Graph[Mono]**

- Step 4.** If any fail to work, there is a possibility that the A20 Digital Mother board, connection of the printer cable or the printer driver gives problem.

### **To check the GPIB**

#### **Procedure**

Perform the E4991A performance test program. If the controller can not detect the E4991A, there is a possibility that the A24 GPIB board or connection of the GPIB cable gives problem.

---

## External Tests Failure Troubleshooting

If you can't identify the faulty assembly using the internal tests, you can execute the external tests in addition to the internal tests. These external tests are also built-in tests and 9 tests are available in the E4991A diagnostic test mode. Refer to Table 4-2 to know which assembly is probably faulty and should be replaced.

### To Execute the External Test

To execute the external tests, perform the following procedures. This procedure should be done with the mouse and the external keyboard.

- Step 1.** Connect the mouse and the external keyboard to rear panel, and then turn on E4991A.
- Step 2.** Click System Menu on the menu bar.
- Step 3.** Click **Diagnostic** in the System menu.
- Step 4.** Double-Click **External Test** in the Diagnostic menu. Then the External Test dialog box is opened.
- Step 5.** Click the button of the each test to execute the specified test.
- Step 6.** Perform each test according to the instruction.

### The contents of the external test

The external test contains the following tests.

- Front Keyboard & LCD Display
- Source
- Out ATT
- Input ATT
- IF Gain
- Front Isolation
- Test Head
- DC Bias
- Z Meas

## Front Keyboard & LCD Display Test

This test is to check if the function of the front keyboard and the LCD works normally.

### Required Equipment

Nothing

### Procedure

The following is the procedure to perform the Front Keyboard & LCD Display Test

- Step 1.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 2.** Click **1.Front Keyboard & LCD Display** on External Test dialog box.
- Step 3.** Push the front key according to the front keyboard map, and confirm if the key and the knob work normally.
- Step 4.** Click each LCD button on LCD Display Menu, and confirm if the function of the LCD works normally.
- Step 5.** Click **PASS** and exit this window, if all tests is passed. Click **FAIL** and exit this window, if a test is failed.

## Source Test

This test is to check if the function of the receiver reads the level of the source normally.

### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (50 ohm)

### Procedure

The following is the procedure to perform the Source Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **2.Source** on External Test dialog box.
- Step 4.** Connect the 50ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 5.** Click **OK & Next>>** to go to the next test.

### Out ATT Test

This test is to check if the Output Attenuator on A3 Board is changed normally.

#### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (50 ohm)

#### Procedure

The following is the procedure to perform the Out ATT Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **3.Out ATT** on External Test dialog box.
- Step 4.** Connect the 50ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 5.** Click **OK & Next>>** to go to the next test.

### Input ATT Test

This test is to check if the Input Attenuator on A4 Board is changed normally.

#### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (50 ohm)

#### Procedure

The following is the procedure to perform the Input ATT Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **4.Input ATT** on External Test dialog box.
- Step 4.** Connect the 50ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 5.** Click **OK & Next>>** to go to the next test.

## IF Gain Test

This test is to check if the IF Gain(IF=12.5kHz, 10kHz) on A4 Board works normally.

### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (50 ohm)

### Procedure

The following is the procedure to perform the IF Gain Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **5.IF Gain** on External Test dialog box.
- Step 4.** Connect the 50ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.

## Front Isolation Test

This test is to isolate PORT1 and PORT2 on A4 Board.

### Required Equipment

Description	Recommended Model
50 ohm Termination(N)	HP 909C Opt.012
N(m)-N(m), 61cm Cable	11500B

### Procedure

The following is the procedure to perform the Front Isolation Test.

- Step 1.** Make sure that nothing is connected to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **6.Front Isolation** on External Test dialog box.
- Step 4.** Connect RF OUT and PORT2 using N Cable, and connect the 50ohm Termination(N) to PORT1. Then click **OK**.
- Step 5.** Click **OK & Next>>** to go to the next test.
- Step 6.** Connect RF OUT and PORT1 using N Cable, and connect the 50ohm Termination(N) to PORT2. Then click **OK**.
- Step 7.** Click **OK & Next>>** to go to the next test.



### Test Head Test

This test is to check if the test head works normally.

#### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (50 ohm)
N(m)-N(m), 61cm Cable	11500B

#### Procedure

The following is the procedure to perform the Test Head Test.

- Step 1.** Make sure that nothing is connected to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **7.Test Head** on External Test dialog box.
- Step 4.** Connect RF OUT and PORT1 using N Cable. Then click **OK**.
- Step 5.** Connect RF OUT and PORT2 using N Cable. Then click **OK**.
- Step 6.** Connect the Test Head to the instrument, and connect the 50ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 7.** Click **OK & Next>>** to go to the next test.

### DC Bias Test (Option 001 only)

This test is to check if the function of A2 DC Bias Board(Option 001) works normally.

#### Required Equipment

Description	Recommended Model
Calibration Kit	16195B (Open, Short, 50 ohm)

#### Procedure

The following is the procedure to perform the DC Bias Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **8.DC Bias** on External Test dialog box.
- Step 4.** Connect the OPEN(0 S) Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.

Troubleshooting  
**External Tests Failure Troubleshooting**

- Step 5.** Connect the SHORT(0 ohm) Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 6.** Connect the 50 ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.

### **Z Meas Test**

This test is to check if the measurement of OPEN, SHORT and LOAD works normally.

#### **Required Equipment**

<b>Description</b>	<b>Recommended Model</b>
Calibration Kit	16195B (Open, Short, 50 ohm)

#### **Procedure**

The following is the procedure to perform the Z Meas Test.

- Step 1.** Connect the Test Head to the instrument.
- Step 2.** Open the External Test dialog box as described in “To Execute the External Test” on page 189.
- Step 3.** Click **9.Z meas** on External Test dialog box.
- Step 4.** Connect the OPEN(0 S) Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 5.** Click **OK & Next>>** to go to the next test.
- Step 6.** Connect the SHORT(0 ohm) Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 7.** Click **OK & Next>>** to go to the next test.
- Step 8.** Connect the 50 ohm Termination of the 16195B to DUT Port on the Test Head. Then click **OK**.
- Step 9.** Click **OK & Next>>** to go to the next test.

## External Test Failure Troubleshooting

When the external test fails, replace the faulty assembly as shown in Table 4-2.

**Table 4-2 Troubleshooting Information for External Test Failure**

Test No.	First Failed Test	Probable Faulty Assembly					
		A1 Ref OSC	A3 Source	A4 Reciever	A2 DC Bias(001)	A5 Freq Ref(1D5)	A6 Test Head
1	FRONT KEY & LCD*1						
2	SOURCE	††	†††	††			
3	OUTPUT ATT	††	†††	††			
4	INPUT ATT	††	††	†††			
5	IF GAIN	††	††	†††			
6	FRONT ISOLATION			†††			
7	TEST HEAD						†††
8	DC BIAS TEST				†††		
9	Z MEAS	††	†††	†††	††	†	††

\*1.If “FRONT KEY &LCD” test fails, verify A22 Front Panel Keyboard, A51 LCD, A21 Analog Interface Board and A26 Display Board.

†††: Most suspicious assembly

††: Suspicious assembly

†: There is some possibility of a fault

## Performance Tests Failure Troubleshooting

Perform the following procedure sequentially when any performance tests fail.

### Troubleshooting for Performance Test Failure

Table 4-3 gives the recommended adjustments when the performance test fails. You should perform the corresponding adjustments using the Spot Adjustment in the Adjustment Program as shown in Table 4-3. If the performance test still fails, replace the assembly as shown in Table 4-4. Note that this table lists some typical cases. In a few cases, other assembly may actually be faulty.

**Table 4-3 Recommended Adjustment for Performance Test Failure**

Test No.	First Failed Test	Recommended Adjustment (Spot Adjustment in Adjustment Program)				
		A1 Adjustment	A3 Adjustment	A4 Adjustment	A2 Adjustment	A5 Adjustment
1	Frequency Accuracy Test (Std)	√				
	Frequency Accuracy Test (Opt. 1D5)					√
2	OSC Level Accuracy Test		√			
3	Impedance measurement accuracy test		√			
4	DC Bias Level accuracy Test (Opt.001)				√	

**Table 4-4 Isolate Faulty Assembly for Performance Test Failure**

Test No.	First Failed Test	Probable Faulty Assembly				
		A1 Ref OSC	A3 Source	A4 Receiver	A2 DC Bias(001)	A5 Freq Ref(1D5)
1	Frequency Accuracy Test (Std)	†††				
	Frequency Accuracy Test (Opt. 1D5)					†††
2	OSC Level Accuracy Test		†††			
3	Impedance Measurement Accuracy Test		††	†††		
4	DC Bias Level Accuracy Test (Opt. 001)				†††	

†††: Most suspicious assembly

††: Suspicious assembly

## **To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)**

If you replace the A20 Digital Motherboard, you need to confirm the jumpers for the specific CPU installed. You also need to confirm the BIOS options using the BIOS setup utility procedure. And, the BIOS detects the A27 Mass Storage connected to the A20, and displays these parameters. It is a useful tool to verify whether the A27 gives problem or not.

The jumpers on the A20 and the BIOS setups are presented in the following pages.

### **To Identify the Motherboard Used**

The E4991A consists of Digital Motherboard and AMD-K6/2-400MHz processor. This motherboard displays the message "Hunter ATX - PE-PHATX-03 - xx/xx/xx" and "AMD-K6-2-/400" during the Memory checking after power on as shown in Figure 4-8.

**Configure the Motherboard**

There are several jumpers on the A20 digital motherboard that must be configured to the correct settings for the AMD-K6/2-400MHz microprocessor as shown in Table 4-5 to Table 4-12. Figure 4-34 shows the A20 digital motherboard jumpers location.

**Table 4-5**

**JP1**

<b>1-2</b>	<b>2-3</b>
OFF	ON

**Table 4-6**

**JP2**

<b>1-2</b>	<b>3-4</b>	<b>5-6</b>	<b>7-8</b>
ON	OFF	OFF	OFF

**Table 4-7**

**JP3 CPU Speed (AMD-K6/2E-400MHz)**

<b>1-2</b>	<b>3-4</b>	<b>5-6</b>
ON	OFF	OFF

**Table 4-8**

**JP4 BUS Clock (66MHz)**

<b>1-2</b>	<b>3-4</b>	<b>5-6</b>
OFF	OFF	ON

**Table 4-9**

**JP7 BIOS Write Protect (Non Writable)**

<b>1-2</b>	<b>2-3</b>
ON	OFF

**Table 4-10**

**JP9 CMOS Reset (Normal)**

<b>1-2</b>	<b>2-3</b>
ON	OFF

**Table 4-11**

**JP10 CPU Voltage Selection (2.2V)**

<b>1-2</b>	<b>3-4</b>	<b>5-6</b>	<b>7-8</b>
OFF	ON	OFF	OFF

**Table 4-12**


**JP11 Power On Select**

<b>1-2</b>	<b>2-3</b>
ON	OFF

To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

**NOTE** If the jumper settings, especially jumper 3, 4, or 10 is incorrect, there is a possibility that it gives damage to the microprocessor. You must be attentive to configure the jumpers.

**Figure 4-34** A20 Digital Motherboard Jumpers Location

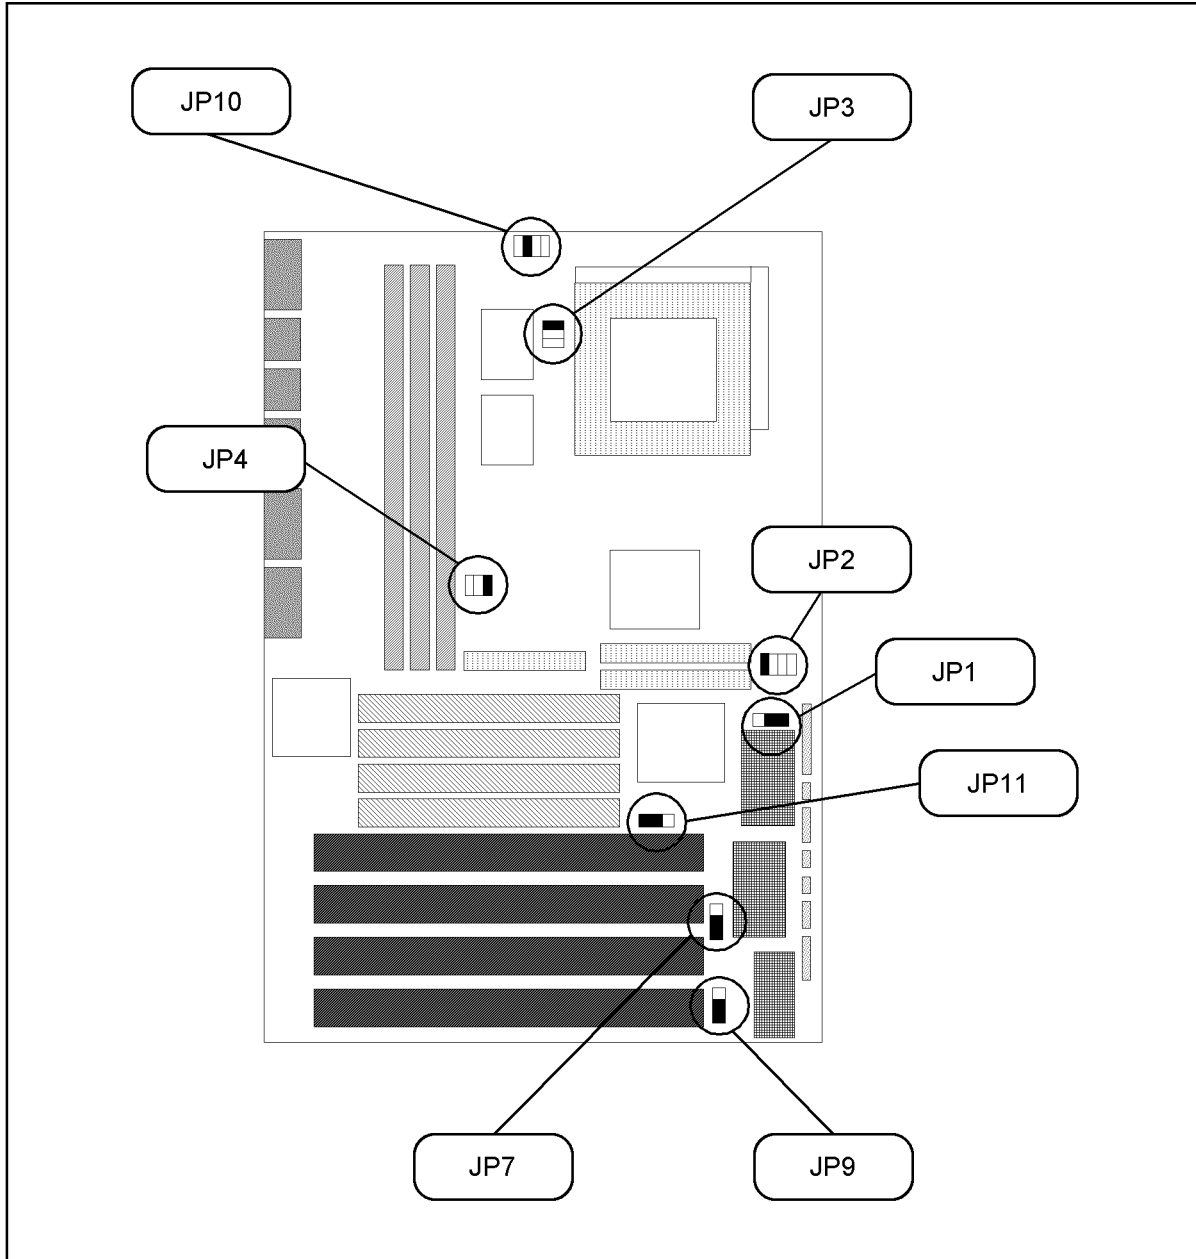

e4991ase031

## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

#### To Confirm or Set the BIOS Options

Generally, BIOS (Basic Input Output System) is a software to control the data input/output of the personal computer. The E4991A has the BIOS inside. Use the following procedure to confirm or set the BIOS options, known as the BIOS setup utility.


#### Run the BIOS setup utility

You can use the external keyboard in the BIOS setup utility to perform various functions.

- Step 1.** Connect the external keyboard to the E4991A rear panel. Then turn the E4991A on.
- Step 2.** Hit **[Delete]** key as soon as the message of “Hit DEL if you want to run SETUP” is displayed.
- Step 3.** Enter password as “e4991a” when you are required it. Then Figure 4-35 is displayed.

Figure 4-35

#### BIOS setup utility main menu Page

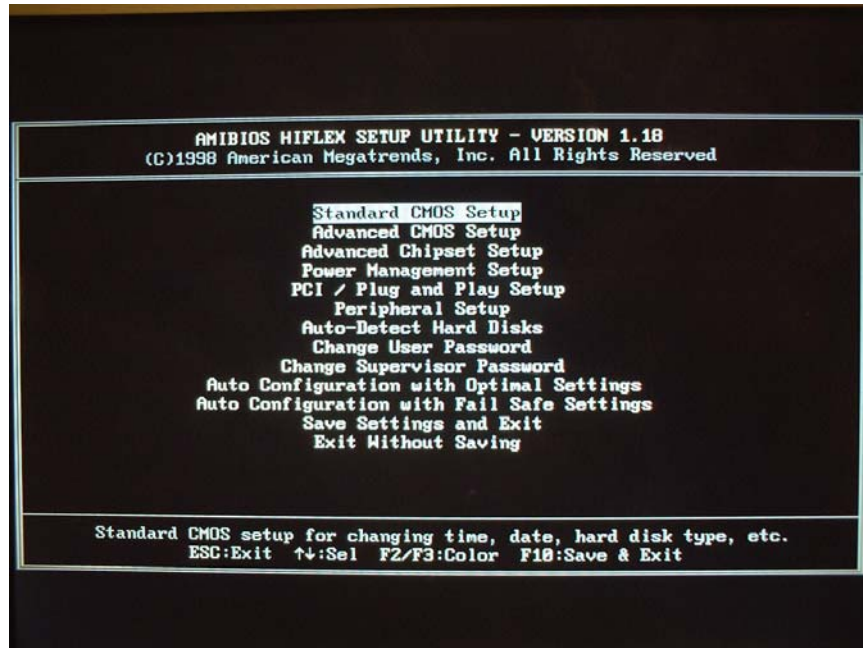

The BIOS setup utility has 11 windows. For details of the BIOS options in the each window are described in bellow pages. You can select a window using **[↑]**, **[↓]** keys or **[Tab]** key, and perform an operation using **[Enter]** key.



## To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

The windows are:

- Standard CMOS Setup

The default settings of all the Standard CMOS Setup options are described in the “Standard CMOS Setup” on page 202.

- Advanced CMOS Setup

The default settings of all the Advanced CMOS Setup options are described in the “Advanced CMOS Setup” on page 203.

- Advanced Chipset Setting

The default settings of all the Advanced Chipset Setting options are described in the “Advanced Chipset Setup” on page 204.

- Power Management Setup

The default settings of all the Power Management Setup options are described in the “Power Management Setup” on page 205.

- PCI/Plug and Play Setup

The default settings of all the PCI/Plug and Play Setup options are described in the “PCI / Plug and Play Setup” on page 206.

- Peripheral Setup

The default settings of all the Peripheral Setup options are described in the “Peripheral Setup” on page 207.

- Auto-Detect Hard Drive

After replacing the A27 Mass Storage, you can confirm whether the connection between the A27 and the A20 Digital Motherboard is good or not. Because, BIOS automatically configures the drive parameters after A27 has detected.

- Change User Password

This option is unnecessary to use in the E4991A.

- Change Supervisor Password

- Auto Configuration With Optimal Settings

This option is unnecessary to use in the E4991A.

- Auto Configuration With Fail Safe Settings

This option is unnecessary to use in the E4991A.

- Save Settings and Exit

If you want to quit from BIOS setup utility without saving, select a “Exit Without Saving”. For details, refer to “Exit Without Saving” on page 209.

- Exit Without Saving

If you want to quit from BIOS setup utility with saving, select a “Save Setting and Exit”. For details, refer to “Save Settings and Exit” on page 209.

## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

#### Standard CMOS Setup

Standard Setup options are displayed by choosing “Standard CMOS Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-36 is displayed. If date or time is incorrect, change it using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-36

#### STANDARD CMOS SETUP Page




To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

Advanced CMOS Setup

Advanced CMOS Setup options are displayed by choosing “Standard CMOS Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-37 is displayed. Compare the default BIOS options as shown in Figure 4-37 with your E4991A’s BIOS options. If there is difference, change BIOS option using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-37

ADVANCED CMOS SETUP Page

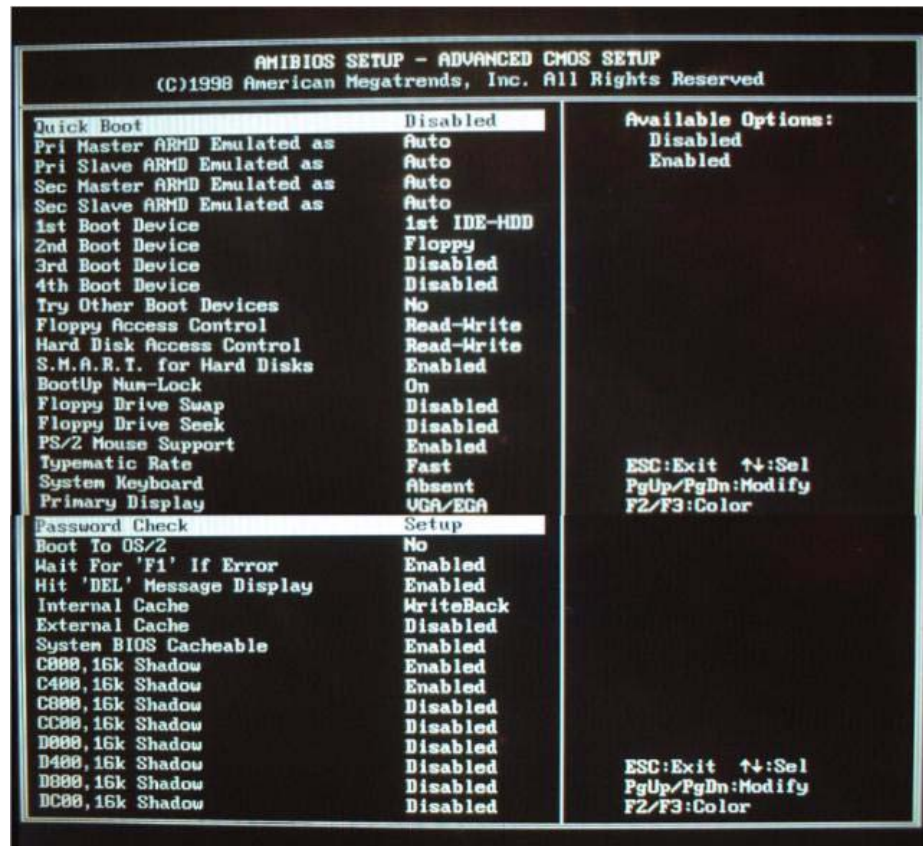

## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

#### Advanced Chipset Setup

Advanced Chipset Setup options are displayed by choosing “Advanced Chipset Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-38 is displayed. Compare the default BIOS options as shown in Figure 4-38 with your E4991A’s BIOS options. If there is difference, change BIOS option using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-38

#### ADVANCED CHIPSET SETUP page

AMIBIOS SETUP - ADVANCED CHIPSET SETUP	
(C)1998 American Megatrends, Inc. All Rights Reserved	
USB Function	Enabled
USB KB/Mouse Legacy Support	Disabled
Port 64/80 Emulation	Disabled
SDRAM RAS# to CAS# Override	Disabled
SDRAM CAS# Latency	2
SDRAM RAS# Timing	5
SDRAM Speculative Read Logic	Disabled
DRAM Speed	Manual
DRAM Read Burst Timing	x4EDO x4FPM
DRAM Write Burst Timing	x4EDO x4FPM
DRAM Lead Off Timing	11/7/3
Fast EDO Read Cycle Timing	Disabled
Speculative Lead Off Timing	Disabled
Memory Address Drive Strength	10mA, 16mA
Enhanced Paging Disable	Disabled
DRAM Refresh RAS Cycles (HCLK's)	5
DRAM Refresh Rate	15.6 us
Suspend Refresh Type	CBR
Cache DRAM Refresh Time (HCLK's)	8
Memory Hole	Disabled
3bit I/O Recovery Time	Disabled
16bit I/O Recovery Time	Disabled
Clock Chip Spread Spectrum	Disabled

Available Options:  
Disabled  
Enabled

ESC:Exit ↑:Sel  
PgUp/PgDn:Modify  
F2/F3:Color

ESC:Exit ↑:Sel  
PgUp/PgDn:Modify  
F2/F3:Color


To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

Power Management Setup

Power Management Setup options are displayed by choosing “Power management Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-39 is displayed. Compare the default BIOS options as shown in Figure 4-39 with your E4991A’s BIOS options. If there is difference, change BIOS option using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-39

POWER MANAGEMENT SETUP Page

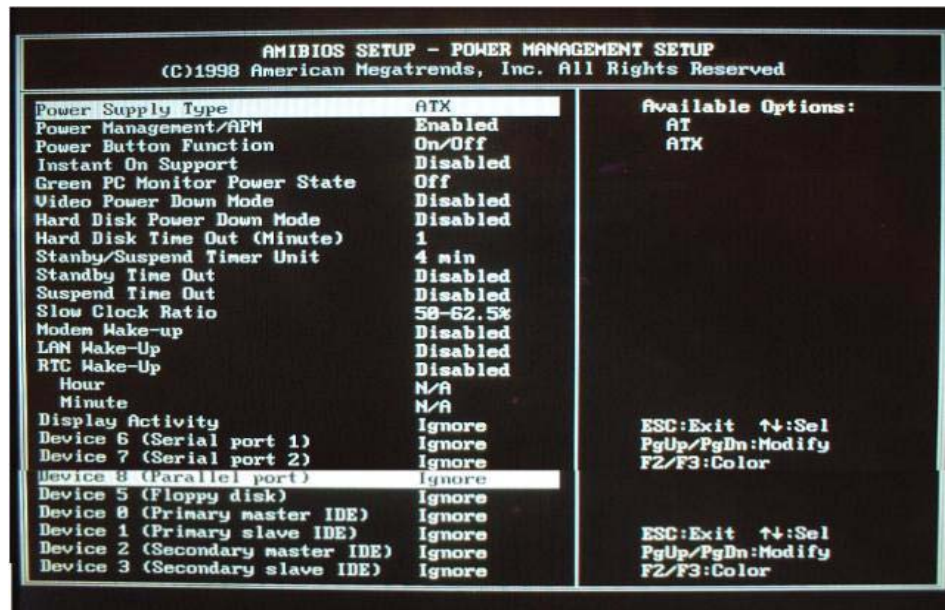


## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

#### PCI / Plug and Play Setup

PCI/Plug and Play Setup options are displayed by choosing “PCI / Plug and Play Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-40 is displayed. Compare the default BIOS options as shown in Figure 4-40 with your E4991A’s BIOS options. If there is difference, change BIOS option using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-40 PCI / PLUG AND PLAY SETUP Page

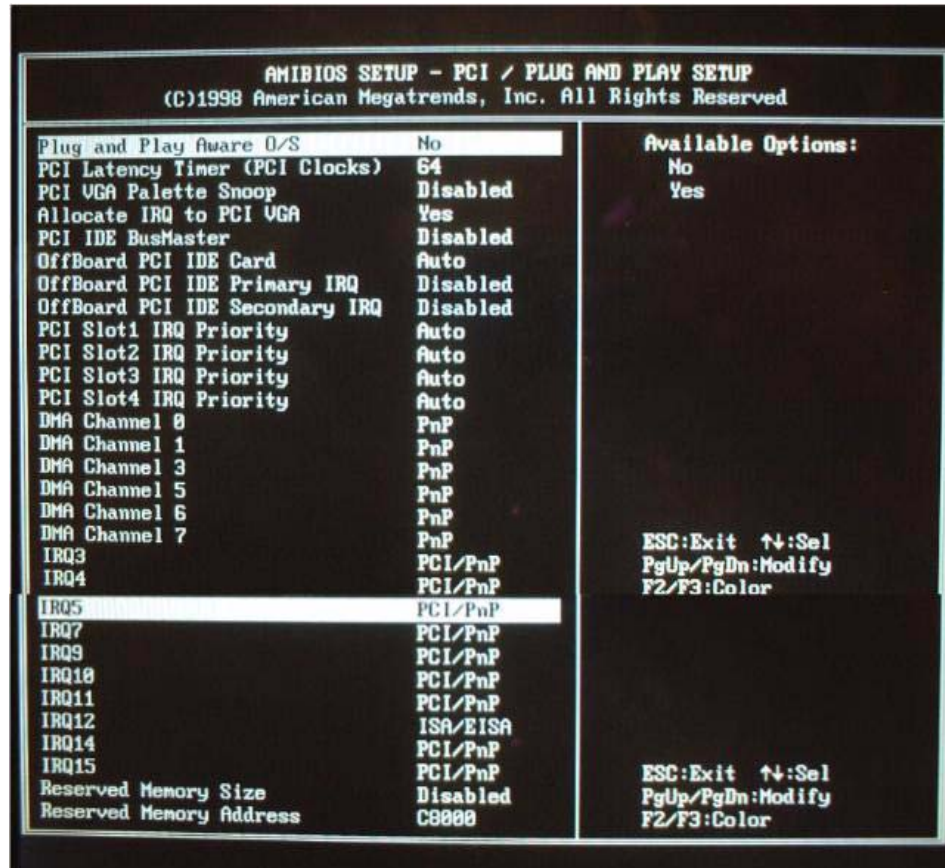


To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

Peripheral Setup

Peripheral Setup options are displayed by choosing “Peripheral Setup” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-41 is displayed. Compare the default BIOS options as shown in Figure 4-41 with your E4991A’s BIOS options. If there is difference, change BIOS option using [↑], [↓] keys, [PageUp] key and [PageDown] key. If you want to exit from this page, and go to main menu, hit [ESC] key.

Figure 4-41

PERIPHERAL SETUP Page

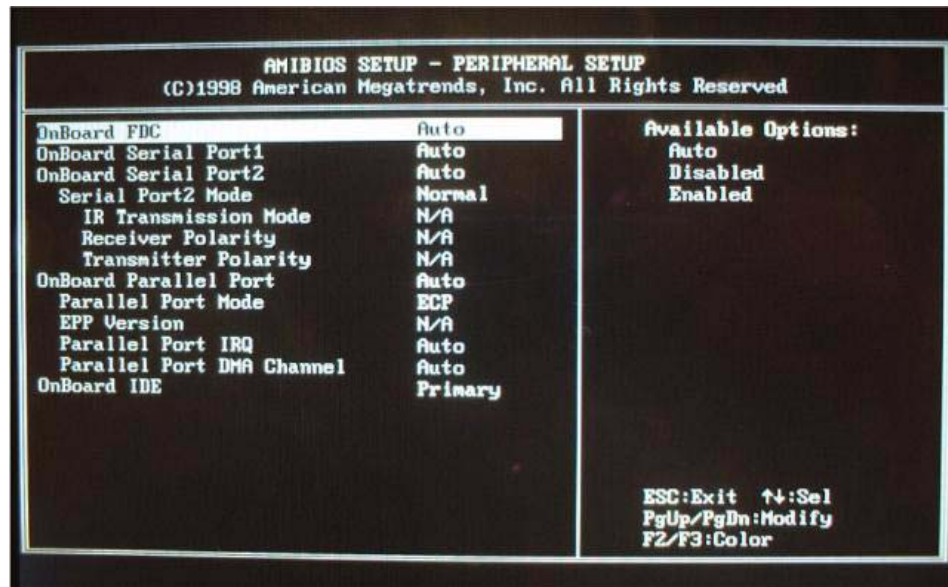

## Troubleshooting


### To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

#### Auto-Detect Hard Disks

Auto-Detect Hard Disks options are displayed by choosing “Auto-Detect Hard Disks” using [↑], [↓] keys and hit [Enter] key at the BIOS setup utility main menu. Then Figure 4-42 is displayed. You can find A27 mass storage (hard disk or flash disk) drive parameters for IDE1 drive connected to the primary channel installed in the A20 Digital Motherboard. If you doubt the mass storage doesn't work properly, make sure that the E4991A system detects the mass storage correctly using this option.

Figure 4-42

#### AUTO-DETECT HARD DISK SETUP Page

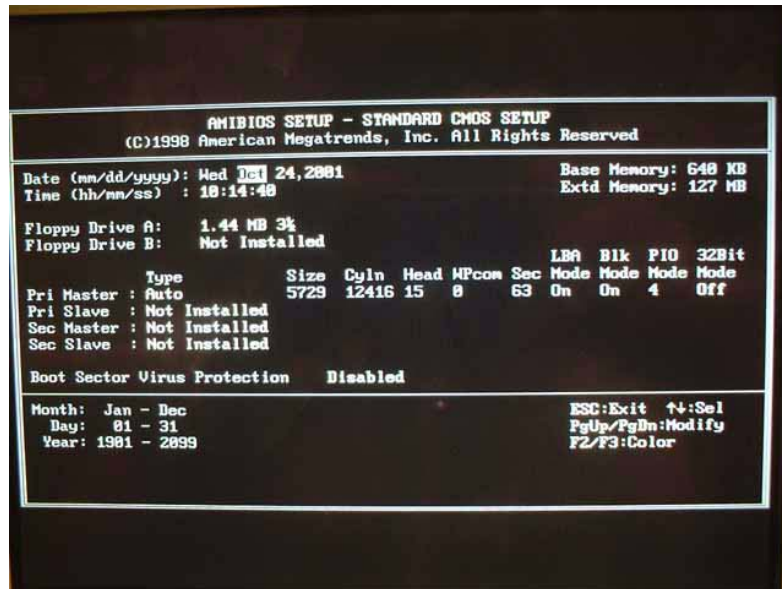



## To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)

### Change Supervisor Password

Usually, you are required a password first, when the BIOS setup utility is executed. If a password is not assigned in your E4991A, set it using BIOS setup utility. Move the cursor to “Change Supervisor Password” using [↑], [↓] keys and hit **[Enter]** key at the BIOS setup utility main menu, and you have to set the password to “e4991a”, don’t set it to others.

### Save Settings and Exit

It is necessary to save BIOS options before exit on the BIOS setup utility, when you want to change and save a BIOS option. Move the cursor to “Save Settings and Exit” using [↑], [↓] keys and hit **[Enter]** key at the BIOS setup utility main menu. Then, the message of “Save current settings and exit (Y/N)?” is displayed. If yes, hit **[Y]** key. Then, the BIOS setup utility is closed.

### Exit Without Saving

If you cancel the changes of the BIOS options, move the cursor to “Exit Without Saving” using [↑], [↓] keys and hit **[Enter]** key at the BIOS setup utility main menu. Then, the message of “Quit without saving (Y/N)?” is displayed. If you want to quit without saving, hit **[Y]** key. Then, the BIOS setup utility is closed.

## To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)

When you replace the A20 digital motherboard, you need to confirm the jumper settings for the specific CPU installed. The jumper settings information is provided in “Configure the Motherboard” on page 210.

You also need to confirm the BIOS options using the BIOS setup utility procedure. The BIOS setup procedure is described in “To Confirm or Set the BIOS Options” on page 211.


### To Identify the Motherboard Installed

Confirm the splash screen is displayed in the beginning of the boot process as shown in Figure 4-15.

### Configure the Motherboard

There is a jumper on the A20 digital motherboard that must be configured to the correct setting. Confirm that the jumper setting is “Normal” as shown in Figure 4-43.

Figure 4-43 A20 digital motherboard jumpers location and settings

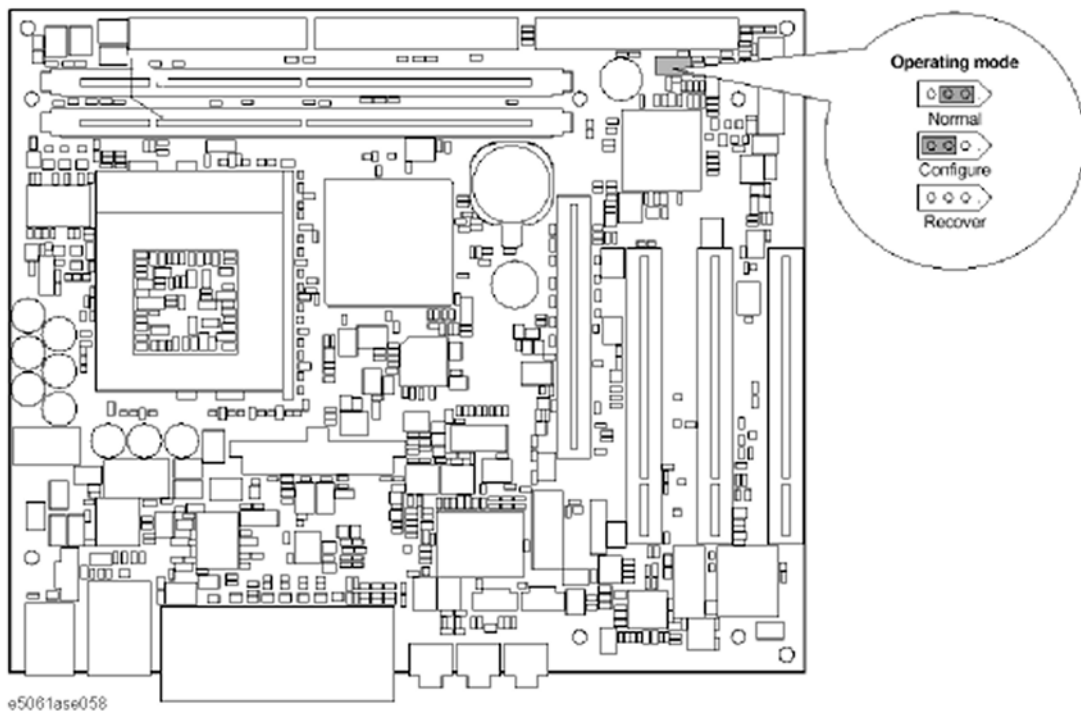


### Testing DRAM on the Motherboard

When the A20 digital motherboard is replaced with a new one, it is advisable to perform the DRAM test before proceeding to the BIOS setup utility procedure. Confirm the DRAM count in accordance with the following procedure.

## To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)

- Step 1.** Connect the external keyboard and mouse to the E4991A rear panel connectors.
- Step 2.** Turn the instrument on. Wait until the E4991A boots up. Do not press any key until the E4991A measurement view appears.
- Step 3.** Press **[System]** key on the front panel.
- Step 4.** Click **Misc Setup** in the softkey menu.
- Step 5.** Click **Control Panel...** in the softkey menu.
- Step 6.** Scroll the function viewer to find "System" icon and double-click "System". This opens "System Properties" window as shown in Figure 4-44.

**Figure 4-44** System Properties window

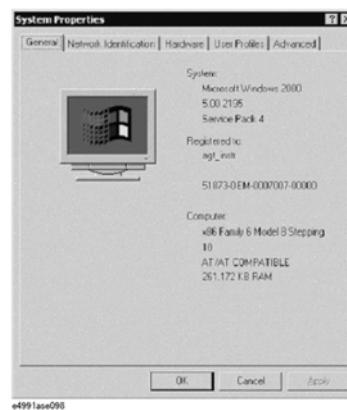

- Step 7.** Verify that "260,148 KB RAM" is displayed in the Computer profile as shown in Figure 4-44. If it is not correct, the A20 board is faulty.
- Step 8.** Click "OK" button to close the window.
- Step 9.** Turn the E4991A off before proceeding to the next step "To Confirm or Set the BIOS Options".

### To Confirm or Set the BIOS Options

BIOS is the PC's built-in program describing the standard procedure of basic inputs and outputs for the system hardware. BIOS involves the system BIOS, start-up program and BIOS setup utility. The E4991A starts up first with the BIOS when the power is turned on. Use the following procedure to confirm or set the BIOS options, known as the BIOS setup utility.

#### Run the BIOS setup utility

Use the external keyboard to select and set various options in the BIOS setup utility. Do not operate the E4991A front panel until you exit the BIOS option setup procedure.

- Procedure**
- Step 1.** Connect the external keyboard to the E4991A rear panel connector.
  - Step 2.** Turn the instrument on.
  - Step 3.** Press F2 key as soon as the splash screen as shown in Figure 4-15 is displayed. Wait a few

## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)

seconds until the message "Enter CURRENT Password:" appears.



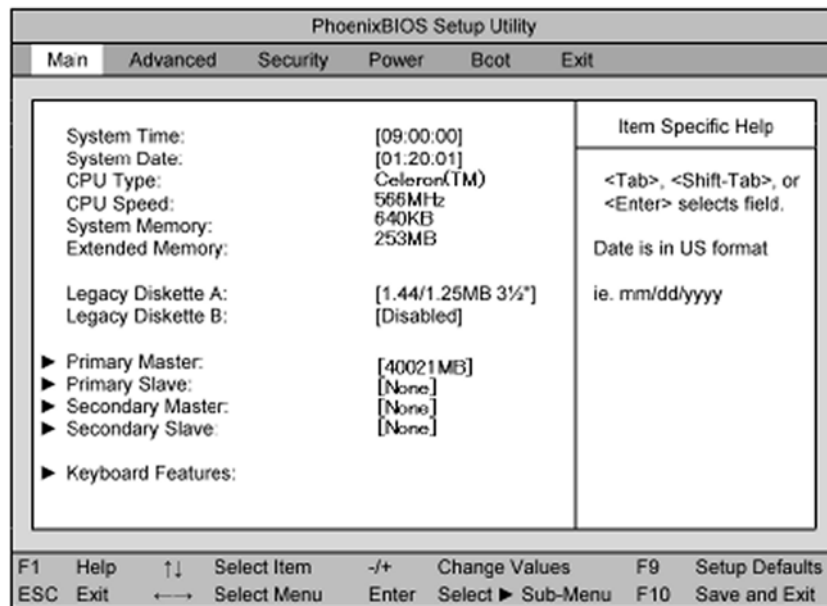





- Step 4.** Press  key (The LED in the key lights.)
- Step 5.** Enter password "e4991a" and press . Then BIOS setup utility main menu is displayed as shown in Figure 4-45.

Figure 4-45

#### BIOS setup utility main menu



- Step 6.** The BIOS setup utility has primary menus, most of which have sub-menus. Brief descriptions and reference pages for these menus are provided in Table 4-13. The details of the BIOS option settings in each menu and sub-menus are described on the page listed in the table.
- Step 7.** Select a desired menu using   keys. Select a item in the menu or sub-menu window using   keys. To perform an operation, use  key.

#### NOTE


If you want to quit the BIOS option setting and exit the BIOS setup utility without saving changes in the setup, select "Exit Discarding Changes" and press  key at the Exit Menu.

Table 4-13

#### BIOS setup utility primary menus and references

Menu	Options	Ref. page
Main	Product description including processor and memory fitted Date and time IDE disks found and sub-menus for extra configuration	on page 212

**Table 4-13 BIOS setup utility primary menus and references**

Menu	Options	Ref. page
Advanced	Start-up display mode (silent-boot etc.) Operating system type (ACPI etc.) Advanced chipset configuration Processor cache control PCI space configuration I/O devices configuration Advanced hard disk drive options System monitoring Version information	on page 214
Security	Passwords and permissions	on page 216
Power	Action after AC-reconnect Power savings modes and timers	on page 216
Boot	Selects device boot order	on page 215
Exit	Save with or without changes Load/save default settings (from flash ROM)	on page 217

**Load Setup Defaults**

---

**NOTE** Perform the following procedure only when the A20 digital motherboard is replaced. Jump to “Advanced Menu” when you check whether the BIOS options are correctly set or not.

---








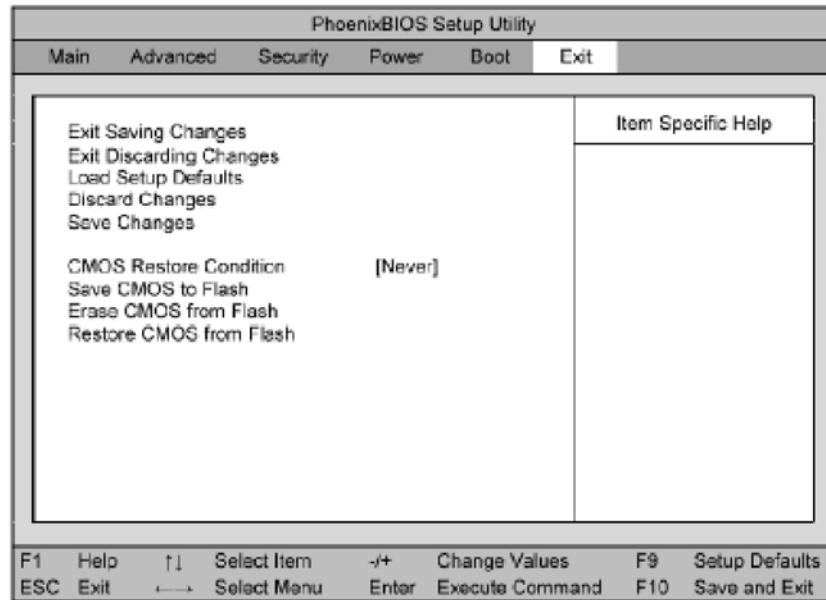
Exit menu shown below is displayed by choosing "Exit" using   keys and by pressing  key at the BIOS Setup Utility main menu. Select “Load Setup Default” using   keys. The dialog box “Setup Confirmation” prompts you to select Y (Yes) or N (No). Press  and  to load the manufacture Setup Defaults into the BIOS ROM. As a result, almost all of the BIOS options are automatically configured to the optimal settings for the E4991A.

Figure 4-46 Exit menu (for Load Setup Defaults)



**Advanced Menu**

The Advanced Menu shown below is displayed by choosing "Advanced" using **←** **→** keys and by pressing **Enter** key at the BIOS Setup Utility main menu. Select "Advanced Chipset Control" using **↑** **↓** keys. The current setup states are displayed as shown in Figure 4-48. If "Video Boot Type" is incorrect, select it using **↑** **↓** keys, and change the setting by pressing **+** **-** keys.

If you want to exit from this page and return to main menu, press **Esc** key.

Figure 4-47 Advanced Menu


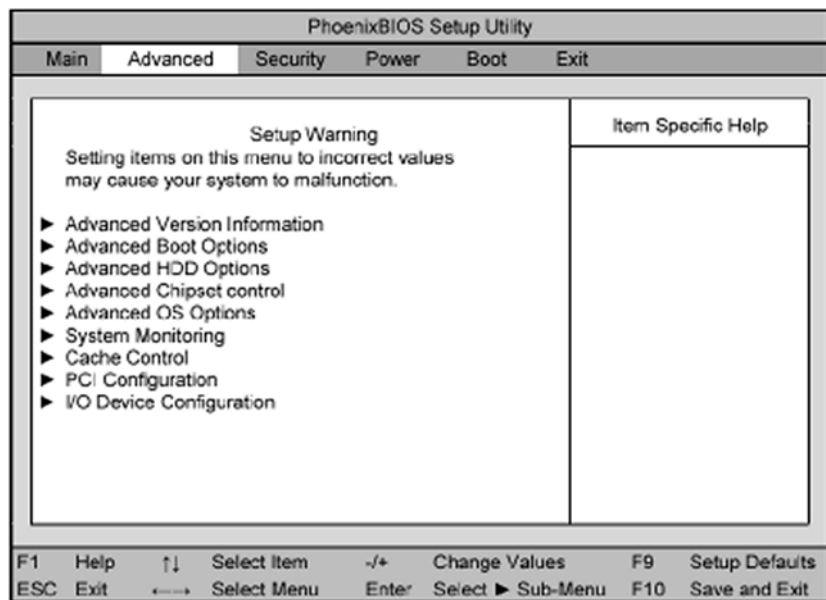


Figure 4-48

Advanced Chipset Control Sub-menu

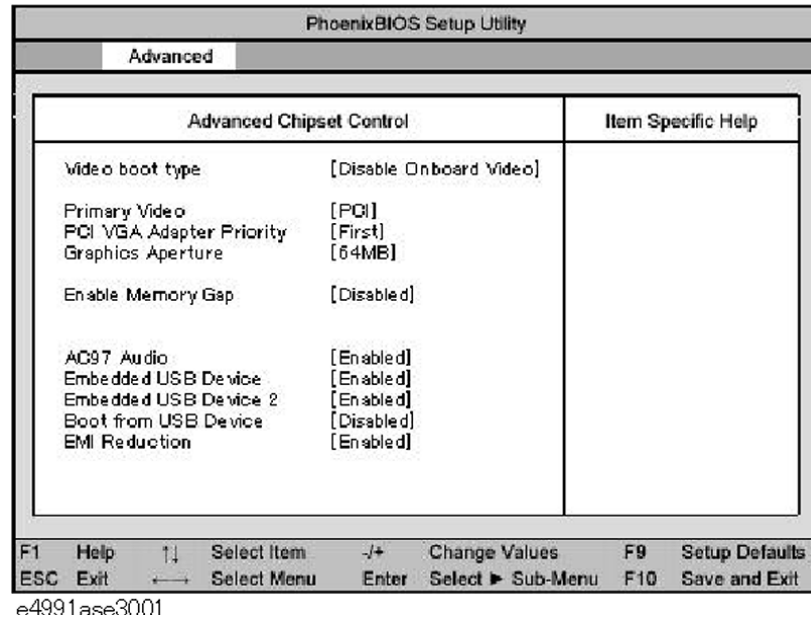


Next, select “Advanced OS Options” using **↑** **↓** keys. The current setup states are displayed as shown in Figure 4-49. If “Installed OS” or “Enable ACPI” is incorrect, select it using **↑** **↓** keys, and change the setting by pressing **+** **-** keys.

If you want to exit from this page and return to main menu, press **Esc** key.

Figure 4-49

Advanced OS Options Sub-menu

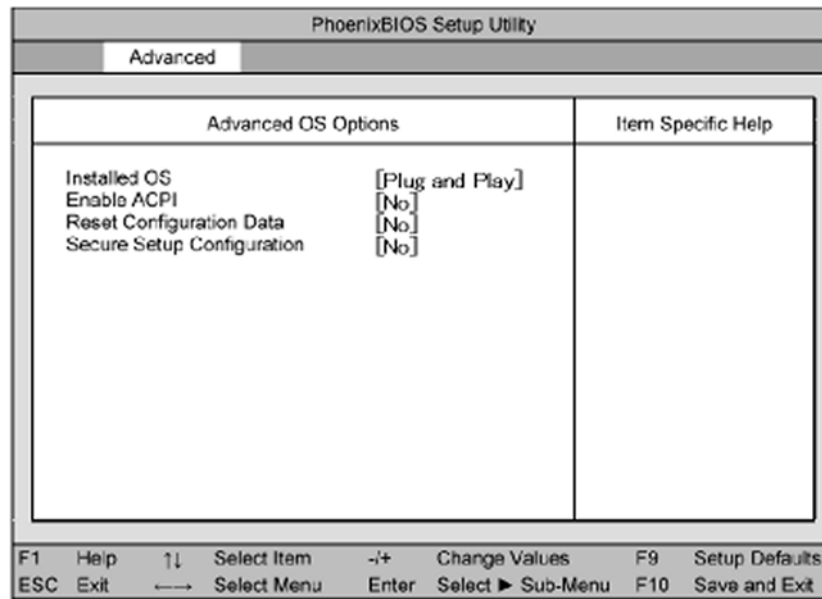





Boot Menu

The Boot Menu shown below is displayed by choosing "Boot" using **←** **→** keys and by pressing **Enter** key at the BIOS Setup Utility main menu. The current setup states are

## Troubleshooting

### To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)

displayed as shown in Figure 4-50. If the setup is incorrect, select it using   keys, and change the setting by pressing   keys.


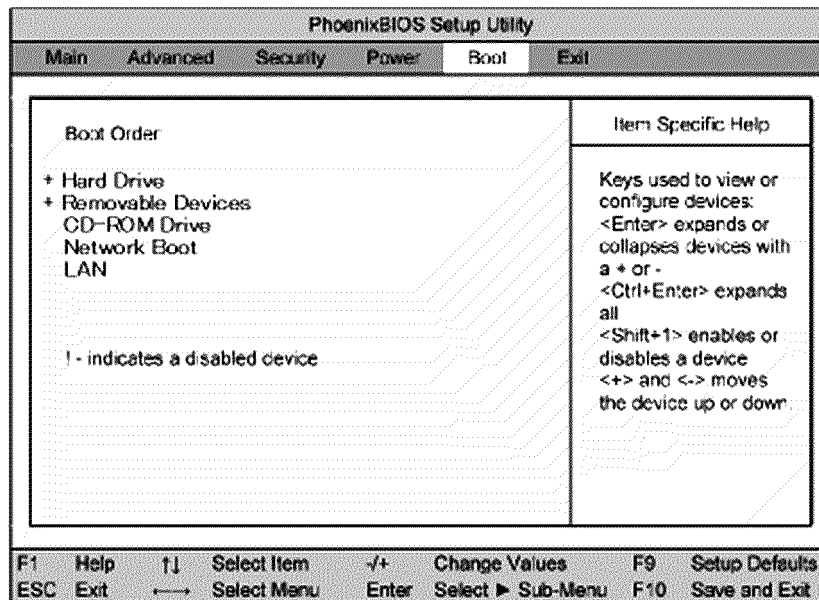
If you want to exit from this page and return to main menu, press  key.









Figure 4-50

#### Boot Menu










#### Change Supervisor Password

A password needs to be entered to execute the BIOS setup utility. If a password has not been assigned in the E4991A, set the password using this BIOS setup utility as follows.

- Select "Security" using   keys at the BIOS Setup Utility main menu and press  key.
- Select "Set Supervisor password" using   keys and press  key.
- Enter the password of "e4991a". Never set another password.
- Press  key.
- If a message of "New supervisor password installed. Press any key to continue" is displayed, press  key.

#### Power Menu

The Power Menu shown below is displayed by choosing "Power" using   keys and by pressing  key at the BIOS Setup Utility main menu. The current setup states are displayed as shown in Figure 4-51. If "After Power Failure" is incorrect, select it using   keys, and change the setting by pressing   keys.


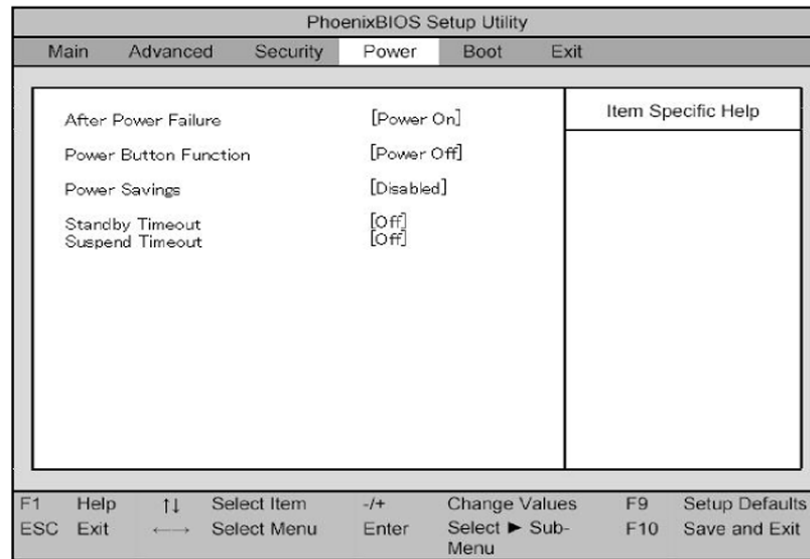
If you want to exit from this page and return to main menu, press  key.



Figure 4-51

Power Menu



**Save & Exit Setup** When you want to change and save a BIOS option, Select "Exit" using   keys at the BIOS Setup Utility main menu and press  key. Select "Save CMOS to Flash" using   and press  key. Then select "Exit Saving Changes" using   and press  key. A message of "Save configuration change and exit now?" is displayed. Select "Yes" using   and press  key.

The BIOS setup utility is closed after the current settings are saved.

**Exit Without Saving**

If you cancel the changes in the BIOS option settings, select "Exit Discarding Changes" using   keys at the Exit Menu and press  key.

The BIOS setup utility is closed without saving the current settings.

Troubleshooting

**To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)**

---

## **5 Theory of Operation**

This chapter provides the theory of operation of the E4991A RF Impedance/Material Analyzer.

## Overall Instrument Operation

The E4991A consists of a mainframe, a test head and a calibration kit as shown in Figure 5-1. The mainframe includes a signal source, a receiver, a digital control, and a power supply section.

The signal source generates a stimulus signal in the frequency range from 1 MHz to 3 GHz. The stimulus signal goes through the test head, and the test fixture to the device under test (DUT).


The test head detects the voltage across the DUT and the current through the DUT, and transfers the detected signals to the receiver section.

The receiver converts the analog signals to a digital data and forwards it to the digital control section.

The calibration kit is used to calibrate the E4991A system. Calibration ensures the impedance measurement accuracy at the measurement terminal of the test head.


The power supply in the mainframe supplies all necessary dc power for the E4991A.

Figure 5-1

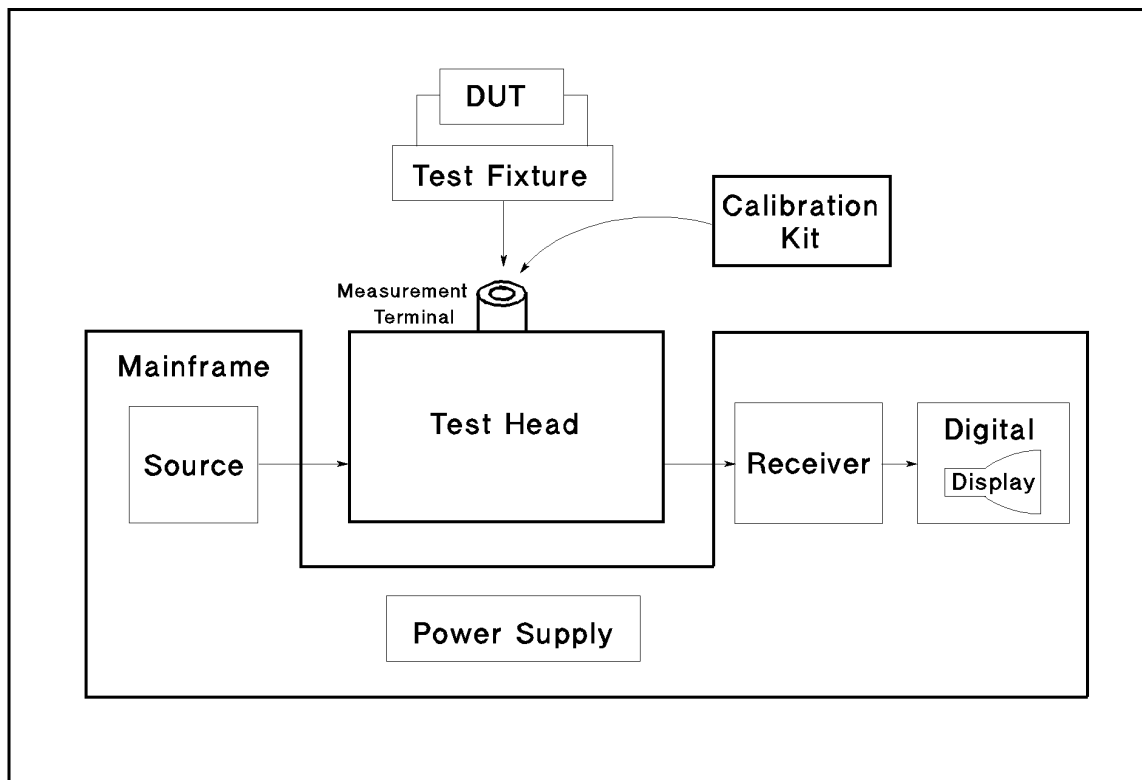


Connection between each assembly in the mainframe is shown in Figure 5-2 system block diagram.

Figure 5-2 System Block Diagram (for serial prefix JP1KH, JP2KH, and MY432)

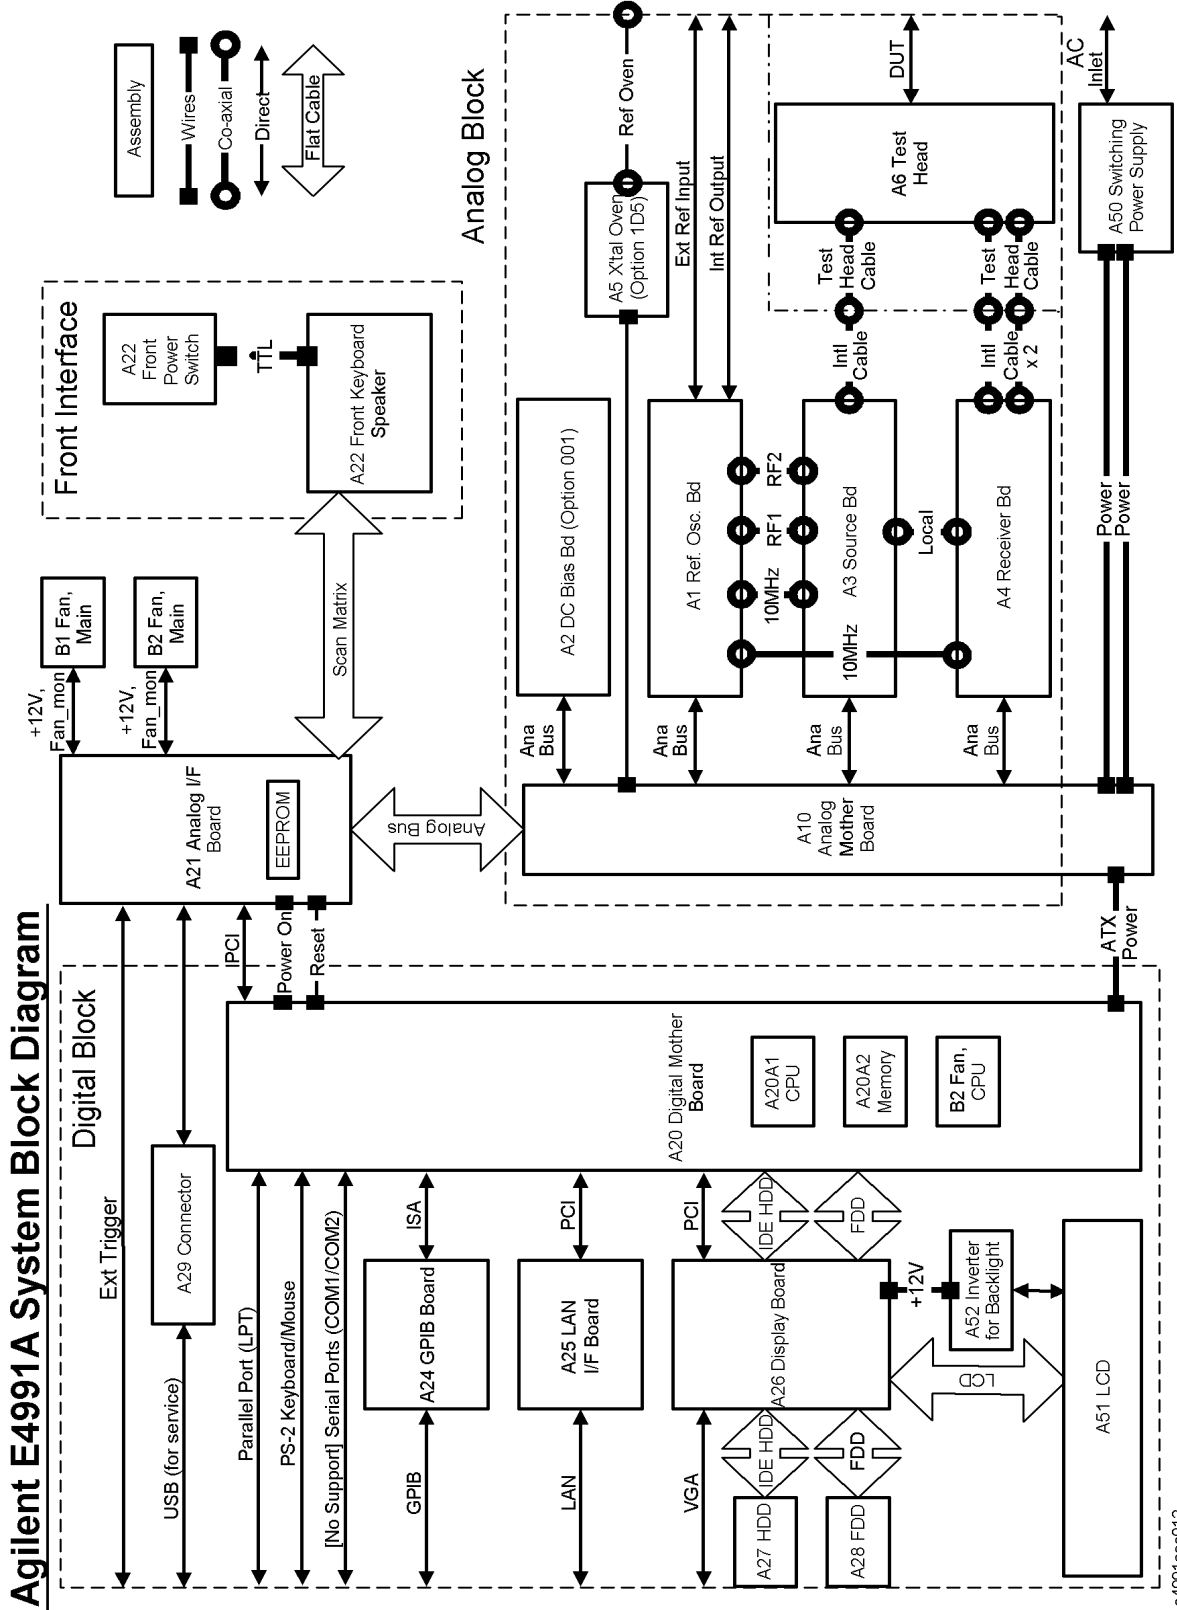

e4991ase012

Figure 5-3 System Block Diagram (for serial prefix MY433 and later)

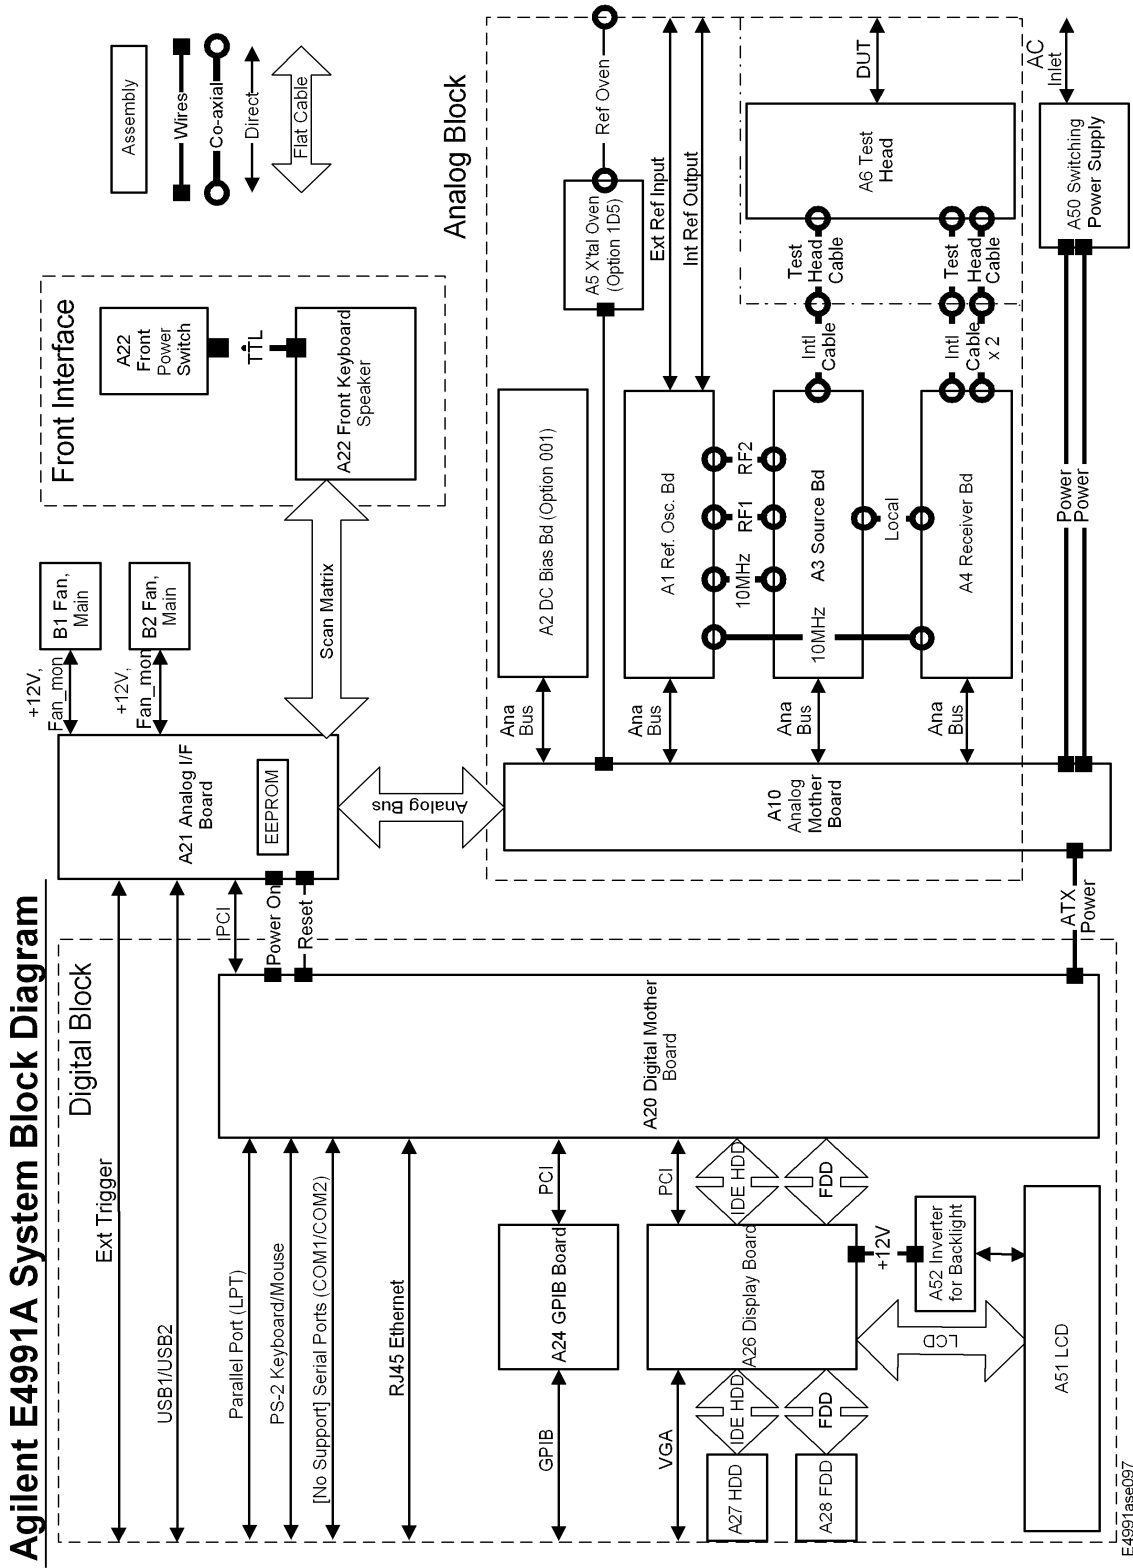

---

## Digital Section

### **A20 Digital Motherboard (for serial prefix JP1KH, JP2KH, and MY432)**

A20 digital motherboard provides basic system control and interface functions for the instrument. It contains a CPU, ROM for BIOS, 128MBytes RAM, USB interface, keyboard and mouse interfaces, and interfaces to PCI (Peripheral Component Interconnect) and ISA (Industry Standard Architecture) buses.

### **A20 Digital Motherboard (for serial prefix MY433 and later)**

A20 digital motherboard provides basic system control and interface functions for the instrument. It contains a CPU, ROM for BIOS, 256MBytes RAM, USB interface, LAN, keyboard and mouse interfaces, and interfaces to PCI (Peripheral Component Interconnect) buses.

### **A21 Analog Interface Board**

A21 analog interface board has several functions: an interface function between digital and analog blocks, the other interface functions for A22 front panel keyboard, a power control function, and measurement function. The A21 contains PLD (Programmable Logic Device) for interface functions, a BNC connector for external trigger input, DSP (Digital Signal Processor) for post measurement data processing and EEPROM that stores correction constants for adjustment data.

### **A22 Front Panel Keyboard**

A22 front panel keyboard detects operator's inputs, key inputs and RPG inputs, from the front panel, and transmits them to the A21 analog interface board.

### **A24 GPIB Board**

A24 GPIB board provides IEEE-488 standard bus services for instrument. The board interfaces the bus to A20 digital motherboard to receive and process GPIB commands.

### **A25 LAN Interface Board (for serial prefix JP1KH, JP2KH, and MY432)**

A25 LAN interface board allows the analyzer to communicate with an external controller or an external server via a network interconnection. Protocol is TCP/IP, and it works for 10base-T and 100base-TX.

### **A26 Display Board**

A26 display board controls LCD. The control signals are transmitted through a flat cable, and a backlight voltage is supplied through A52 inverter board.

### **A27 Mass Storage Disk Drive**

A27 mass storage disk drive is a 2.5 inches hard disk drive. The disk drive is used to store the operating system, firmware, and user's measurement data. The drive is mounted with shock-resistance, but be careful for the mechanical handling.

### **A28 FDD (Floppy Disk Drive)**

A28 FDD is a 1.44 MBytes, 3.5 inches, MS-DOS compatible, and it is located on the front panel. The FDD is used to store the measurement data and the instrument setup data.

### **A51 LCD (Liquid Crystal Display)**

A51 is an 8.4 inch color TFT LCD. It consists of the LCD display and the backlight. Video signal is provided from A26 Display Board through a flat cable.

A high voltage is supplied from A52 Inverter to the LCD's backlight. The backlight determines the brightness of the LCD screen.

### **A52 Inverter Board**

A52 generates a high ac voltage required to drive LCD's backlight.



## Analog Section

The analog section consists of A1 reference osc board, A2 DC bias board(Option 001), A3 source board, A4 receiver board, A5 reference oven board(Option 1D5), A6 test head, and A10 analog motherboard. The A1, A2, A3, and A4 are controlled by A20 digital motherboard through A21 analog interface board and A10 analog motherboard.



## A1 Reference Oscillator Board

A1 reference oscillator board provides reference frequencies of RF1, RF2, Int Ref Out, and 10 MHz reference for A3 and A4.

The RF1 is supplied to A3 source board for local signal that will be supplied to A4 finally, and its frequency depends on measurement frequency as shown in Table 5-1. The signal level of the RF1 is +6 dBm typically. The RF2 is supplied to A3 for producing the measurement signal that is output from RF OUT port. The signal level of the RF2 is +6 dBm typically. The frequency difference between RF1 and RF2 is 12.5 kHz equal to the IF signal.

Table 5-1

**RF1 and RF2 frequencies for each band**

	Measurement Frequency	RF1	RF2
Band1	1 MHz – 1739.9 MHz	2303.9875 MHz	2304 MHz
Band2	1740 MHz – 2259.9 MHz	1151.9875 MHz	1152 MHz
Band3	2260 MHz – 2679.9 MHz	1151.9875 MHz	1152 MHz
Band4	2680 MHz – 3000 MHz	1151.9875 MHz	1152 MHz

A 150MHz oscillator(75MHz VCXO x 2) in A1 supplies a reference frequency signal for the PLL-controlled oscillators that create RF1 and RF2 signals. If nothing is connected to Ext Ref In connector on the rear panel, it is locked to an internal VCXO (Voltage Controlled Crystal Oscillator). But if an external 10 MHz signal is supplied to the Ext Ref In, it is locked to the external signal.

The RF2 is generated by a PLL circuit with the 6MHz reference signal (150MHz reference signal / 25). The RF1 is generated by a PLL circuit with the reference signal that is the RF2 divided by the fractional N divider. If one of the VCO control voltages in the PLLs is out of limits, “PLL Unlock” notification is displayed.

The created 150 MHz signal is also divided into a 10 MHz signal(150MHz/15), and it is supplied to A3 and A4 for reference frequency through A10 analog motherboard. The 10MHz reference signal is output to Int Ref Out BNC connector on the rear panel directly.

## A3 Source Board

A3 source board supplies a measurement signal through RF OUT port to A6 test head, and a local signal to A4 receiver board. A3 source board also supplies a DC bias voltage which is generated by A2 DC bias board(Opt.001), through RF OUT port to A6 test head.

VCO (Voltage Controlled Oscillator) frequency varies from 2305 MHz to 4152 MHz, and it is mixed with RF2 signal to produce the measurement frequency(1MHz to 3GHz). The relationship of the VCO frequency and measurement frequency is shown in Table 5-2. After the mixing, the signal is filtered with a selectable BPF (Band Pass Filter) or a LPF (Low Pass Filter) to eliminate the unwanted harmonics and spurious.

**Table 5-2 VCO and measurement frequencies for each band**

	Measurement Frequency	VCO Frequency
Band1	1 MHz – 1739.9 MHz	2305 MHz – 4043.9 MHz
Band2	1740 MHz – 2259.9 MHz	2892 MHz – 3411.9 MHz
Band3	2260 MHz – 2679.9 MHz	3412 MHz – 3831.9 MHz
Band4	2680 MHz – 3000 MHz	3832 MHz – 4152 MHz

The filtered signal goes through an attenuator variable from 0 dB to 35 dB in 5 dB steps, and is output to RF Out port. Attenuation is controlled depending on the output power setting as shown in Table 5-3.

**Table 5-3 Output Attenuator**

Nominal Setting of Output Power Level	Output Attenuator on A3
-7.9 dBm ~ +1 dBm	0 dB
-12.9 dBm ~ -8 dBm	5 dB
-17.9 dBm ~ -13 dBm	10 dB
-22.9 dBm ~ -18 dBm	15 dB
-27.9 dBm ~ -23 dBm	20 dB
-32.9 dBm ~ -28 dBm	25 dB
-37.9 dBm ~ -33 dBm	30 dB
-40 dBm ~ -38 dBm	35 dB

The A3 VCO signal is also mixed with RF1 signal which is supplied to A4 receiver board.

### A4 Receiver Board

A4 receiver board receives the Vch and Ich signals from the A6 test head through PORT1 and PORT2, mixes down them into 12.5 KHz IF signals, and converts the analog signals to digital data. The receiver has two signal flow to measure Vch and Ich signals.

The input attenuators on A4 board are controlled to optimize the receiver input signal levels(the signal to noise ratios) for accurate measurements. These attenuators are set depending on the output power setting as shown in Table 5-4.

Table 5-4

**Input Attenuator**

Nominal Setting of Output Power Level	Input Attenuator on A4
-12.9 dBm ~ +1 dBm	20 dB
-22.9 dBm ~ -13 dBm	10 dB
-40 dBm ~ -23 dBm	0 dB

The variable gain IF amplifiers automatically control the IF signal levels to be within appropriate range for the input of the ADC (analog to digital converter).

The digitized data at ADC is transferred through A10 analog motherboard to the DSP on A21 analog interface board which performs vector component extraction and calculation for the Vch and Ich signal data.

**A6 Test Head Board(for the standard and Option 010)**

A6 test head receives the stimulus signal from the A3 source board through RFOUT port and test cable(Opt.010), and applies it to the DUT (device under test). At the same time, the test head outputs two signals(Vch and Ich signals) that represent the voltage across the DUT and the current through the DUT.

**A10 Analog Motherboard**

A10 analog motherboard connects A1, A2, A3, and A4 to A21 analog interface board.

**A2 DC Bias Board (Option 001)**

A2 DC bias board contains a DC bias source that provides a bias voltage up to 40V and a bias current up to 100 mA.

The bias voltage across the DUT and the bias current through the DUT are monitored and feedback to the bias source. This feedback operation automatically maintains the bias voltage or current at the same level as the setting value regardless of the DUT's dc resistance. The bias source allows a current compliance(limit) to be applied in the voltage bias mode and a voltage compliance in the current bias mode.

**A5 Reference Oven Board (Option 1D5)**

A5 reference oven board supplies a high stability 10MHz external reference signal to A1 reference oscillator board via an external connection path between rear panel BNC connectors. When the 10MHz external reference output (Option 1D5) is connected to the EXT REF Input connector on the rear panel, the internal REF OSC output signal is phase locked to the external reference signal.



---

## 6 Replaceable Parts

This chapter contains information for ordering replacement parts for the E4991A RF Impedance/Material Analyzer.

## Ordering Information

To order part listed in the replaceable part lists, quote the Agilent part number (with a check digit), indicate the quantity required, and address the order to the nearest Agilent office. The check digit will ensure accurate and timely processing of the order.

To order a part not listed in the replaceable part table, include the instrument model number, the description and function of the part, and the quantity of parts required. Address the order to the nearest Agilent office.

## Direct Mail Order System

Within the USA, Agilent can supply parts through a direct mail order system. There are several advantages to this system:

- Direct ordering and shipping from the Agilent Parts Center in Mountain View, California.
- No maximum or minimum on any mail order (there is a minimum order amount for parts ordered through a local Agilent office when the orders require billing and invoicing)
- Prepaid transportation (there is a small handling charge for each order).
- No invoices.

In order for Agilent to provide these advantages, please send a check or money order with each order.

Mail order forms and specific ordering information are available through your local Agilent sales office. Addresses and telephone numbers are located in a separate document shipped with the manuals.



---

## Exchange Assemblies

Under the rebuilt-exchange assembly program, certain factory-repaired and tested assemblies are available on a trade-in basis. These assemblies are offered at lower cost than a new assembly, but meet all factory specifications required of a new assembly.

The defective assembly must be returned for credit under the terms of the rebuilt-exchange assembly program. Any spare assembly stock desired should be ordered using the new assembly part number.

---


## Replaceable Parts List (for serial prefix JP1KH, JP2KH, and MY432)

### Power Cables and Plug Configurations

For details of the power cables and plug configurations, refer to Appendix D, “Power Requirement,” on page 339.

### Top View (Major Assembly)

Figure 6-1 Top View (Major Assembly)

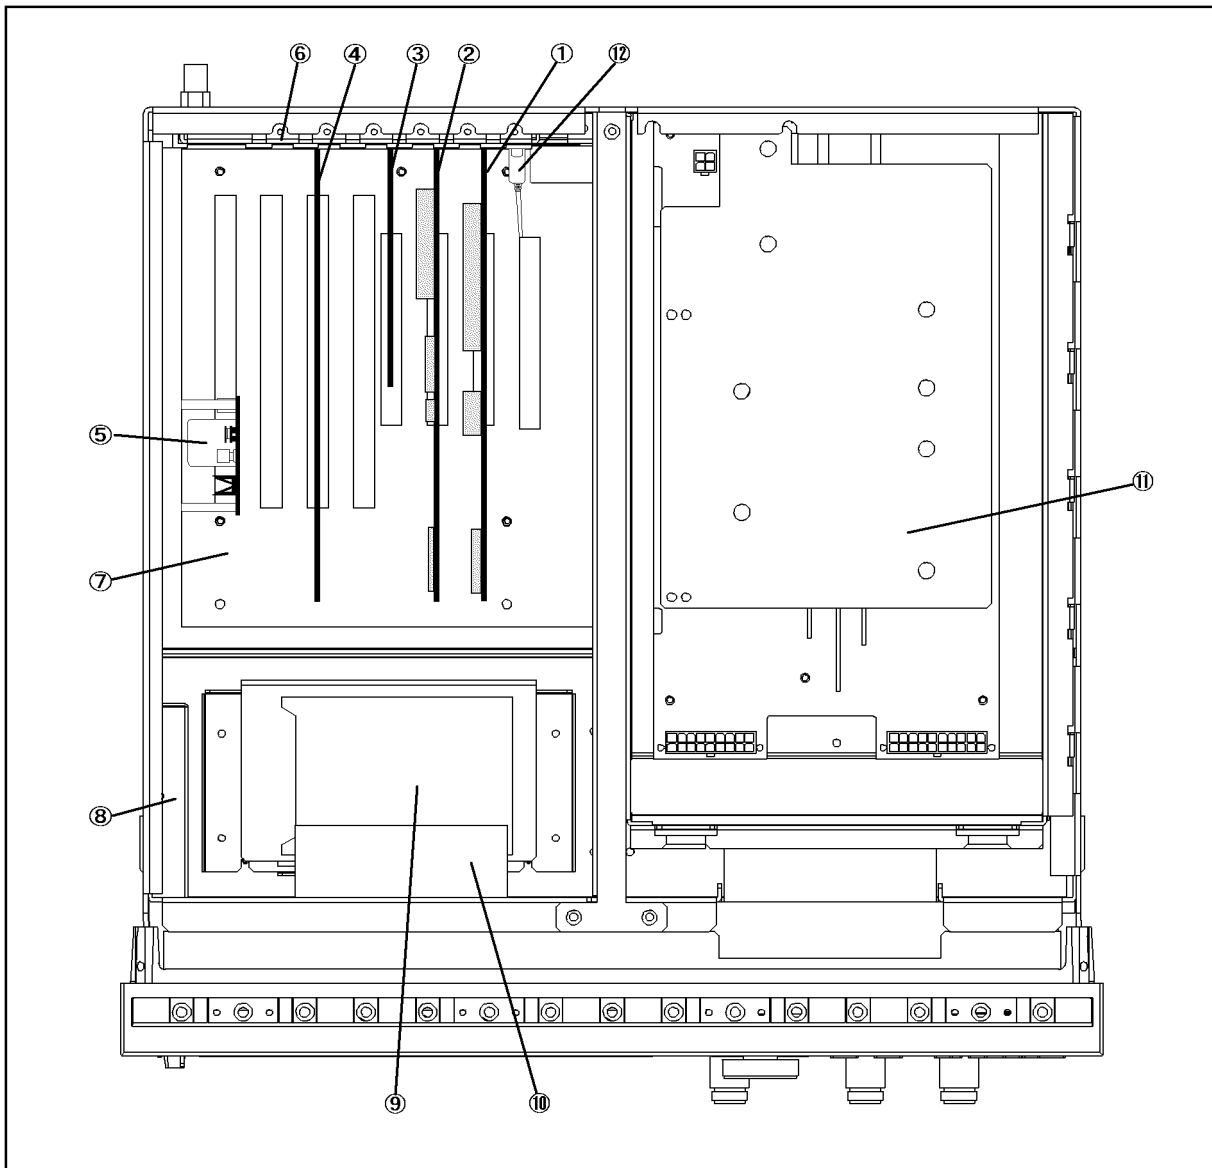

e4991ase024

**Table 6-1 Top View (Major Assembly)**


Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	04287-66521	7	1	A21 ANALOG INTERFACE BOARD
	1818-6491	1	1	IC, EEPROM*1
	0515-0430	3	1	SCREW M3
2	54810-66413	6	1	A26 DISPLAY BOARD
	04287-87101	3	1	LABEL
	0515-0430	3	1	SCREW M3
3	1150-7769	2	1	A25 LAN BOARD
	0515-0430	3	1	SCREW M3
4	82341C #002	8	1	A24 GPIB BOARD
	0515-0430	3	1	SCREW M3
5	E4991-66505	7	1	A5 10MHz OVEN (Opt. 1D5)
	0515-0914	8	3	SCREW-MACH M3X0.5
6	04287-01210	5	2	SLOT COVER
	0515-0430	3	2	SCREW M3
7	E4991-61020	1	1	A20 ATX DIGITAL MOTHER BOARD
	0515-1250	7	6	SCREW M3X0.5
	0380-1811	9	1	STAND OFF
8	0950-2782	4	1	A28 FLOPPY DISK DRIVE
	04287-01203	6	1	FDD HOLDER
	0515-1056	1	3	SCREW
	0515-1550	0	4	SCREW M3-L 8 P-H
9	See Table 6-13		1	Mass Storage Disk Drive Assembly
	0515-1550	0	4	SCREW M3-L 8 P-H
10	04287-61011	8	1	FAN ASSY
	0515-1666	9	4	SCREW M4X35 POZI
11	See Table 6-14		1	A50 Power Supply Assembly
12	E4991-61001	8	1	PORT USB
	1400-0249	0	1	CABLE TIE
	0515-1250	7	1	SCREW

Replaceable Parts  
Replaceable Parts List (for serial prefix JP1KH, JP2KH, and MY432)

\*1. Included in the analog Interface board.

Top View (Cables & Other Parts)

Figure 6-2 Top View (Cables & Other Parts)

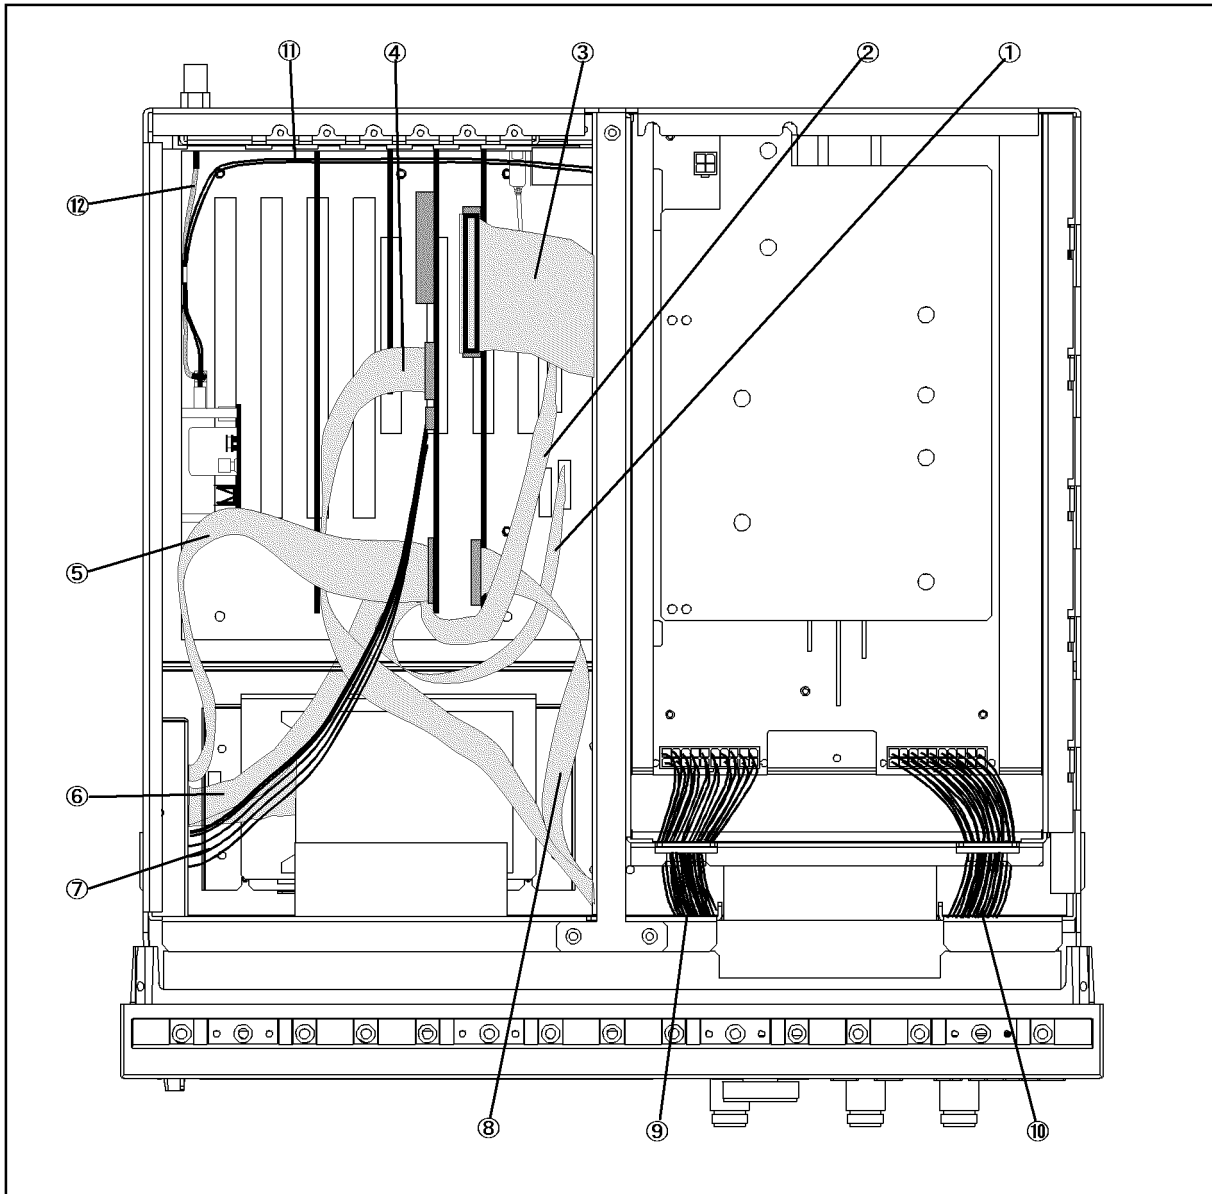


e4991ase023

**Table 6-2 Top View (Cables)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	54801-61611	5	1	FLAT CABLE ASSY
2	54801-61610	4	1	FLAT CABLE ASSY
3	04396-61707	3	1	CABLE ASSY
4	04287-61607	0	1	FLAT CABLE
5	E5100-61661	1	1	CABLE FLAT 26PIN
6	54801-61636	4	1	FLAT CABLE ASSY
7	54801-61635	3	1	WIRE ASSY
8	04287-61609	2	1	FLAT CABLE ASSY
9	04287-61632	1	1	WIRE ASSY
10	04287-61633	2	1	WIRE ASSY
11	E4991-61606	9	1	WIRE ASSY
12	E4991-61605	8	1	RF CABLE ASSY

Top View (Miscellaneous Parts)

Figure 6-3 Top View (Miscellaneous Parts)

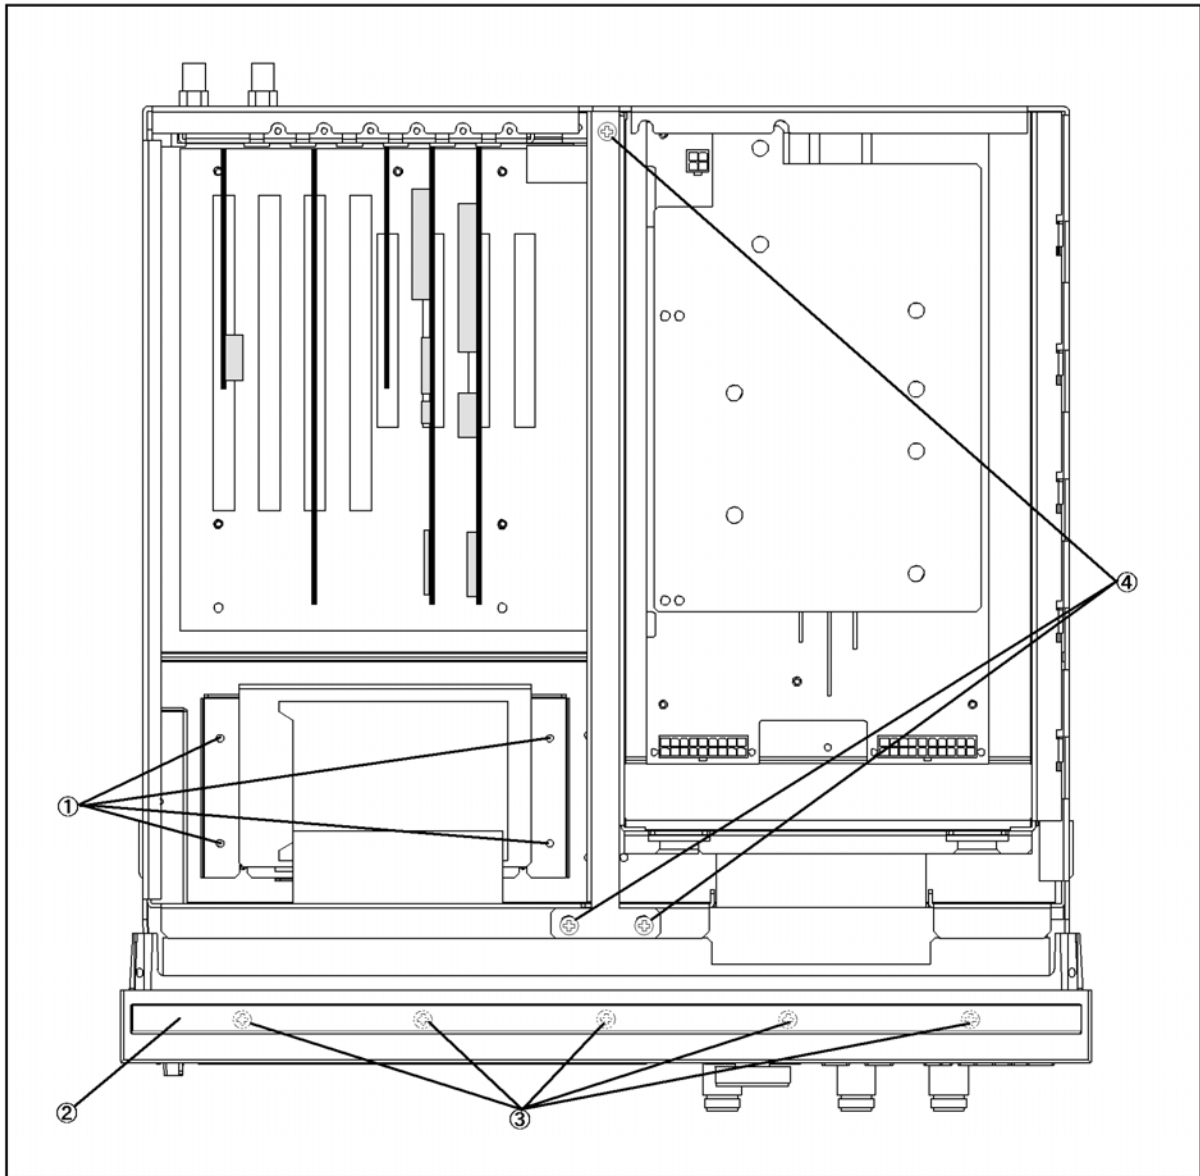

4287ase06010


**Table 6-3                      Top View (Screw)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	0515-1550	0	4	SCREW M3-L 8 P-H
2	5041-9176	2	1	TRIM STRIP
3	0515-0889	6	5	SCREW-MACH M3.5X.6
	0515-0889	6	6	SCREW-MACH M3.5X.6 (Bottom Side)
4	0515-0914	8	3	SCREW-MACH M3X0.5

Replaceable Parts  
Replaceable Parts List (for serial prefix JP1KH, JP2KH, and MY432)

Top View (Under Power Supply)

Figure 6-4 Top View (Under Power Supply)

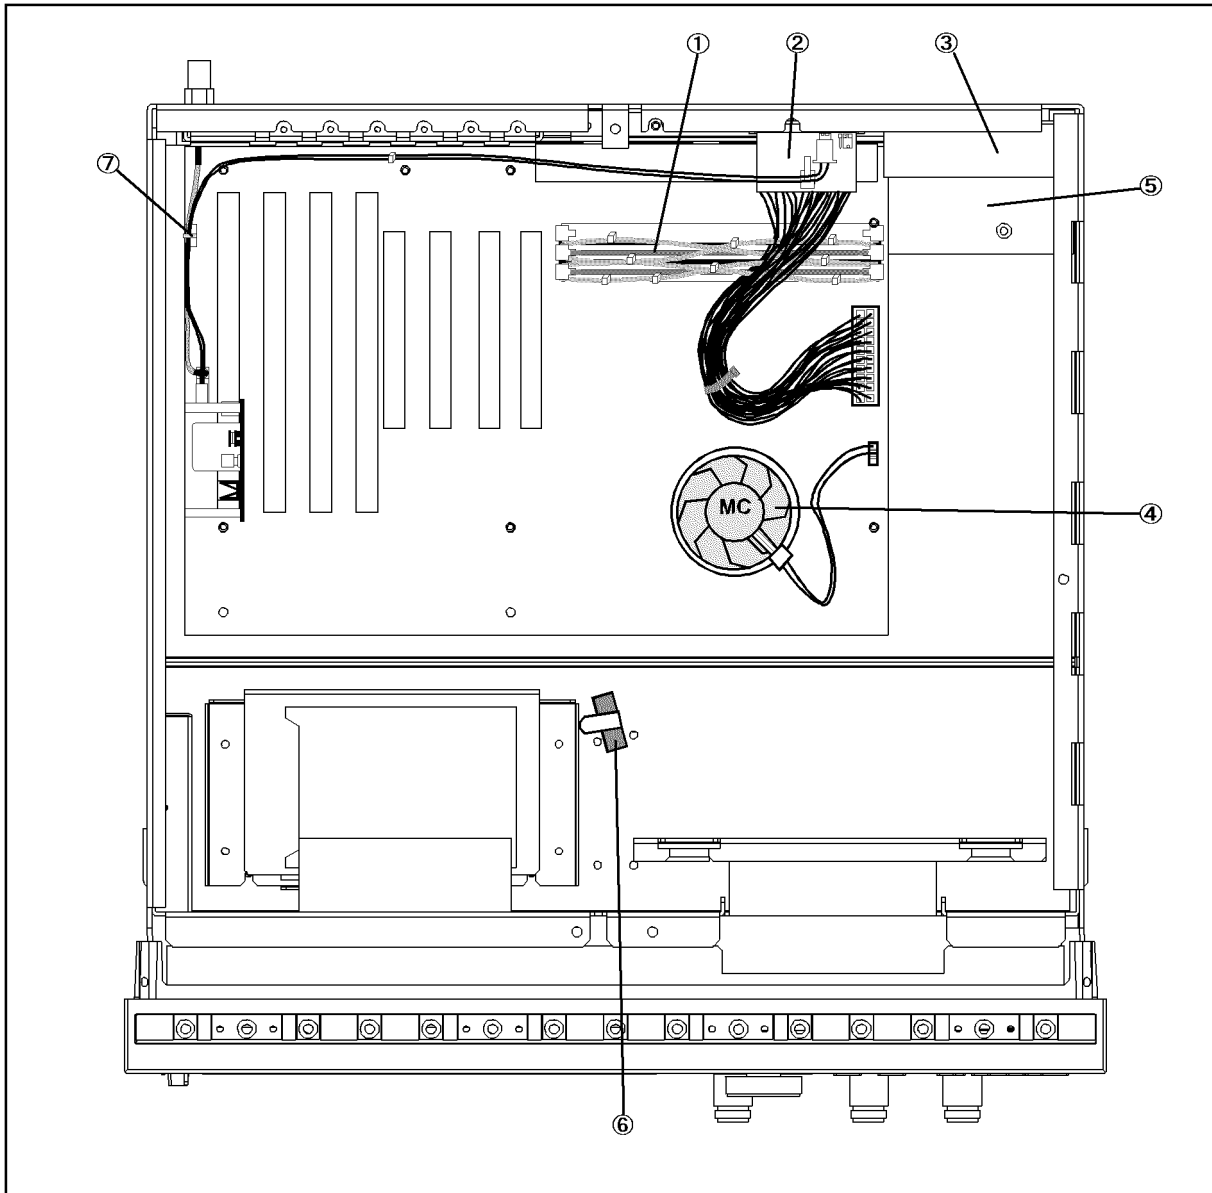

e4991ase025




**Table 6-4 Top View (Under Power Supply)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	1818-7321	8	2	DIMM64MB
	1400-0249	0	10	CABLE TIE
2	04287-61631	0	1	WIRE ASSY
3	E4991-66510	4	1	ANALOG MOTHER
	0515-1550	0	10	SCREW M3-L 8 P-H
4	1821-4776	8	1	CPU IC-K6
	3160-0938	6	1	FAN
	5183-4063	6	1	THERMAL CMD
	5184-4049	0	1	CLAMP
5	04287-61622	9	1	WIRE ASSY
	04287-01213	8	1	COVER
	0515-1550	0	1	SCREW M3-L 8 P-H
6	0515-0914	8	3	SCREW-MACH M3X0.5
	1400-1334	6	1	CLAMP CABLE
7	1400-1334	6	1	CLAMP CABLE

**Front View (Analog Boards and Semi Rigid Cables)**

**Figure 6-5** Front View (Analog Boards and Semi Rigid Cables)

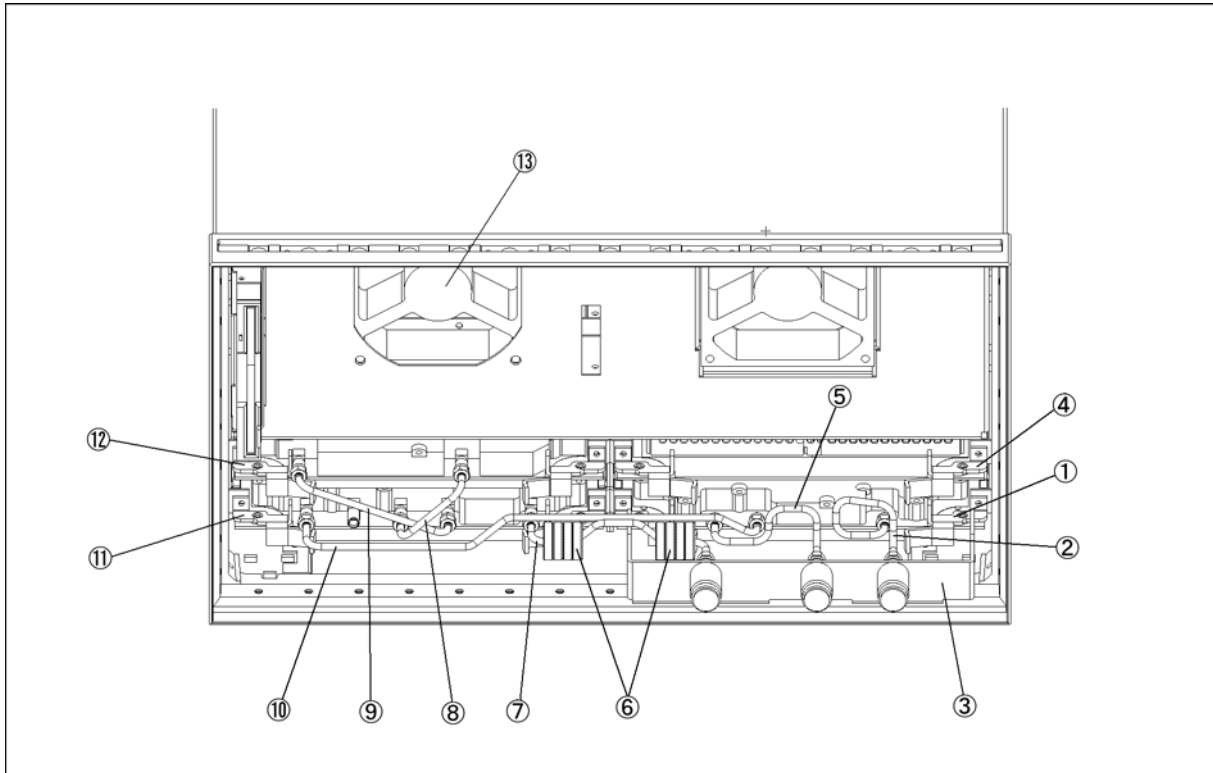


e4991ase026

**Table 6-5 Front View (Analog Boards and Semi Rigid Cables)**

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	04287-66554	6	1	A4 RECEIVER BOARD
	04287-69554	2	1	A4 RECEIVER BOARD (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
	0515-0924	0	4	SCREW M3X0.5
2	04287-61601	4	1	RF CABLE ASSY
3	E4991-65001	6	1	N CONNECTOR ASSY
4	E4991-66502	4	1	A2 DC BIAS BOARDS (Opt. 001)
	0515-1550	0	2	SCREW M3-L 8 P-H
5	04287-61603	6	1	RF CABLE ASSY SRGD
6	9170-1468	6	8	CORE-TROID
	1400-0249	0	2	CABLE TIE
7	04287-61604	7	1	RF CABLE ASSY
8	04287-61605	8	1	RF CABLE ASSY
9	04287-61606	9	1	RF CABLE ASSY
10	04287-61602	5	1	RF CABLE ASSY
11	E4991-66553	5	1	A3 SOURCE BOARD
	E4991-69553	1	1	SOURCE BOARD (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
12	04287-66511	5	1	REFERENCE OSCILLATOR
	04287-69511	1	1	REFERENCE OSCILLATOR (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
13	04287-61011	8	1	FAN ASSY
	0515-1666	9	4	SCREW M4X35 POZI

## Front Panel

Figure 6-6 Front Panel

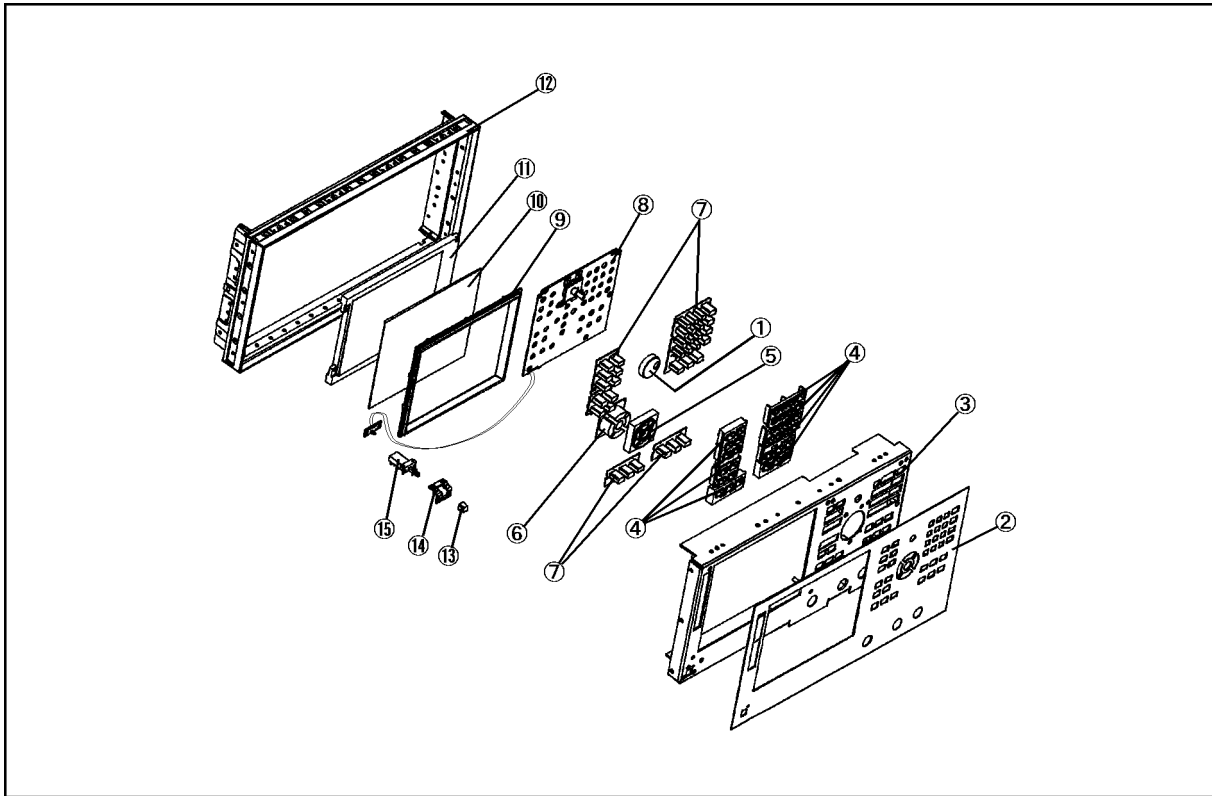


e4991ase030

**Table 6-6 Front Panel**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	5182-7594	2	1	KNOB
2	E4991-00201	2	1	FRONT PANEL
3	E4991-00202	3	1	SUB PANEL
4	E5100-40001	9	1	FRONT BEZEL
5	04287-40004	7	1	GUIDE FOR CURSOR KEY
6	E4991-25002	3	1	RUBBER KEY (CURSOR)
7	E4991-25001	2	1	RUBBER KEY
8	E4991-66522	8	1	FRONT KEYBOARD
9	04287-40001	4	1	FRONT BEZEL
10	04287-25003	4	1	OPTICAL FILTER
11	2090-0396	0	1	LCD-DISPLAY
	04287-25004	5	1	GASKET
12	5022-1190	4	1	FRONT FRAME
13	0371-3953	5	1	KEY CAP
14	04287-01212	7	1	BRACKET SW
	0515-0999	9	2	SCREW M2.5X0.45 L=6 FL
15	04287-61901	7	1	WIRE ASSY WITH SWITCH

**Front Panel (Back Side)**

**Figure 6-7** Front Panel (Back Side)

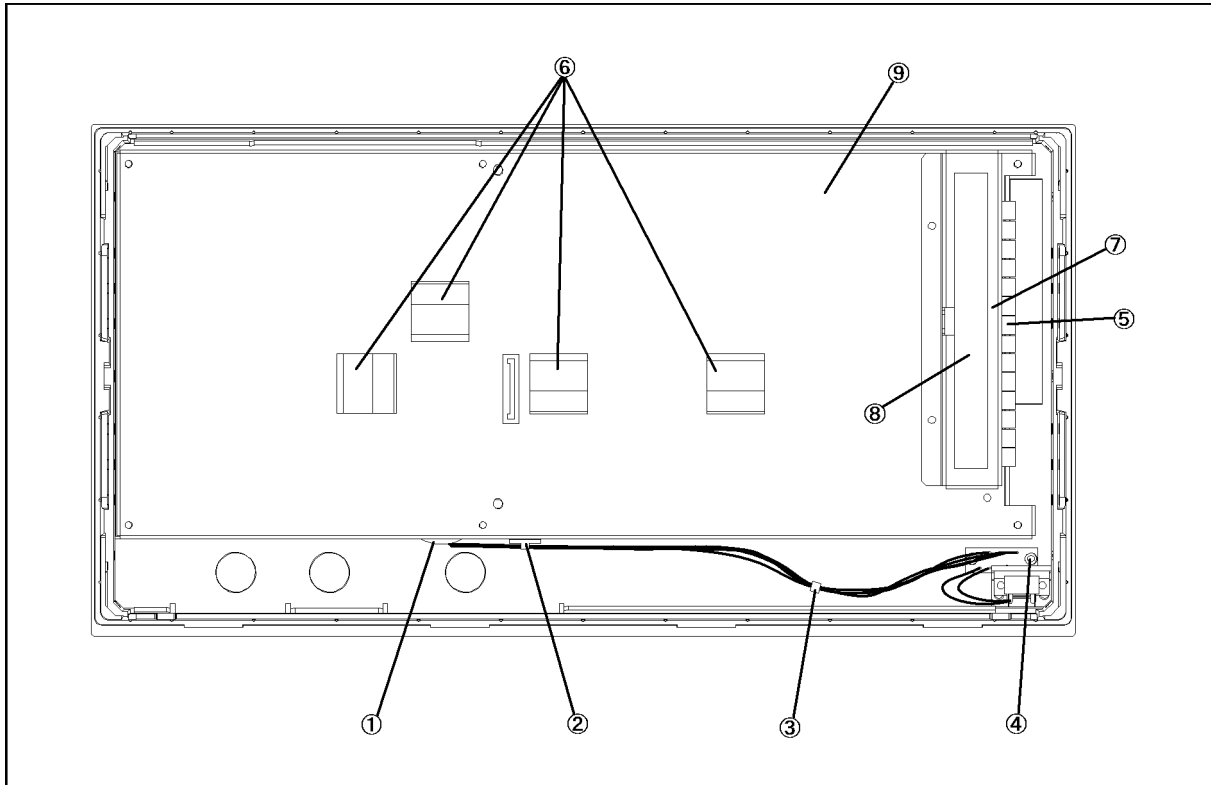


e4991ase028

**Table 6-7** Front View (Analog Boards and Semi Rigid Cables)

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	0400-0010	2	1	ROUND GROMET
2	1400-1334	6	1	CABLE CLAMP
3	1400-0249	0	1	CABLE TIE
4	0515-1550	0	2	SCREW M3-L 8 P-H
5	0363-0170	5	9 cm	RFI GASKET
6	1400-0611	0	4	CABLE CLAMP
7	E4991-01205	8	1	ANGLE
8	0950-2888	1	1	INVERTER BOARD
9	E4991-00606	1	1	CASE SHIELD

Rear View

Figure 6-8 Rear View

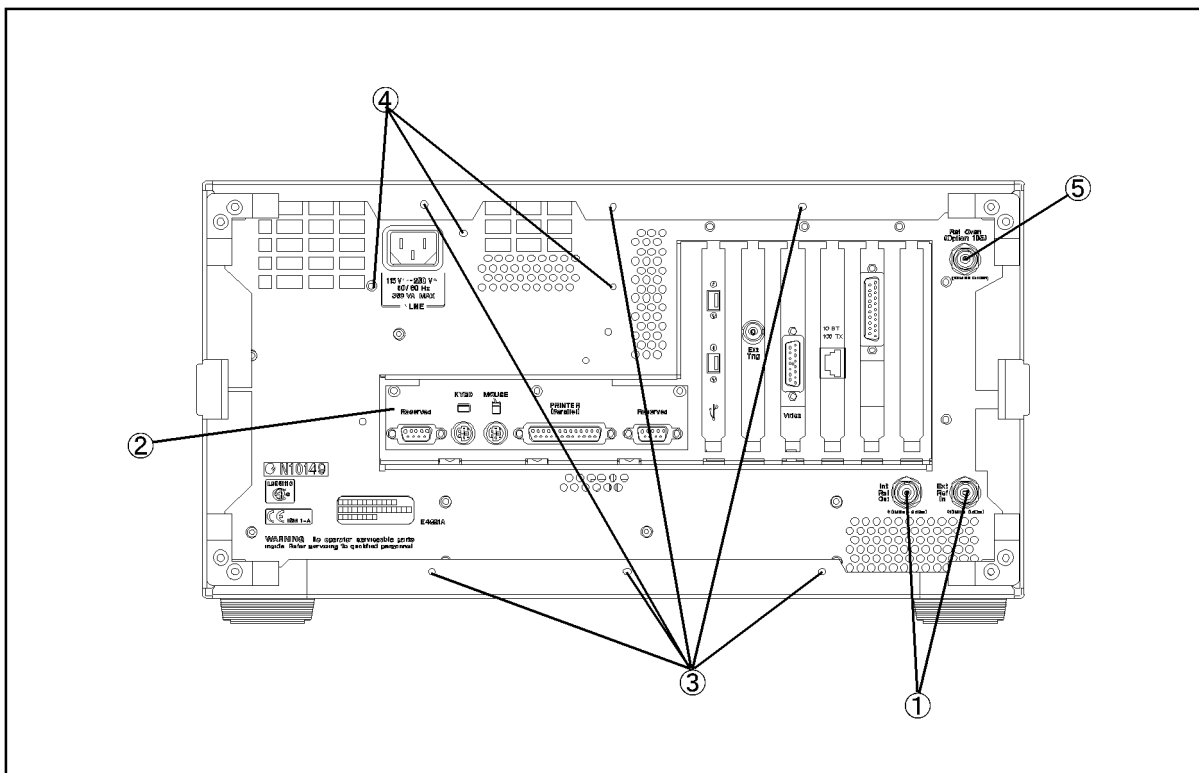

e4991ase027


Table 6-8 Rear View

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	2950-0054	1	2	NUT-HEX-DBL-CHAM
	2190-0054	1	2	WSHR-LK INTL T
2	04287-01205	8	1	REAR COVER I/O
	0515-0914	8	1	SCREW-MACH M3X0.5
3	0515-1232	5	6	SCREW-MACH M3.5
4	0515-1550	0	3	SCREW M3-L 8 P-H
5	1250-0252	6	1	CONN-RF BNC (Opt. 1D5)
	2190-0102	8	1	WSHR-LK INTL T
	2950-0035	8	1	NUT-HEX-DBL-CHAM

Side View

Figure 6-9

Side View

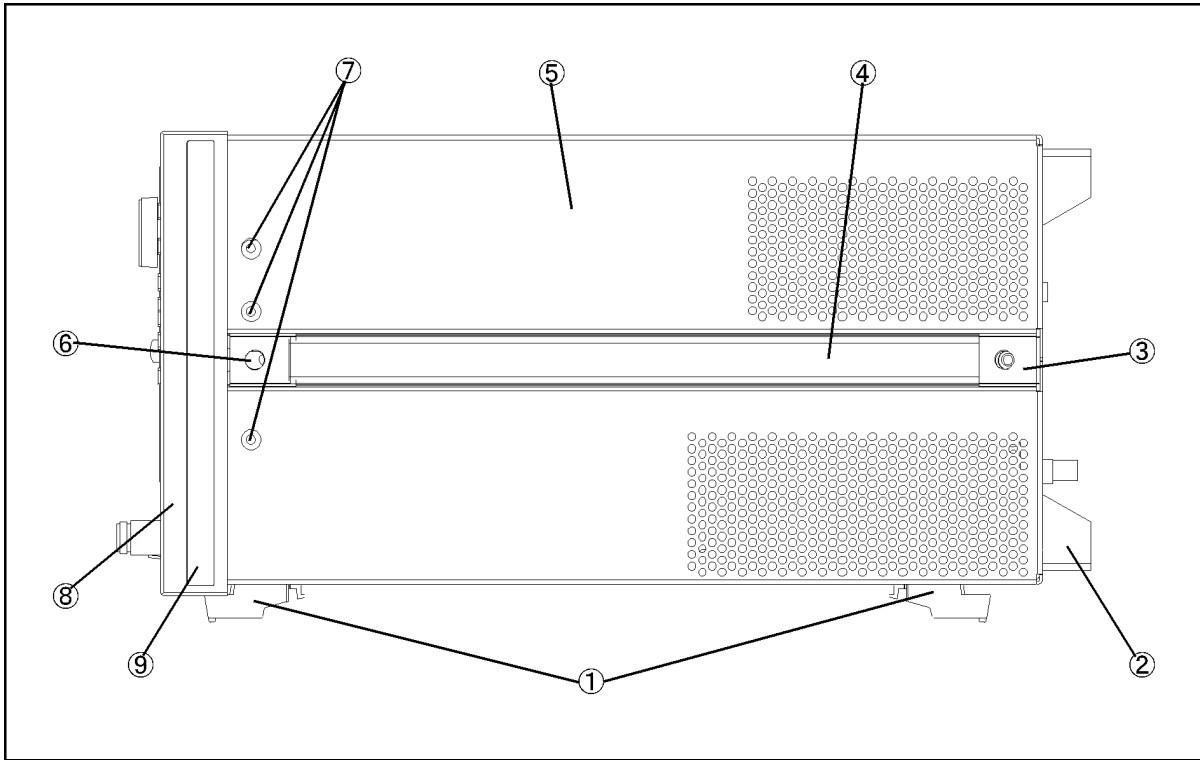

4287ase06008




**Table 6-9 Side View**

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	5041-9167	1	4	FOOT FL
	1460-1345	5	2	WIREFORM
2	E5100-40002	0	4	STANDOFF
	0515-1232	5	4	SCREW-MACH M3.5
3	5041-9187	5	2	STRAP HANDL REAR
	0515-0956	8	2	SCREW
4	5063-9209	8	2	STRAP HANDLE
5	E4991-60002	7	1	COVER ASSY
6	5041-9186	4	2	STRAP HANDLE FRT
	0515-0956	8	2	SCREW
7	0515-2079	0	6	SCREW M4X8
8	5022-1190	4	1	FRONT FRAME221.5
	8160-0641	3	210 cm	GASKET BRAID
9	5041-9173	9	2	SIDE TRIM 221.5

### Test Head

Figure 6-10 Test Head

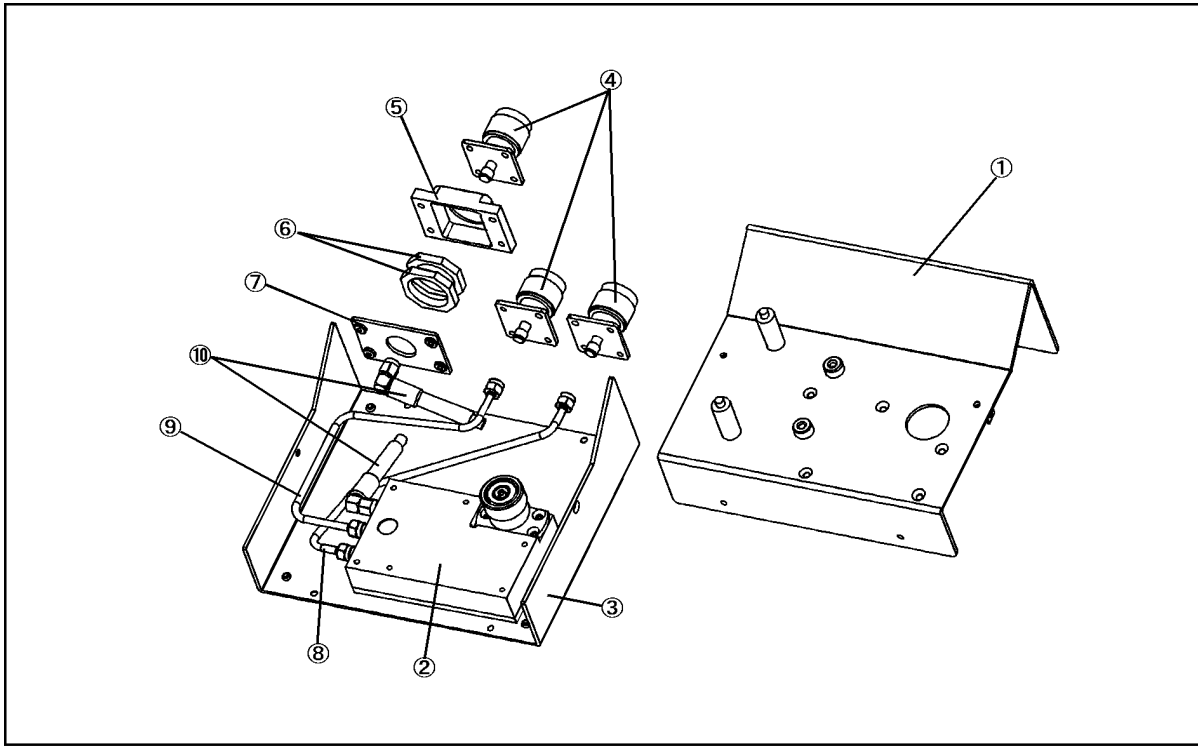

e4991ase029


**Table 6-10            Test Head**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	E4991-04001	8	1	COVER TOP
2	E4991-60111	9	1	TEST HEAD
	0515-0914	8	5	SCREW-MACH M3X0.5
3	E4991-04002	9	1	COVER BOTTOM
	0515-0914	8	6	SCREW-MACH M3X0.5
	0403-0800	4	4	FOOT
4	1250-2468	0	3	RF CONNECTOR N-SMA
	0515-0914	9	8	SCREW-MACH M3X0.5
5	E4991-20063	6	1	HOUSING
	0515-1006	1	4	SCREW-MACH M3X0.5
6	E4991-25101	3	2	CUSHION
7	E4991-00601	6	1	PLATE
8	E4991-61601	4	1	RF CABLE ASSY
9	E4991-61602	5	1	RF CABLE ASSY
10	E4991-61603	6	1	RF CABLE ASSY

Replaceable Parts  
Replaceable Parts List (for serial prefix JP1KH, JP2KH, and MY432)

Option 007 Temperature Characteristic Test Kit

Figure 6-11 Replaceable Parts of the Option 007 Test Kit

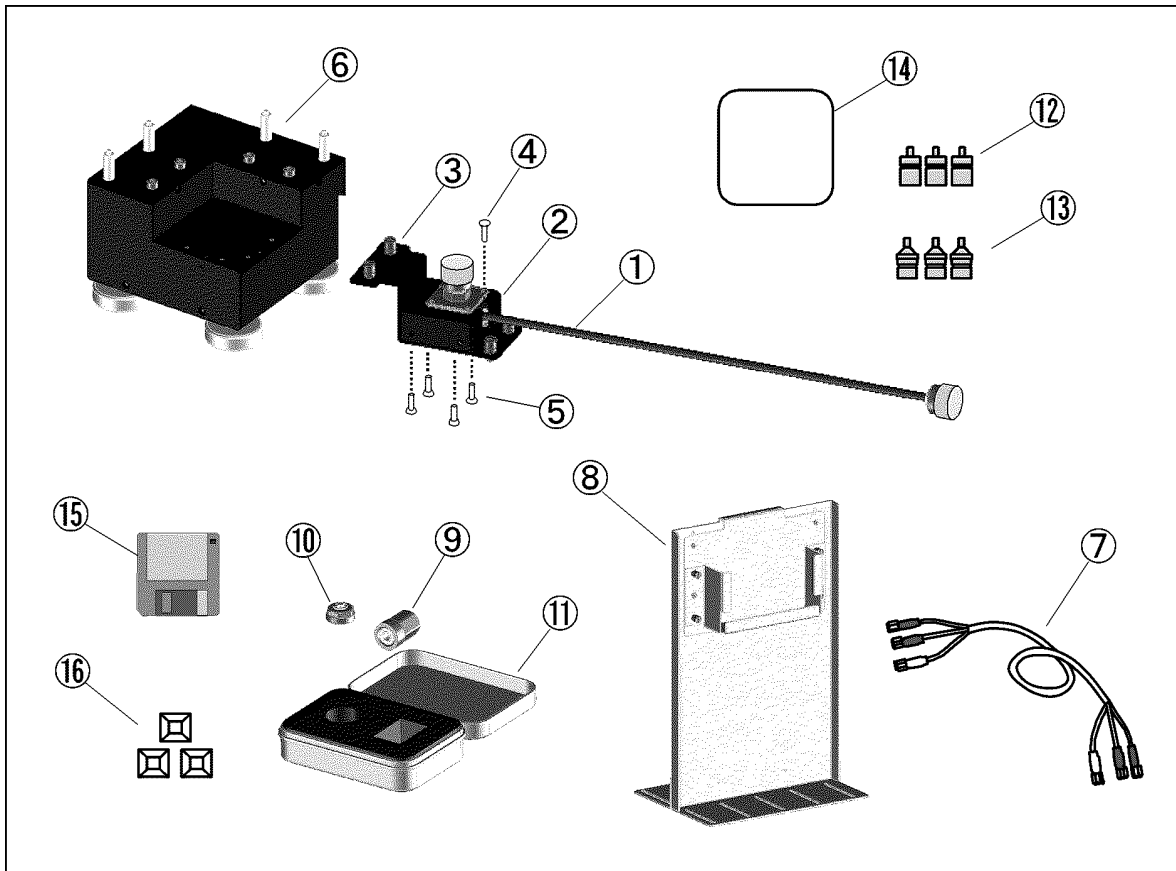


e4991u\_opt00703

**Table 6-11                      Replaceable Pats of the Option 007**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	E4991-61610	5	1	CABLE ASSY HEAT-RESISTANT
2	E4991-01220	7	1	HOLDER CABLE
3	E4991-01221	8	1	HOLDER CABLE
4	0515-0372	2	4	SCREW-MACH M3X8 TORX T10 PAN
5	0515-1946	8	4	SCREW-MACH M3X6 TORX T10 90 DEG FLAT
6	E4991-60005	0	1	STAND TEST-FIXTURE
7	04287-61651	4	1	RF CABLE ASSY EXTENSION
8	E4991-60006	1	1	STAND TEST-HEAD
9	E4991-60032	3	1	TERMINATION OPEN
10	E4991-60031	2	1	TERMINATION SHORT
11	E4991-60060	7	1	CASE TEMPERATURE-COMPENSATION-SET
12	1250-2879	7	3	ADAPTER N (M) - SMA (F)
13	1250-3157	6	3	ADAPTER N (F) - SMA (F)
14	04291-09001	4	1	PAD
15	E4991-18001	7	1	DISK FLOPPY TEMP-CHARAC-TEST SOFTWARE
16	1400-0584	6	3	TIE CABLE

**Test Head for Option 010**

**Figure 6-12** Test Head for Option 010

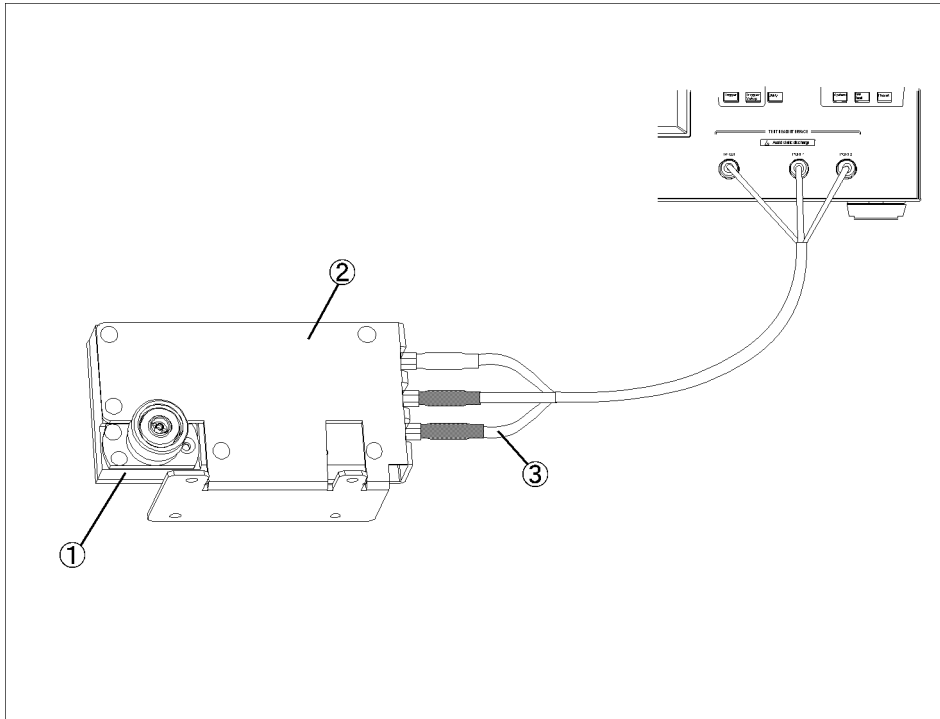


e4991ase4002

**Table 6-12** Test Head for Option 010

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	E4991-60111	9	1	TEST HEAD
2	E4991-01210	5	1	ANGLE
3	04287-61651	4	1	EXTENSION CABLE ASSY

### Mass Storage Disk Drive Assembly

**Figure 6-13**      **Mass Storage Disk Drive Assembly**

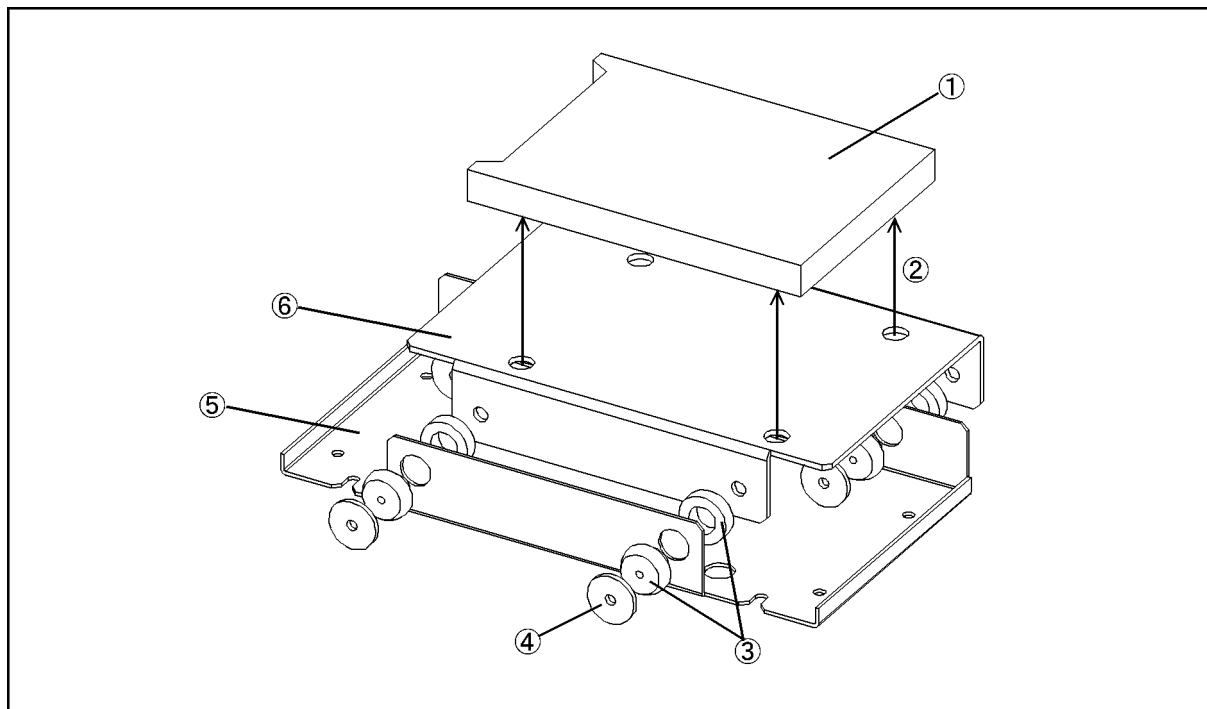


4287ase06013

**Table 6-13**      **Mass Storage Disk Drive Assembly**

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	E4991-65003	8	1	HDD INSTALLED
2	0515-0924	0	4	SCREW-MACH M3X0.5
3	1410-1580	5	4	BUSHING
4	E5010-00655	6	4	PLATE
5	04287-01211	6	1	HDD BRACKET
6	04287-01204	7	1	HDD HOLDER

### Power Supply Assembly

Figure 6-14 Power Supply Assembly

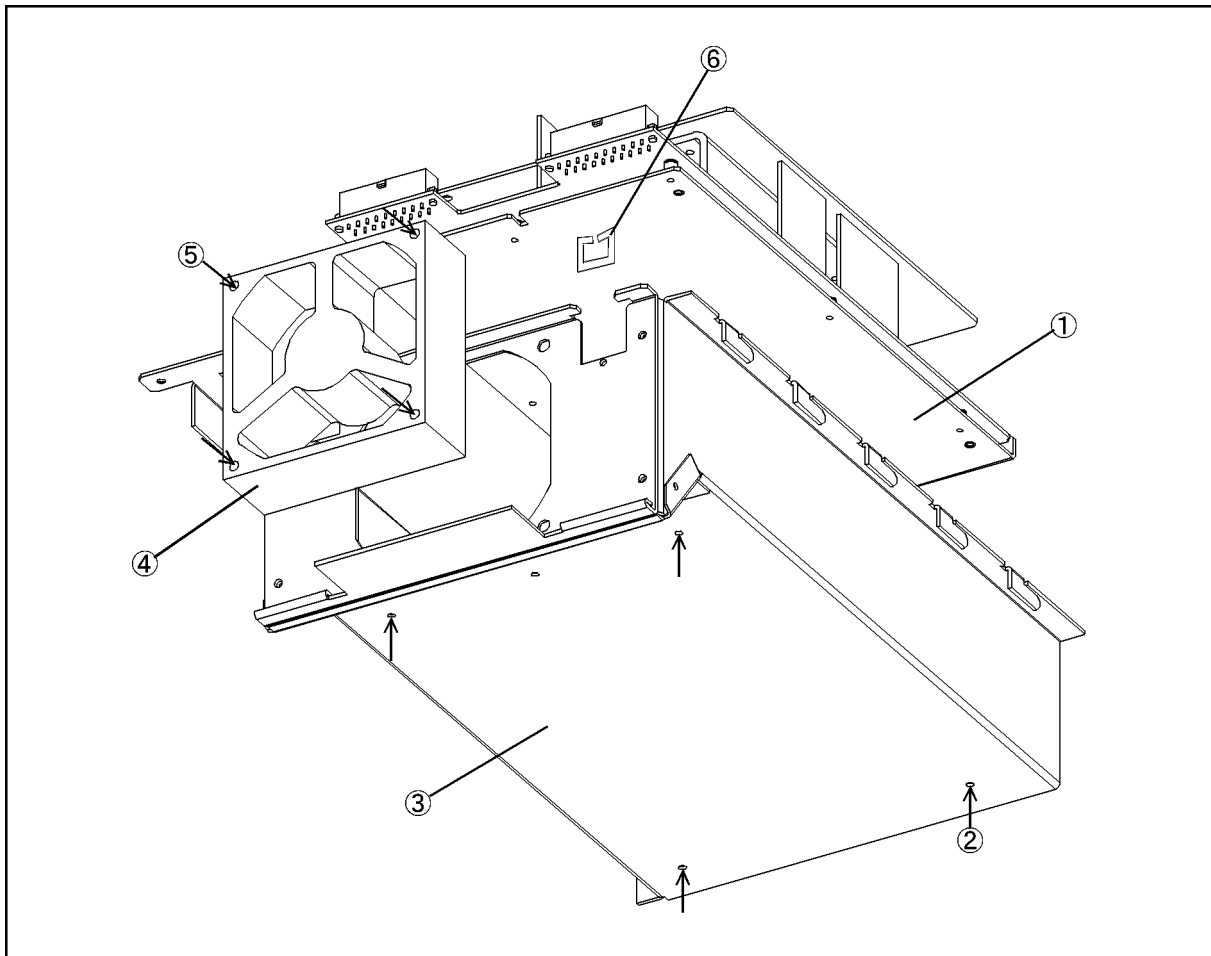

4287ase06012

Table 6-14 Power Supply Assembly

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	0950-3396	8	1	PWR-SPLY-225W
2	0515-0924	0	2	SCREW-MACH M3X0.5
3	04287-60003	8	1	BRACKET P/S ASSY
4	04287-61011	8	1	FAN ASSY
5	0515-1666	9	4	SCREW M4X35 POZI
6	1400-2198	2	2	SADDLE-EDGE

### Other Parts



**Table 6-15 Other Parts**

Agilent Part Number	C/D	Qty.	Description
E4991-900x0	4	1	OPERATION MANUAL
E4991-900x2	6	1	PROGRAMMING MANUAL
E4991-901x0	9	1	SERVICE MANUAL *1
E4991-180x0	0	1	SAMPLE PROGRAM SET
E4991-900x1	5	1	QUICK START GUIDE
E4991-905x0	9	1	CD-ROM (manual)
E4991-16000	2	1	RECOVERY FD 1.00
E4991-16101	4	1	CD-ROM SOFTWARE 1.00
1150-7846	6	1	MOUSE PS/2
1150-7970	7	1	KEYBOARD
8710-1766	2	1	TORQUE WRENCH
E4991-60021	0	1	SHORT TERMINATION *2
E4991-60022	1	1	OPEN TERMINATION *2
04287-60021	0	1	50 OHM TERMINATION *2
04287-60022	1	1	LOW-LOSS CAPACITOR *2
16195-60041	8	1	CARRYING CASE *2
16195-90030	8	1	OPERATION NOTE, 16195B *2

\*1. Opt. 0BW only

\*2. Included in 16195B Calibration Kit


## Replaceable Parts List (for serial prefix MY433 and later)

### Power Cables and Plug Configurations

For details of the power cables and plug configurations, refer to Appendix D, “Power Requirement,” on page 339.

### Top View (Major Assembly)

Figure 6-15 Top View (Major Assembly)

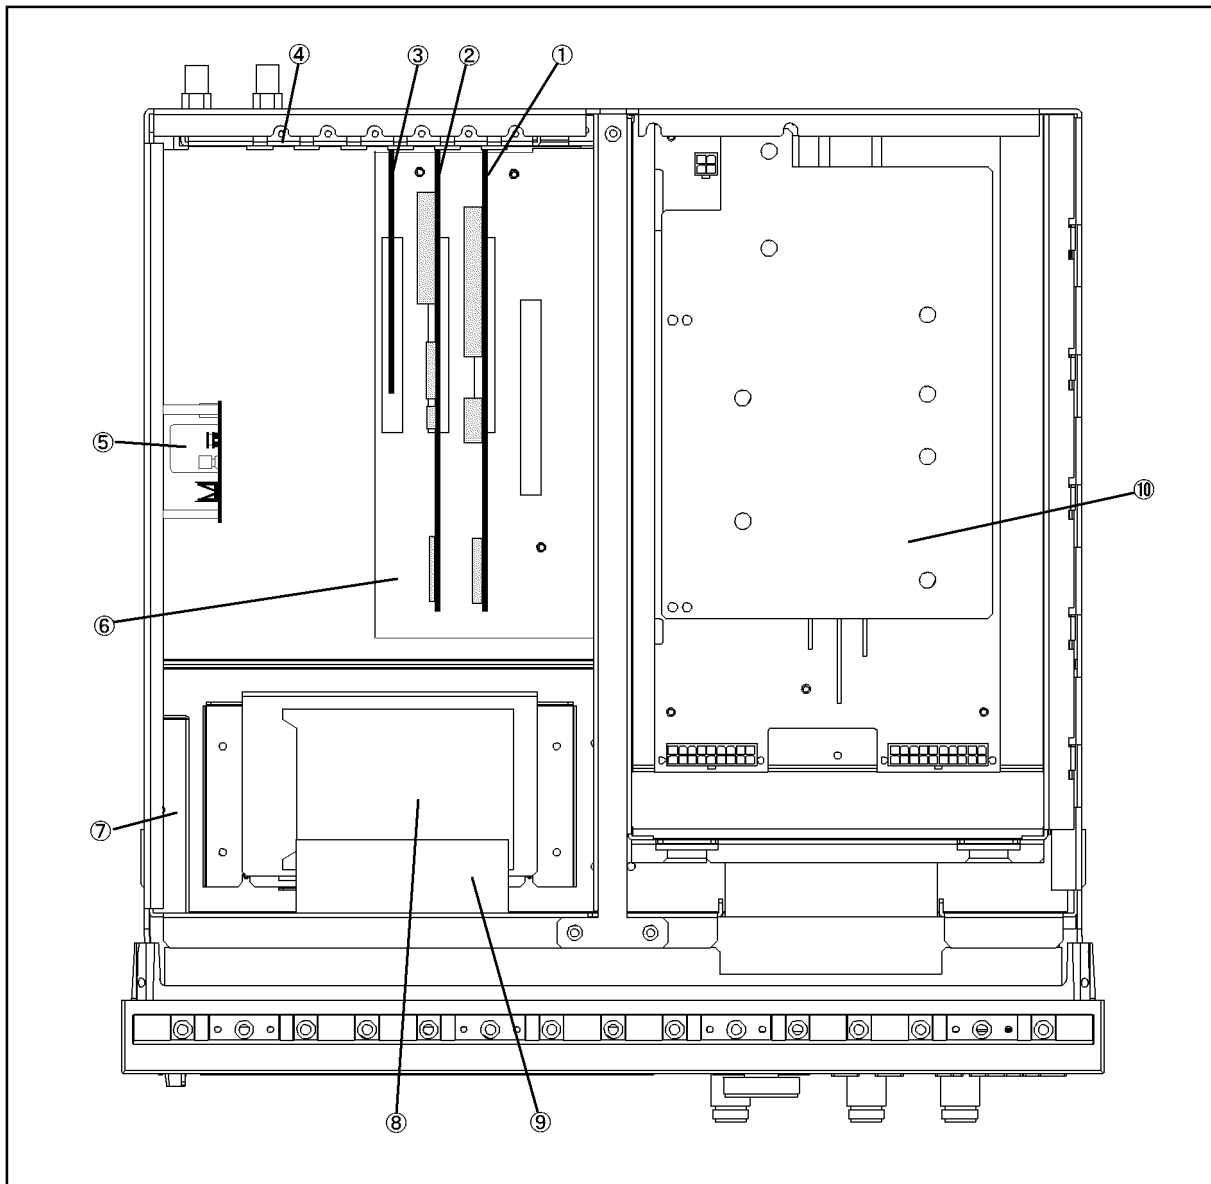

e4991ase091

**Table 6-16 Top View (Major Assembly)**


Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	04287-66531		1	A21 ANALOG INTERFACE BOARD
	1818-6491	1	1	IC, EEPROM*1
	0515-0430	3	1	SCREW M3
2	54810-66413	6	1	A26 DISPLAY BOARD
	04287-87101	3	1	LABEL
	0515-0430	3	1	SCREW M3
3	04287-61009	8	1	A24 GPIB BOARD
	0515-0430	3	1	SCREW M3
4	04287-01210	5	3	SLOT COVER
	0515-0430	3	3	SCREW M3
5	E4991-66505	7	1	A5 10MHz OVEN Assemble (Opt. 1D5)
	0515-0914	8	3	SCREW-MACH M3X0.5
6	0960-2372	1	1	A20 ATX DIGITAL MOTHER BOARD
	0515-1250	7	5	SCREW M3X0.5
7	See Table 6-28		1	A28 Floppy Disk Drive Assembly
	0515-1550	0	4	SCREW M3-L 8 P-H
8	See Table 6-29		1	Mass Storage Disk Drive Assembly
	0515-1550	0	4	SCREW M3-L 8 P-H
9	04287-61011	8	1	FAN ASSY
	0515-1666	9	4	SCREW M4X35 POZI
10	See Table 6-14		1	A50 Power Supply Assembly

\*1. Included in the analog Interface board.

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Top View (Cables & Other Parts)

Figure 6-16 Top View (Cables & Other Parts)

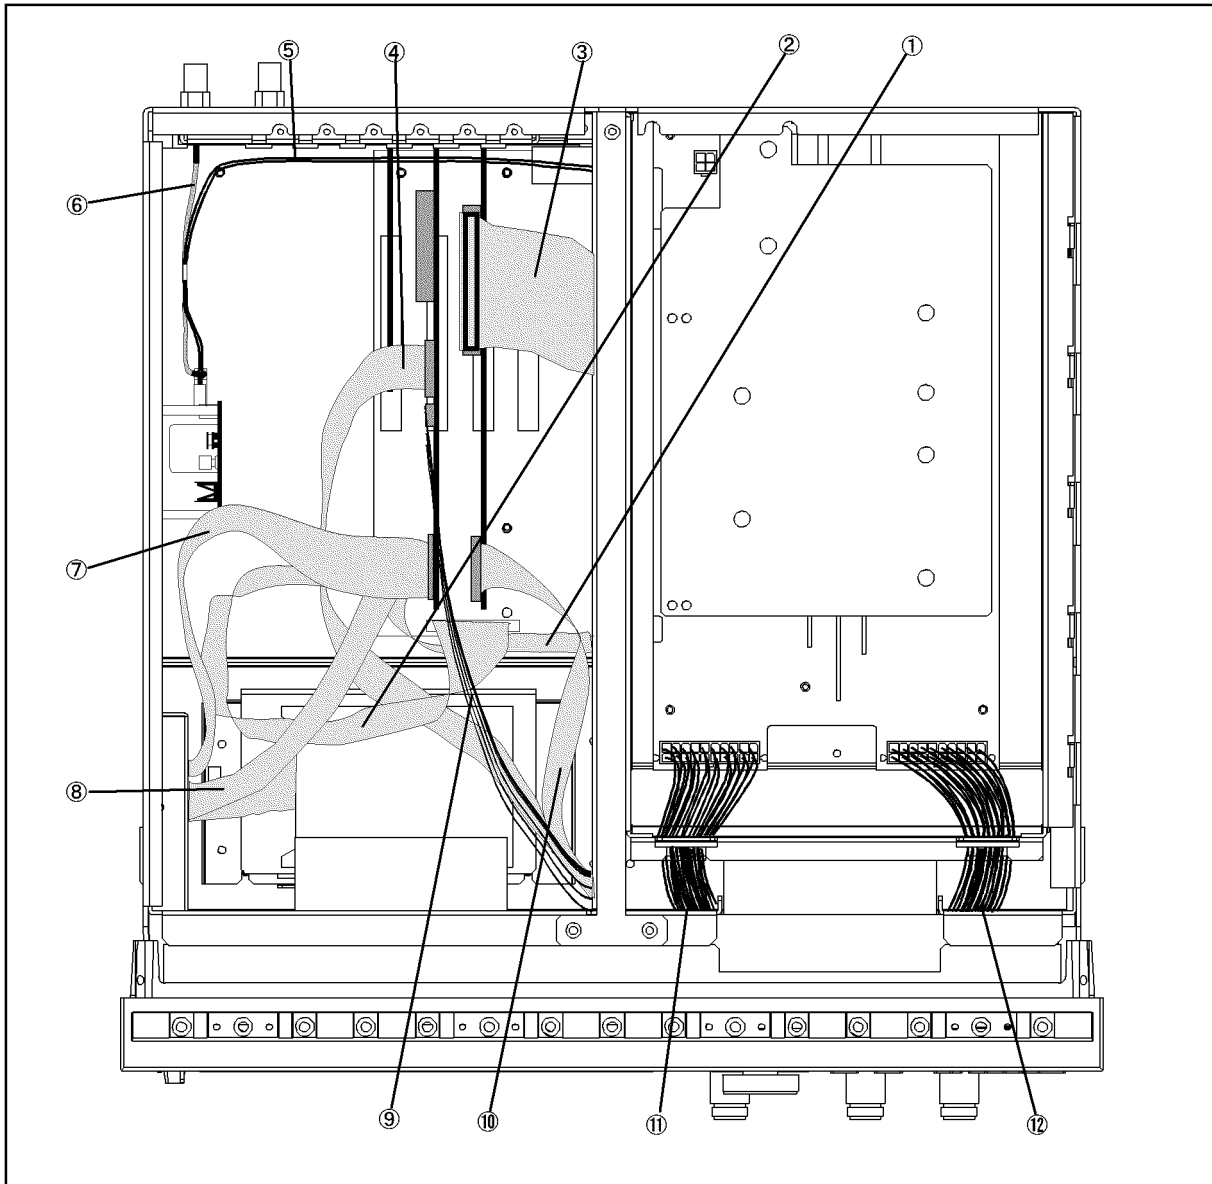

e4991ase092


**Table 6-17 Top View (Cables)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	54801-61610	4	1	FLAT CABLE ASSY
2	54801-61611	5	1	FLAT CABLE ASSY
3	04396-61707	3	1	CABLE ASSY
4	04287-61607	0	1	FLAT CABLE
5	E4991-61606	9	1	WIRE ASSY
6	E4991-61605	8	1	RF CABLE ASSY
7	E5100-61661	1	1	CABLE FLAT 26PIN
8	54801-61636	4	1	FLAT CABLE ASSY
9	54801-61635	3	1	WIRE ASSY
10	04287-61609	2	1	FLAT CABLE ASSY
11	04287-61632	1	1	WIRE ASSY
12	04287-61633	2	1	WIRE ASSY

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Top View (Miscellaneous Parts)

Figure 6-17 Top View (Miscellaneous Parts)

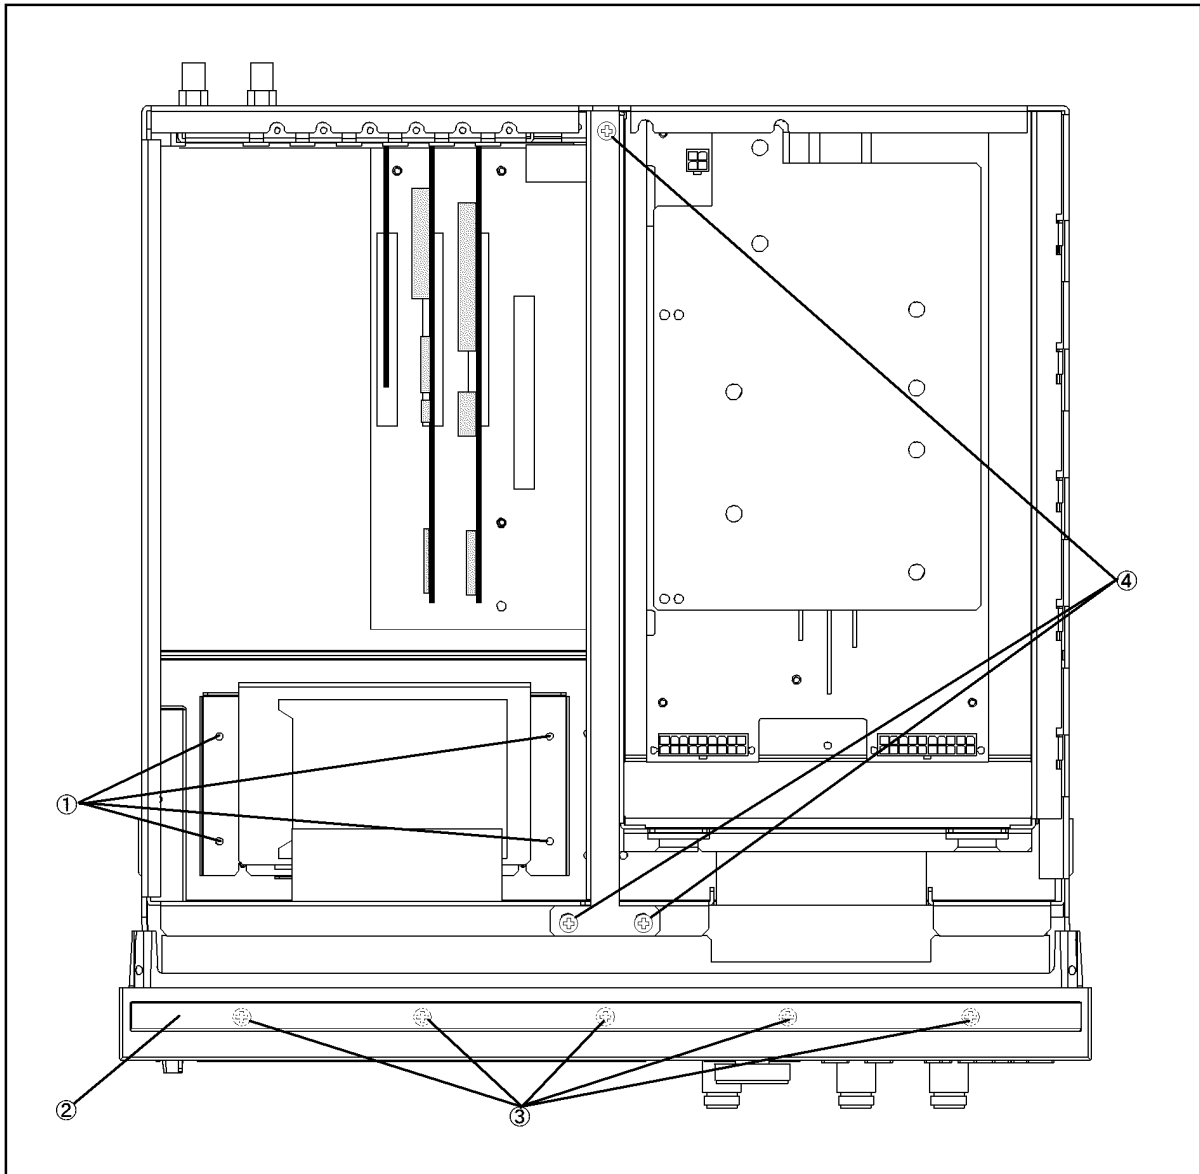

e4991ase093


**Table 6-18            Top View (Screw)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	0515-1550	0	4	SCREW M3-L 8 P-H
2	5041-9176	2	1	TRIM STRIP
3	0515-0889	6	5	SCREW-MACH M3.5X.6
	0515-0889	6	6	SCREW-MACH M3.5X.6 (Bottom Side)
4	0515-0914	8	3	SCREW-MACH M3X0.5

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Top View (Under Power Supply)

Figure 6-18 Top View (Under Power Supply)

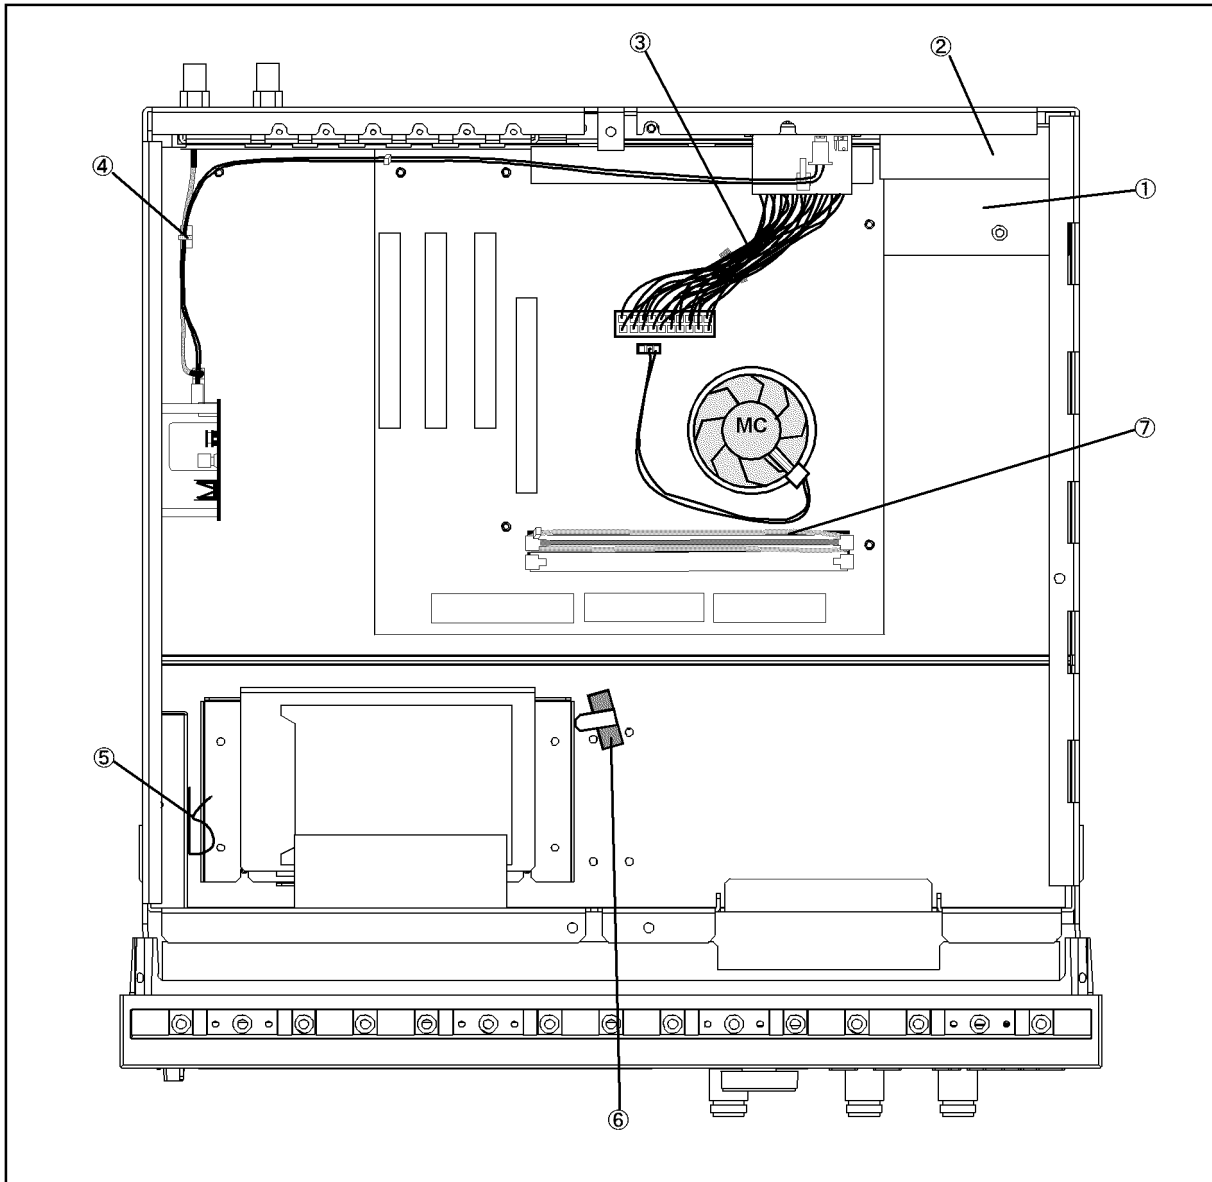

e4991ase094




**Table 6-19                      Top View (Under Power Supply)**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	04287-01213	8	1	COVER
	0515-1550	0	1	SCREW M3-L 8 P-H
	0515-0914	8	3	SCREW-MACH M3X0.5
2	E4991-66510	4	1	ANALOG MOTHER
	0515-1550	0	10	SCREW M3-L 8 P-H
3	04287-61631	0	1	WIRE ASSY
4	1400-1334	6	1	CLAMP CABLE
5	1400-0611	0	1	CLAMP CABLE
6	1400-1334	6	1	CLAMP CABLE
7	1400-3207		1	CABLE TIE

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

**Front View (Analog Boards and Semi Rigid Cables)**

**Figure 6-19** Front View (Analog Boards and Semi Rigid Cables)

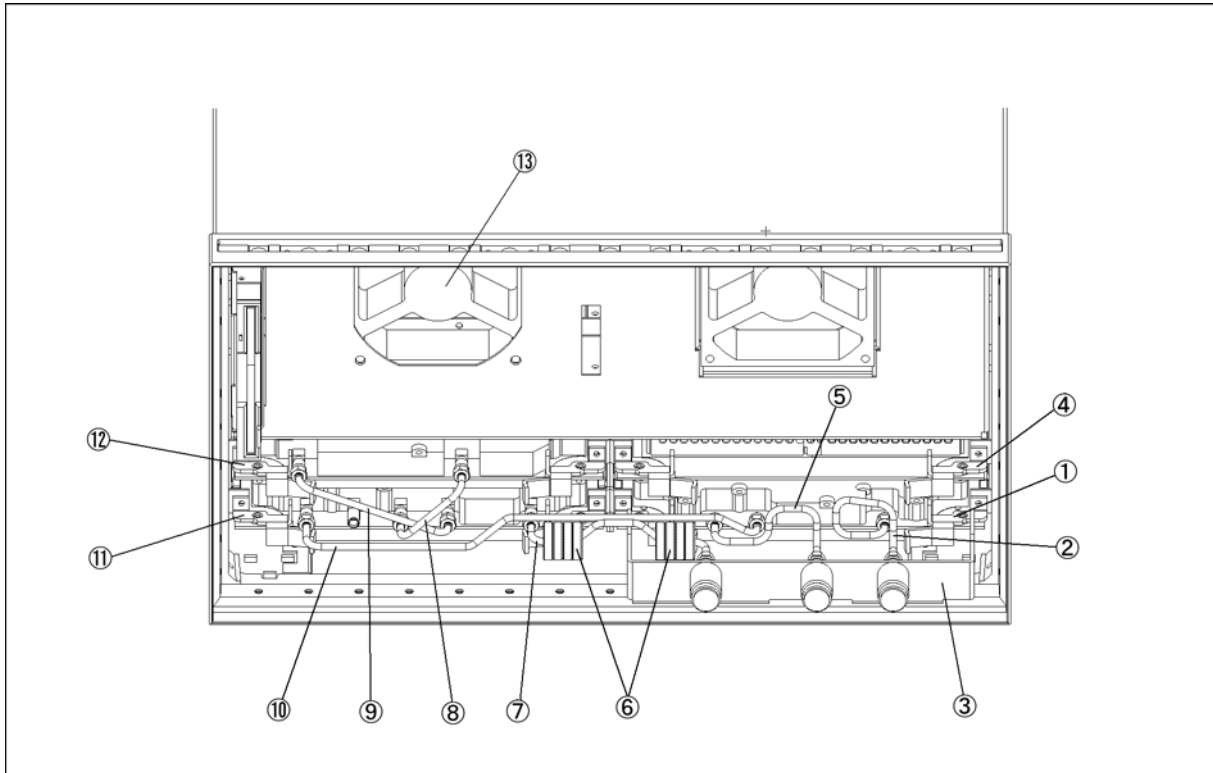


e4991ase026

**Table 6-20 Front View (Analog Boards and Semi Rigid Cables)**

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	04287-66554	6	1	A4 RECEIVER BOARD
	04287-69554	2	1	A4 RECEIVER BOARD (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
	0515-0924	0	4	SCREW M3X0.5
2	04287-61601	4	1	RF CABLE ASSY
3	E4991-65001	6	1	N CONNECTOR ASSY
4	E4991-66502	4	1	A2 DC BIAS BOARDS (Opt. 001)
	0515-1550	0	2	SCREW M3-L 8 P-H
5	04287-61603	6	1	RF CABLE ASSY SRGD
6	9170-1468	6	8	CORE-TROID
	1400-0249	0	2	CABLE TIE
8	04287-61605	8	1	RF CABLE ASSY
9	04287-61606	9	1	RF CABLE ASSY
10	04287-61602	5	1	RF CABLE ASSY
11	E4991-66553	5	1	A3 SOURCE BOARD
	E4991-69553	1	1	SOURCE BOARD (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
12	04287-66511	5	1	REFERENCE OSCILLATOR
	04287-69511	1	1	REFERENCE OSCILLATOR (Exchange)
	0515-1550	0	2	SCREW M3-L 8 P-H
13	04287-61011	8	1	FAN ASSY
	0515-1666	9	4	SCREW M4X35 POZI

## Front Panel

Figure 6-20 Front Panel

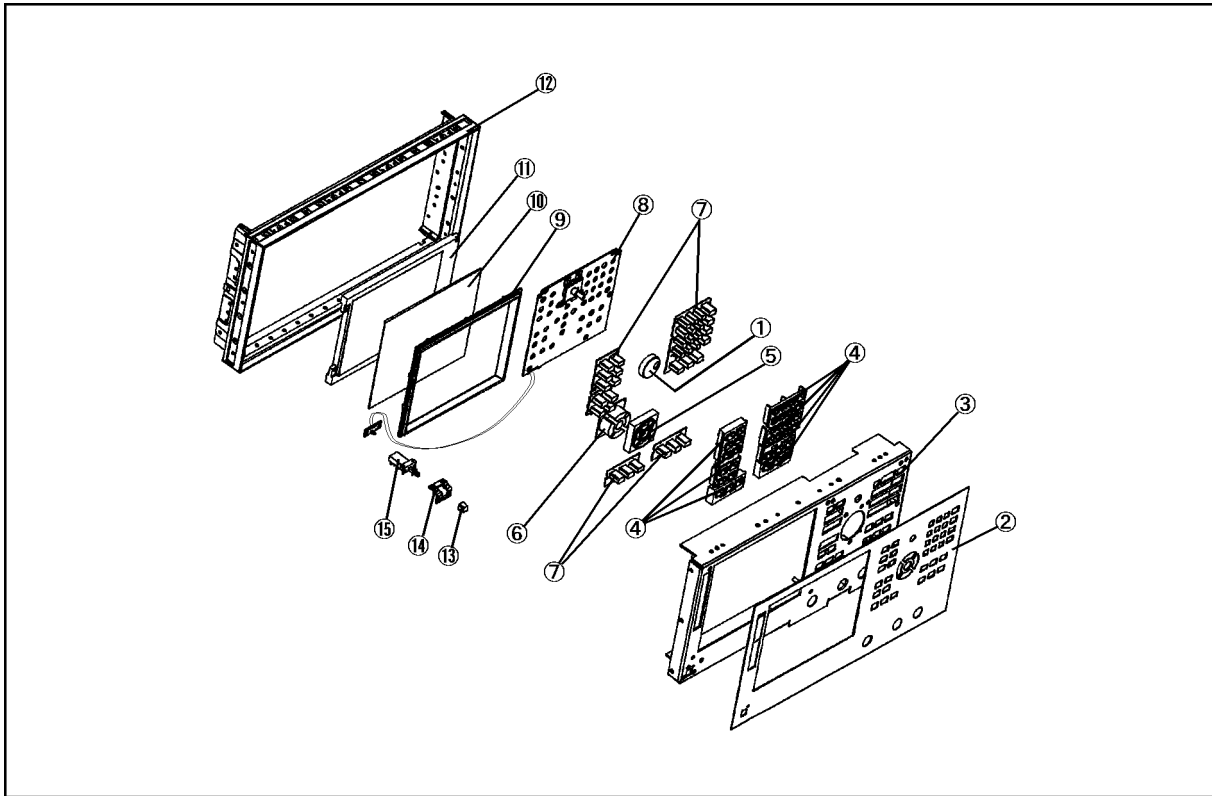

e4991ase030


**Table 6-21 Front Panel**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	5182-7594	2	1	KNOB
2	E4991-00201	2	1	FRONT PANEL
3	E4991-00202	3	1	SUB PANEL
4	E5100-40001	9	1	FRONT BEZEL
5	04287-40004	7	1	GUIDE FOR CURSOR KEY
6	E4991-25002	3	1	RUBBER KEY (CURSOR)
7	E4991-25001	2	1	RUBBER KEY
8	E4991-66522	8	1	FRONT KEYBOARD
9	04287-40001	4	1	FRONT BEZEL
10	04287-25003	4	1	OPTICAL FILTER
11	2090-0396	0	1	LCD-DISPLAY
	04287-25004	5	1	GASKET
12	5022-1190	4	1	FRONT FRAME
13	0371-3953	5	1	KEY CAP
14	04287-01212	7	1	BRACKET SW
	0515-0999	9	2	SCREW M2.5X0.45 L=6 FL
15	04287-61901	7	1	WIRE ASSY WITH SWITCH

Replaceable Parts  
 Replaceable Parts List (for serial prefix MY433 and later)

**Front Panel (Back Side)**

**Figure 6-21** Front Panel (Back Side)

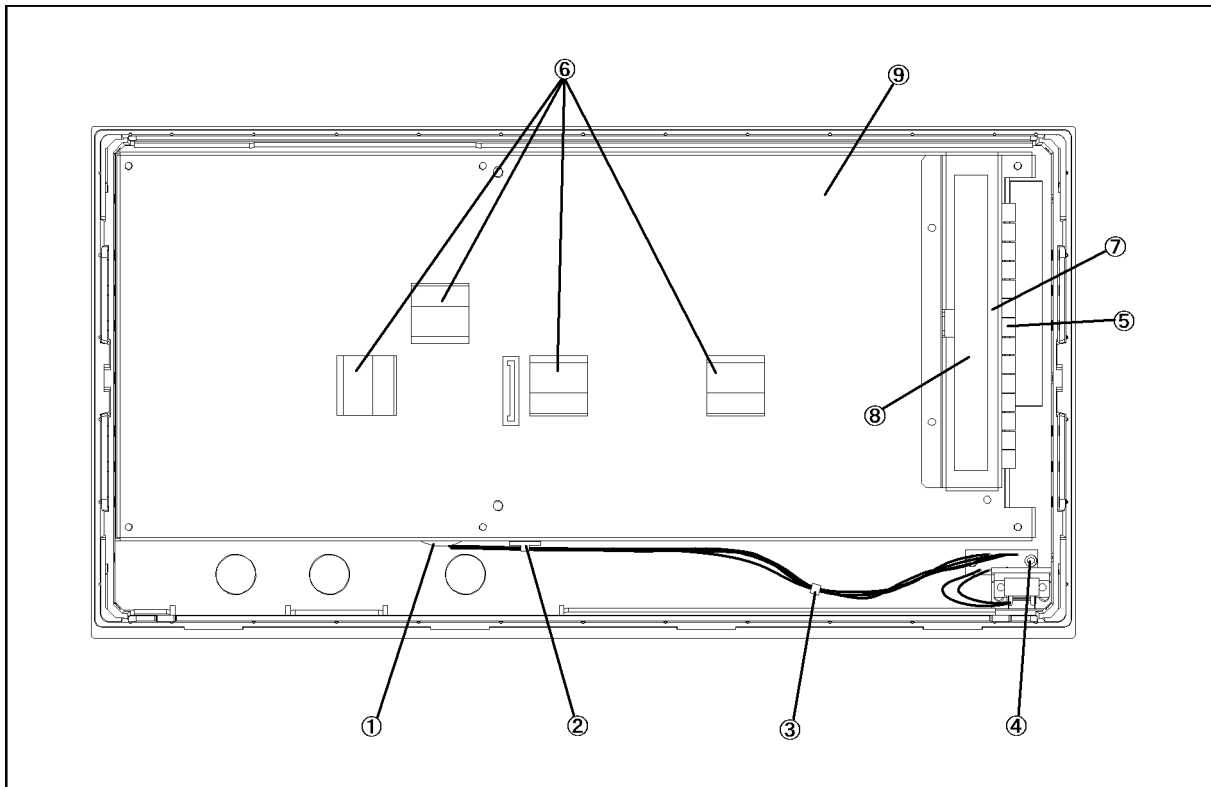

e4991ase028


**Table 6-22** Front View (Analog Boards and Semi Rigid Cables)

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	0400-0010	2	1	ROUND GROMET
2	1400-1334	6	1	CABLE CLAMP
3	1400-0249	0	1	CABLE TIE
4	0515-1550	0	2	SCREW M3-L 8 P-H
5	0363-0170	5	9 cm	RFI GASKET
6	1400-0611	0	4	CABLE CLAMP
7	E4991-01205	8	1	ANGLE
8	0950-2888	1	1	INVERTER BOARD
9	E4991-00606	1	1	CASE SHIELD

Rear View

Figure 6-22

Rear View

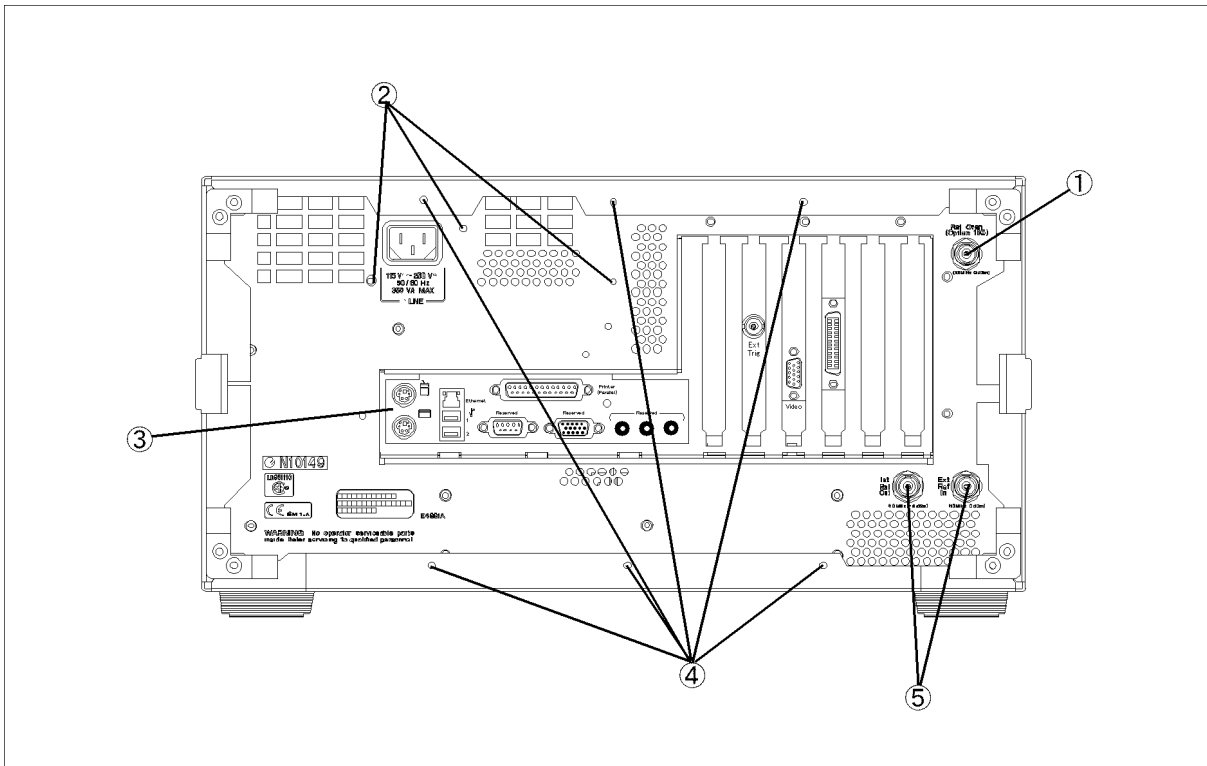

e4991ase095


Table 6-23 Rear View

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	1250-0252	6	1	CONN-RF BNC (Opt. 1D5)
	2190-0102	8	1	WSHR-LK INTL T
	2950-0035	8	1	NUT-HEX-DBL-CHAM
2	0515-1550	0	3	SCREW M3-L 8 P-H
3	04287-01270		1	REAR COVER I/O
	0515-0914	8	2	SCREW-MACH M3X0.5
4	0515-1232	5	6	SCREW-MACH M3.5
5	2950-0054	1	2	NUT-HEX-DBL-CHAM
	2190-0054	1	2	WSHR-LK INTL T

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Side View

Figure 6-23 Side View

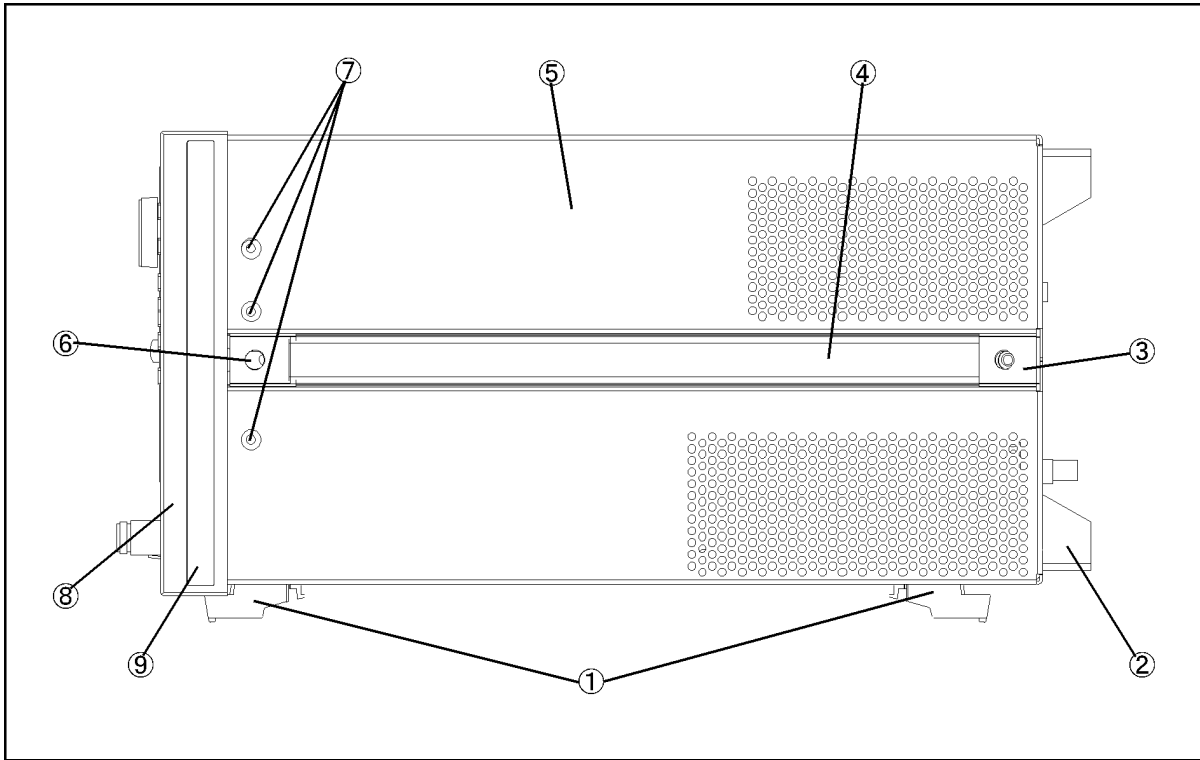

4287ase06008




**Table 6-24                      Side View**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	5041-9167	1	4	FOOT FL
	1460-1345	5	2	WIREFORM
2	E5100-40002	0	4	STANDOFF
	0515-1232	5	4	SCREW-MACH M3.5
3	5041-9187	5	2	STRAP HANDL REAR
	0515-0956	8	2	SCREW
4	5063-9209	8	2	STRAP HANDLE
5	E4991-60002	7	1	COVER ASSY
6	5041-9186	4	2	STRAP HANDLE FRT
	0515-0956	8	2	SCREW
7	0515-2079	0	6	SCREW M4X8
8	5022-1190	4	1	FRONT FRAME221.5
	8160-0641	3	210 cm	GASKET BRAID
9	5041-9173	9	2	SIDE TRIM 221.5

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Test Head

Figure 6-24 Test Head

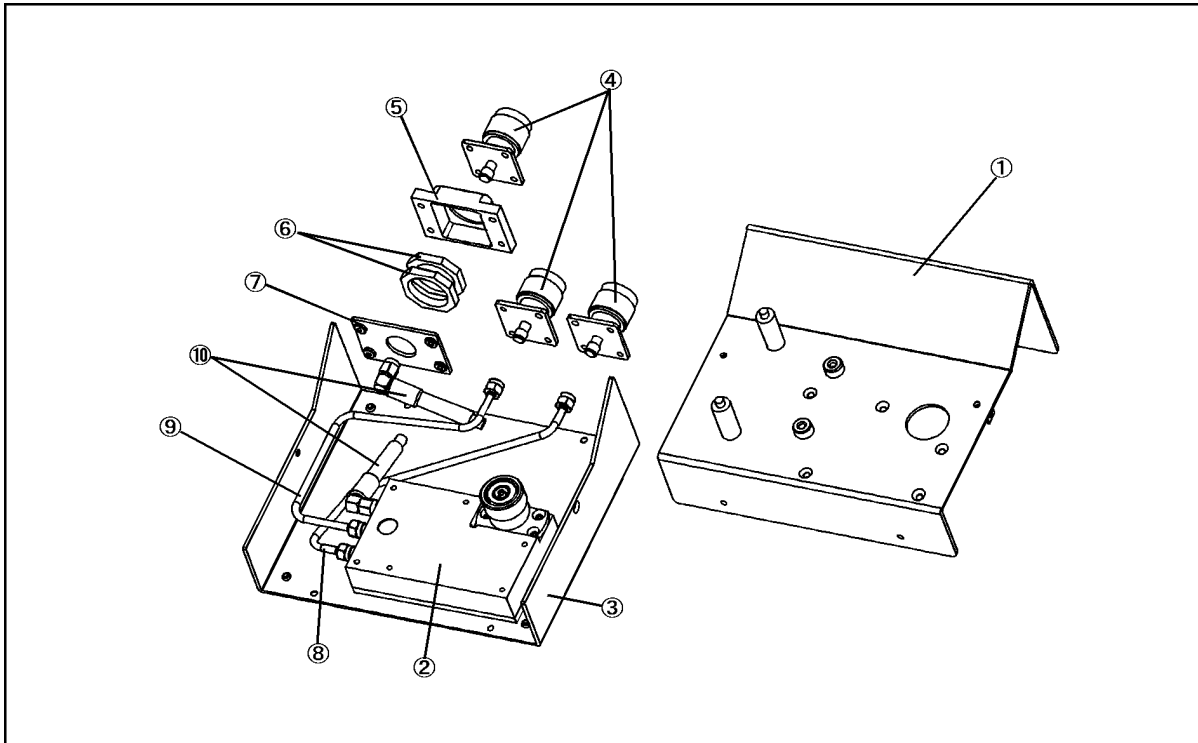

e4991ase029


**Table 6-25            Test Head**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	E4991-04001	8	1	COVER TOP
2	E4991-60111	9	1	TEST HEAD
	0515-0914	8	5	SCREW-MACH M3X0.5
3	E4991-04002	9	1	COVER BOTTOM
	0515-0914	8	6	SCREW-MACH M3X0.5
	0403-0800	4	4	FOOT
4	1250-2468	0	3	RF CONNECTOR N-SMA
	0515-0914	9	8	SCREW-MACH M3X0.5
5	E4991-20063	6	1	HOUSING
	0515-1006	1	4	SCREW-MACH M3X0.5
6	E4991-25101	3	2	CUSHION
7	E4991-00601	6	1	PLATE
8	E4991-61601	4	1	RF CABLE ASSY
9	E4991-61602	5	1	RF CABLE ASSY
10	E4991-61603	6	1	RF CABLE ASSY

Replaceable Parts  
Replaceable Parts List (for serial prefix MY433 and later)

Option 007 Temperature Characteristic Test Kit

Figure 6-25 Replaceable Parts of the Option 007 Test Kit

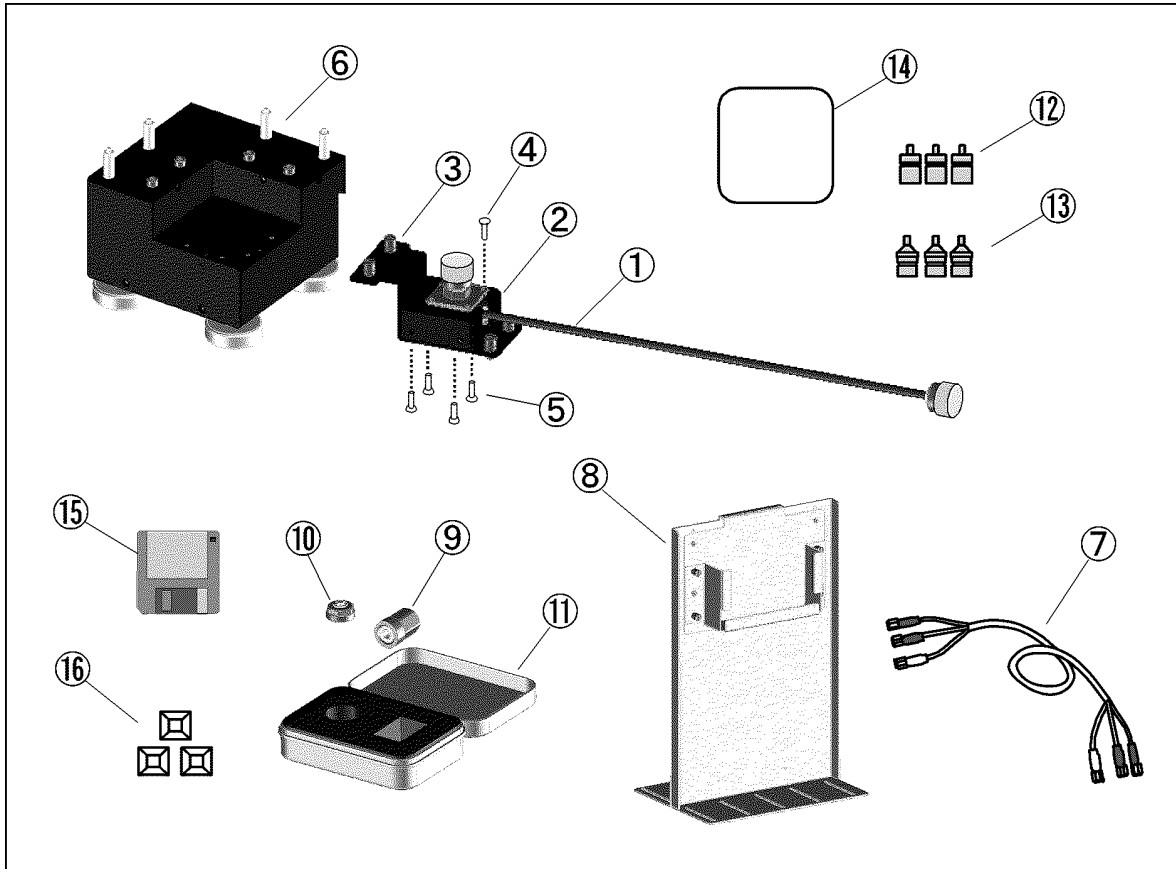


e4991u\_opt00703

**Table 6-26                      Replaceable Pats of the Option 007**

<b>Ref. Desig.</b>	<b>Agilent Part Number</b>	<b>C/D</b>	<b>Qty.</b>	<b>Description</b>
1	E4991-61610	5	1	CABLE ASSY HEAT-RESISTANT
2	E4991-01220	7	1	HOLDER CABLE
3	E4991-01221	8	1	HOLDER CABLE
4	0515-0372	2	4	SCREW-MACH M3X8 TORX T10 PAN
5	0515-1946	8	4	SCREW-MACH M3X6 TORX T10 90 DEG FLAT
6	E4991-60005	0	1	STAND TEST-FIXTURE
7	04287-61651	4	1	RF CABLE ASSY EXTENSION
8	E4991-60006	1	1	STAND TEST-HEAD
9	E4991-60032	3	1	TERMINATION OPEN
10	E4991-60031	2	1	TERMINATION SHORT
11	E4991-60060	7	1	CASE TEMPERATURE-COMPENSATION-SET
12	1250-2879	7	3	ADAPTER N (M) - SMA (F)
13	1250-3157	6	3	ADAPTER N (F) - SMA (F)
14	04291-09001	4	1	PAD
15	E4991-18001	7	1	DISK FLOPPY TEMP-CHARAC-TEST SOFTWARE
16	1400-0584	6	3	TIE CABLE

**Test Head for Option 010**

**Figure 6-26** Test Head for Option 010

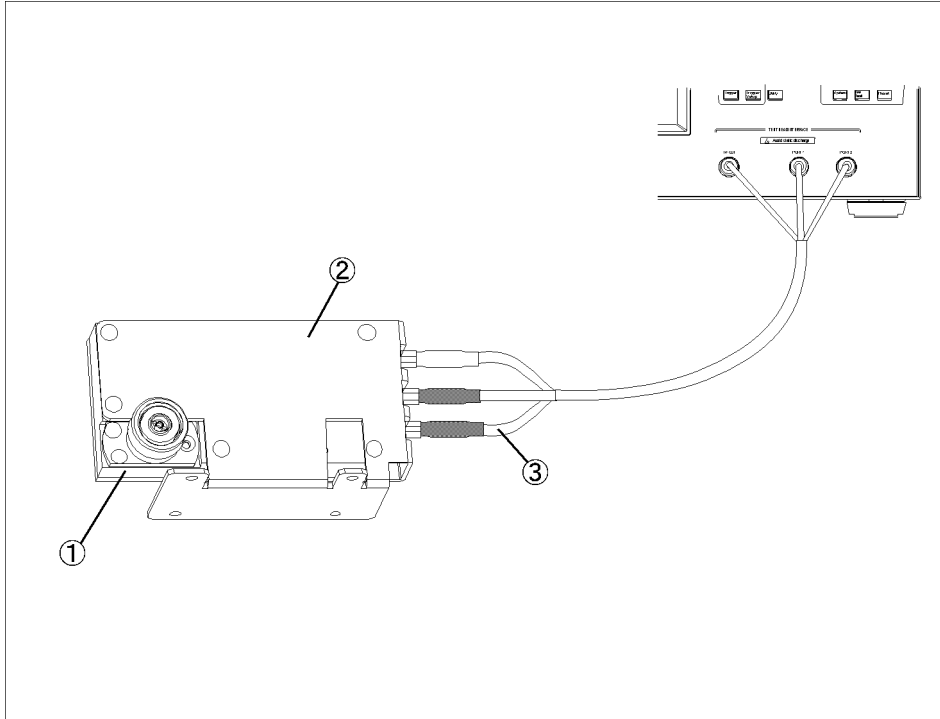


e4991ase4002

**Table 6-27** Test Head for Option 010

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	E4991-60111	9	1	TEST HEAD
2	E4991-01210	5	1	ANGLE
3	04287-61651	4	1	EXTENSION CABLE ASSY

Floppy Disk Drive Assembly

Figure 6-27 Floppy Disk Drive Assembly

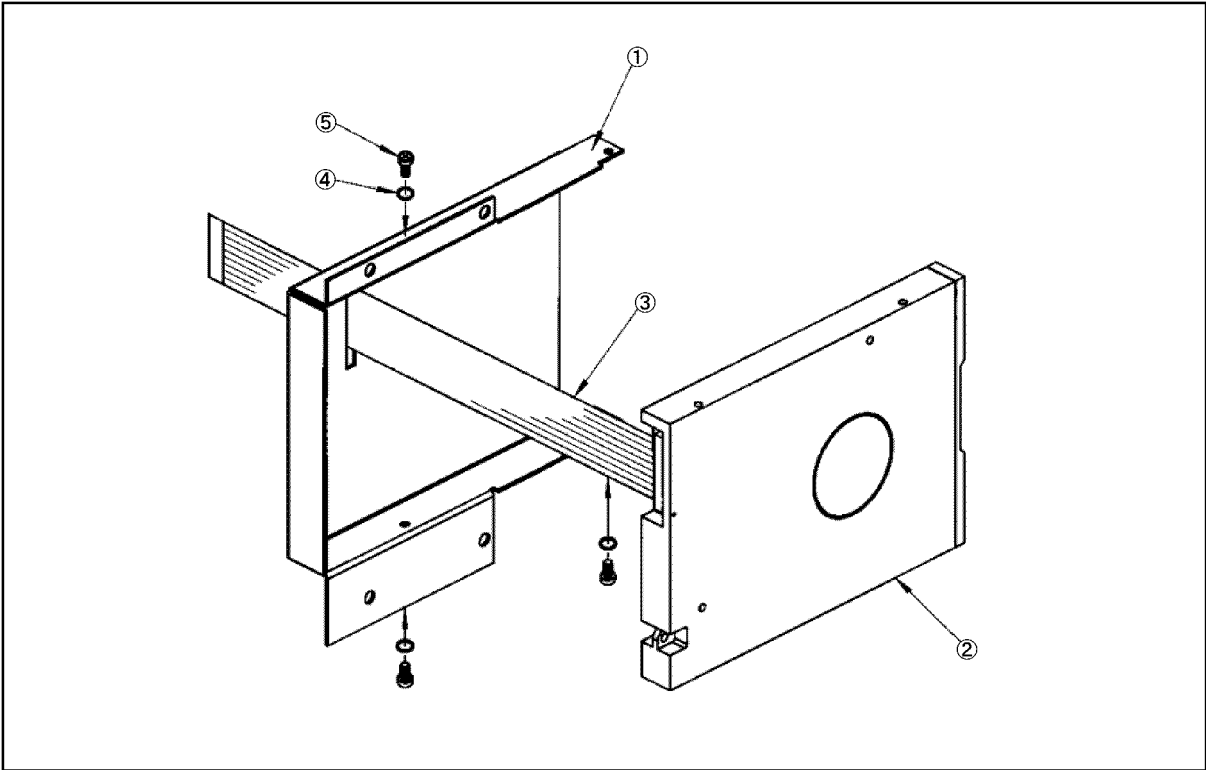


e4991ase096

Table 6-28 Floppy Disk Drive Assembly

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	0950-4325		1	A28 FLOPPY DISK DRIVE
2	04287-01203	6	1	FDD HOLDER
3	E5100-61661	1	1	CABLE FLAT 26PIN
4	2190-0583		3	M2.5 SPRING WASH
5	0515-1056	1	3	SCREW

**Mass Storage Disk Drive Assembly**

**Figure 6-28** Mass Storage Disk Drive Assembly

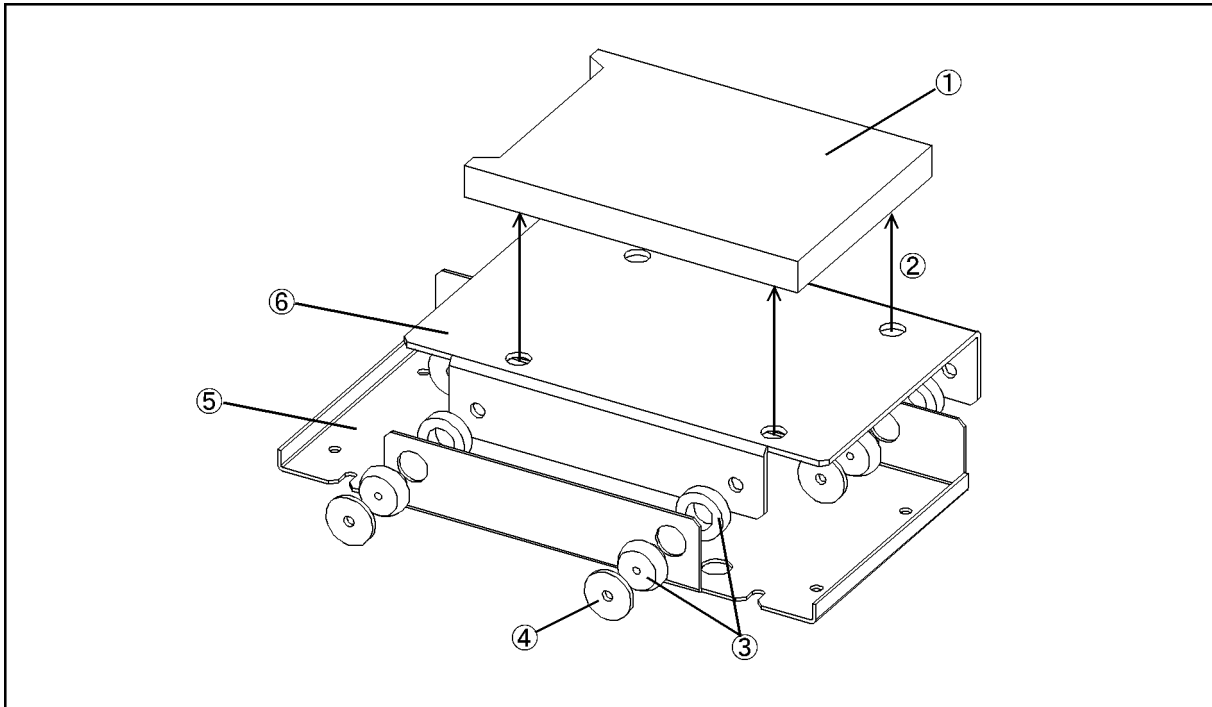

4287ase06013


**Table 6-29** Mass Storage Disk Drive Assembly

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	E4991-61200		1	HDD INSTALLED
2	0515-0924	0	4	SCREW-MACH M3X0.5
3	1410-1580	5	4	BUSHING
4	E5070-24011		4	PLATE
5	04287-01211	6	1	HDD BRACKET
6	04287-01204	7	1	HDD HOLDER



### Power Supply Assembly

Figure 6-29 Power Supply Assembly

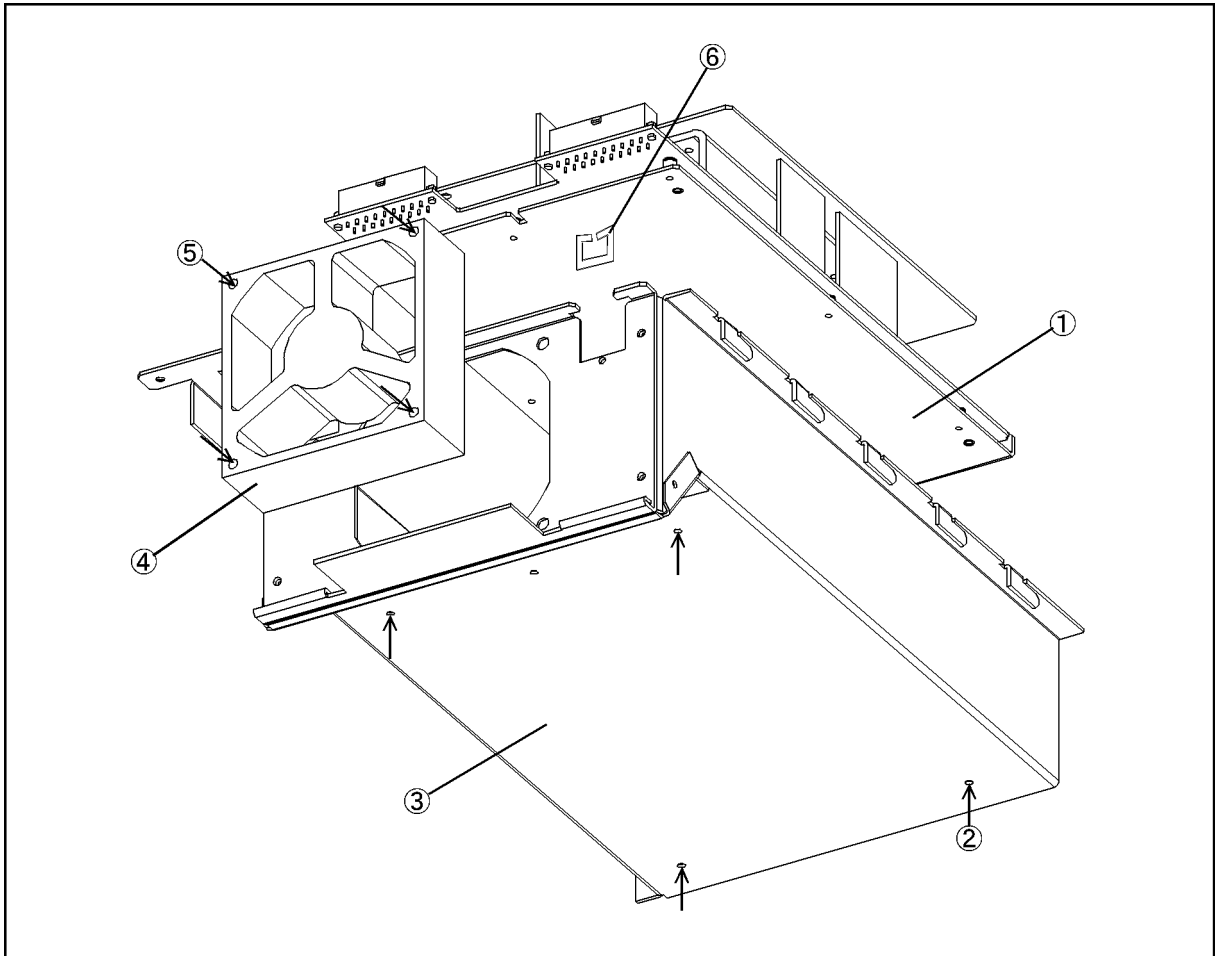

4287ase06012

Table 6-30 Power Supply Assembly

Ref. Desig.	Agilent Part Number	C/D	Qty.	Description
1	0950-3396	8	1	PWR-SPLY-225W
2	0515-0924	0	2	SCREW-MACH M3X0.5
3	04287-60003	8	1	BRACKET P/S ASSY
4	04287-61011	8	1	FAN ASSY
5	0515-1666	9	4	SCREW M4X35 POZI
6	1400-2198	2	2	SADDLE-EDGE

Replaceable Parts  
**Replaceable Parts List (for serial prefix MY433 and later)**

**Other Parts**

**Table 6-31 Other Parts**

Agilent Part Number	C/D	Qty.	Description
E4991-900x0	4	1	OPERATION MANUAL
E4991-900x2	6	1	PROGRAMMING MANUAL
E4991-901x0	9	1	SERVICE MANUAL *1
E4991-180x0	0	1	SAMPLE PROGRAM SET
E4991-900x1	5	1	QUICK START GUIDE
E4991-905x0	9	1	CD-ROM (manual)
E4991-16000	2	1	RECOVERY FD 1.00
E4991-16101	4	1	CD-ROM SOFTWARE 1.00
1150-7846	6	1	MOUSE PS/2
1150-7970	7	1	KEYBOARD
8710-1766	2	1	TORQUE WRENCH
E4991-60021	0	1	SHORT TERMINATION *2
E4991-60022	1	1	OPEN TERMINATION *2
04287-60021	0	1	50 OHM TERMINATION *2
04287-60022	1	1	LOW-LOSS CAPACITOR *2
16195-60041	8	1	CARRYING CASE *2
16195-90030	8	1	OPERATION NOTE, 16195B *2

\*1.Opt. 0BW only

\*2.Included in 16195B Calibration Kit

---

## **7** Replacement Procedure

This chapter provides procedure for removing and replacing the major assemblies in the E4991A RF Impedance/Material Analyzer.

## Replacing an Assembly

The following steps show the sequence to replace an assembly in a E4991A RF Impedance/Material Analyzer.

1. Identify the faulty group. Refer to Chapter 4, “Troubleshooting.”
2. Order a replacement assembly. Refer to Chapter 6, “Replaceable Parts.”
3. Replace the faulty assembly and determine what adjustments are necessary. Refer to Chapter 7, “Replacement Procedure.” and Chapter 8, “Post-Repair Procedures.”
4. Perform the necessary adjustments. Refer to Chapter 3, “Adjustment.”
5. Perform the necessary performance tests. Refer to Chapter 2, “Performance Test and Function Test.”

---

**WARNING**

**These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.**

---

---

**WARNING**

**The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the instrument from its power supply.**

---

---

**CAUTION**

Many of the assemblies in this instrument are very susceptible to damage from ESD(electrostatic discharge). Perform the following procedures only at a static-safe workstation and wear a grounding strap.

---

## Required Tools

The following tools are required for repair of E4991A.

**Table 7-1** Required Tools

Tool	Size	Purpose
Pozidriv screwdriver	pt size #2 (medium)	Outer Cover Removal A1/A2/A3/A4 Board Removal A10 Analog Motherboard Removal A22 Front Panel Keyboard Removal A51 LCD Removal A52 Inverter Board Removal
	pt size #1 (small)	A1/A2/A3/A4 Board Removal A5 Reference Oven Board Removal A10 Analog Motherboard Removal A20 Digital Motherboard Removal A27 Mass Storage Removal A28 FDD Removal A50 Power Supply Removal A51 LCD Removal A52 Inverter Board Removal
Torx screwdriver	T15	A20 Digital Motherboard Removal A24 GPIB/A25 LAN Board Removal A26 Display Board Removal A28 FDD Removal EEPROM Removal
Flat edge screwdriver	small	Front Panel Removal CPU Replacement
Open-end wrench	5/16-inch	A1/A2/A3/A4 Board Removal
Open-end torque wrench	5/16-inch(set to 10 in-lb)	A1/A2/A3/A4 Board Removal
PLCC extractor		EEPROM Removal
Soldering Iron		A22 Front Panel Keyboard Removal

## Outer Cover Removal

### Tools Required

- Pozidriv screwdriver, pt size #2 (medium)

### Procedure

- Step 1.** Disconnect the power cable from the E4991A.
- Step 2.** Remove the four rear feet.
- Step 3.** Remove the six screws holding the outer cover from the rear side.
- Step 4.** Remove the side strap handles.
- Step 5.** Turn the E4991A over.
- Step 6.** Remove eight screws from the bottom side.
- Step 7.** Remove four bottom feet.

---

### NOTE

If bottom feet is not be removed, outer cover won't be removed smooth.

- Step 8.** Put a plastic cover(p/n 5040-6973) on the front panel of the E4991A and place the E4991A on flat table with its front panel down.
- Step 9.** Slide up the outer cover and remove it carefully.

## Front Panel Removal

### Tools Required


- Pozidriv screwdriver, pt size #2 (medium)
- Flat edge screwdriver

### Procedure

**Step 1.** Remove the top trim with a flat edge driver.

**Step 2.** Remove the nine screws (item 1 and 2 in Figure 7-1 ) from the top and bottom side of the front frame.

**Figure 7-1** Screws fastening Front Panel

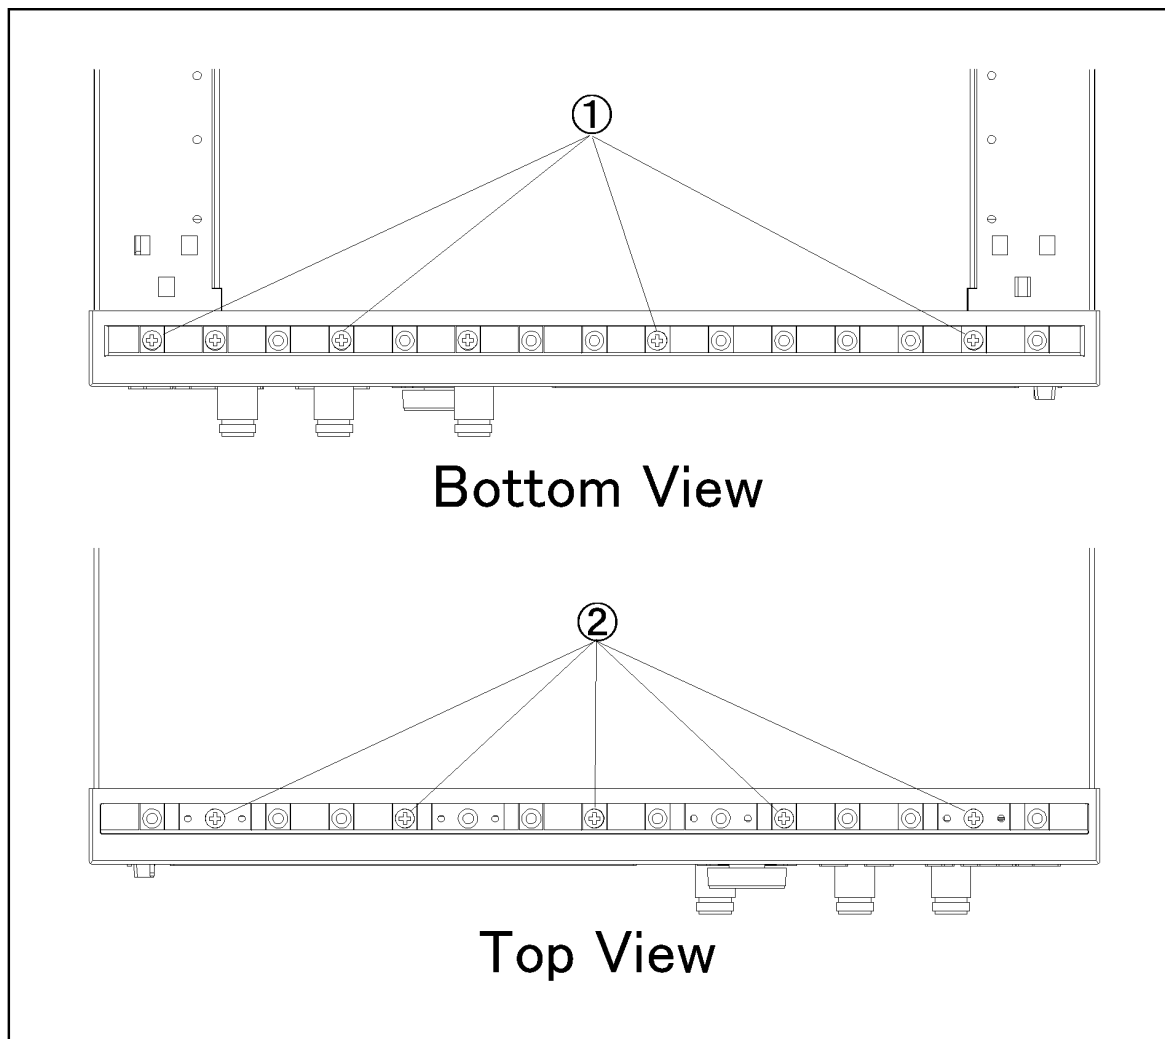

e4991ase050

**Step 3.** Gradually pull the front panel assembly towards the front by holding knob.

---

## **A50 Power Supply Assembly Removal (for serial prefix JP1KH, JP2KH, and MY432)**


### **Tools Required**

- Pozidriv screwdriver, pt size #1 (small)

### **Procedure**

- Step 1.** Remove the outer cover as described in “Outer Cover Removal.”
- Step 2.** Disconnect the cables (item 9 and 10 in Figure 6-2 on page 236) connected to the power supply
- Step 3.** Remove the three flat head screws (item 1 in Figure 7-2) from top side.
- Step 4.** Remove the three screws (item 2 in Figure 7-2) from the rear panel.

**Figure 7-2** Power Supply Assembly removal

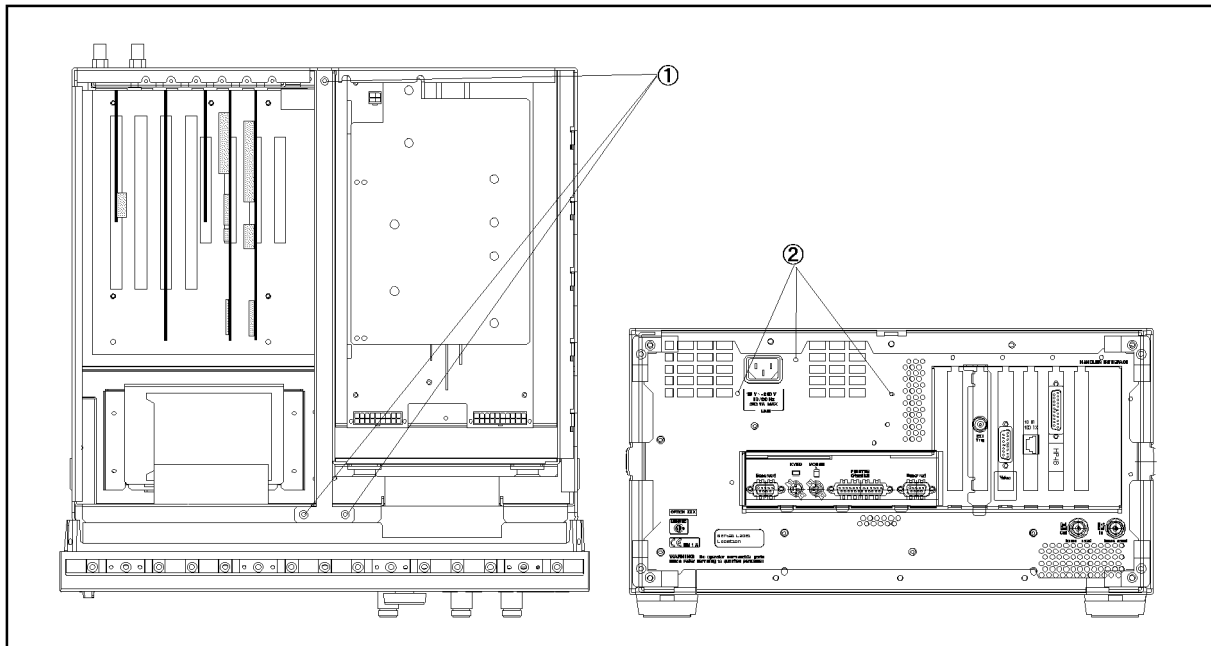

e4991ase127

- Step 5.** Slide the power supply assembly toward front side, and lift it.



## A50 Power Supply Assembly Removal (for serial prefix MY433 and later)


### Tools Required

- Pozidriv screwdriver, pt size #1 (small)

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal.”
- Step 2.** Disconnect the cables (item 11 and 12 in Figure 6-16 on page 260) connected to the power supply
- Step 3.** Remove the three flat head screws (item 1 in Figure 7-2) from top side.
- Step 4.** Remove the three screws (item 2 in Figure 7-2) from the rear panel.

Figure 7-3 Power Supply Assembly removal

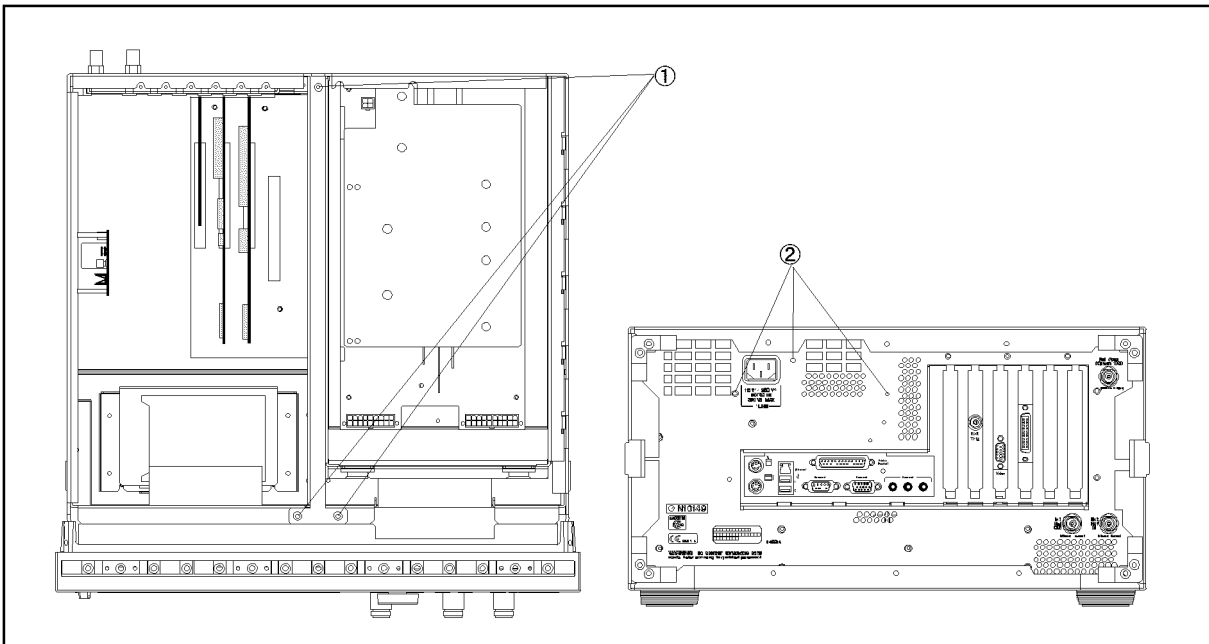

e4991ase103

- Step 5.** Slide the power supply assembly toward front side, and lift it.

---

## A27 Mass Storage Disk Drive Assembly Removal


### Tools Required

- Pozidriv screwdriver, pt size #1 (small)

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal.”
- Step 2.** Disconnect all cables (item 6 in Figure 6-2 on page 236) connected to the mass storage disk drive.
- Step 3.** Remove four screws (item 1 in Figure 7-4) fastening the mass storage disk drive assembly to the chassis.

**Figure 7-4** Mass Storage Disk Drive Assembly

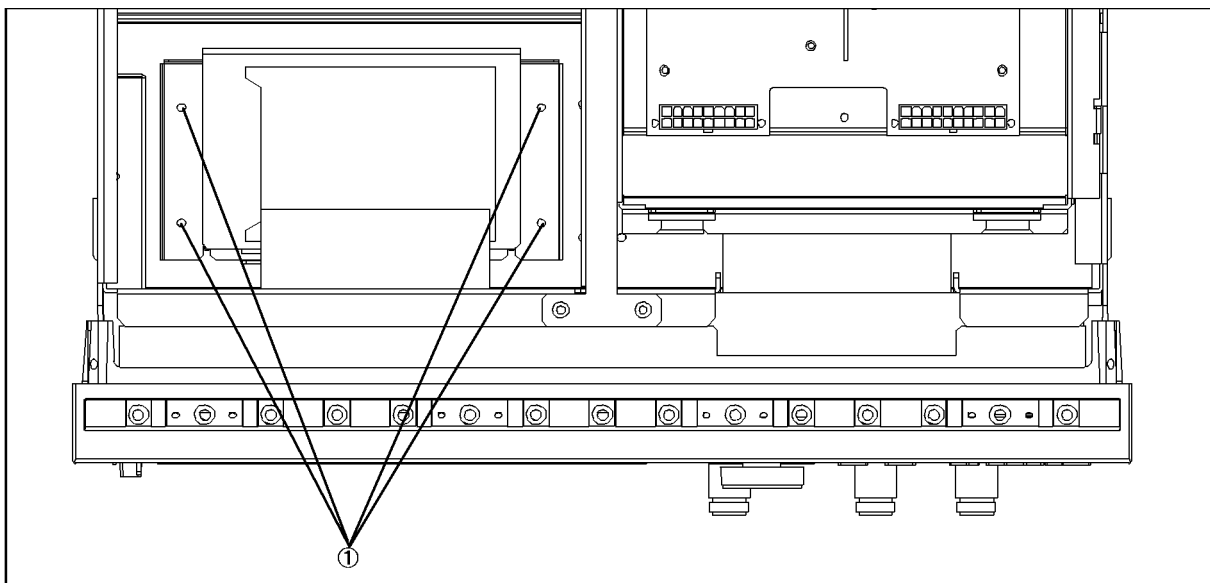

4287ase07004

- Step 4.** Slide the assembly toward rear side, and lift it.
- Step 5.** Disassemble the mass storage disk drive as shown in Figure 6-13 on page 255.
- Step 6.** Install the new mass storage disk drive. Then recovery the backedup files, if you backedup the user files. Install the latest firmware, if it is not installed in the mass storage disk drive.

---

## A28 FDD (Floppy Disk Drive) Removal

### Tools Required

- Pozidriv screwdriver, pt size #1 (small)
- Torx screwdriver, T15

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”
- Step 1.** Remove the front panel as described in “Front Panel Removal”
- Step 2.** Remove four screws fastening the side panel on the LCD side to the FDD folder.
- Step 3.** Remove four screws fastening the FDD folder to FDD.
- Step 4.** Remove the FDD from the FDD folder.
- Step 5.** Disconnect the mylar ribbon cable (item 5 in Figure 6-2 on page 236) at the FDD.

---

#### NOTE

The mylar ribbon cable and their connector are fragile. You must be attentive as described in NOTE on page 303 when you are instructed to disconnect or connect it.

---

## **A20 Digital Motherboard Removal (for serial prefix JP1KH, JP2KH, and MY432)**

### **Tools Required**

- Pozidriv screwdriver, pt size #1 (small)
- Torx screwdriver, T15

### **Procedure**

- Step 1.** Remove the mouse, the external keyboard and the parallel printer cable if they are connected to the rear panel.
- Step 2.** Remove the outer cover as described in “Outer Cover Removal”
- Step 3.** Remove the power supply as described in “A50 Power Supply Assembly Removal (for serial prefix JP1KH, JP2KH, and MY432)”
- Step 4.** Disconnect the following cables.
- A20 to A26 Display board IDE1 flat cable (item 1 in Figure 6-2 on page 236)
  - A20 to A26 Display board floppy flat cable (item 2 in Figure 6-2)
  - A20 to A10 Analog Motherboard power supply cable (item 3 in Figure 6-2)
- Step 5.** Remove the following boards.
- A21 Analog Interface board as described in “A21 Analog Interface Board and EEPROM Removal”
  - A24 GPIB board as described in “A24 GPIB/A25 LAN Board Removal (for serial prefix JP1KH, JP2KH, and MY432)”
  - A25 LAN board as described in “A24 GPIB/A25 LAN Board Removal (for serial prefix JP1KH, JP2KH, and MY432)”
  - A26 Display board as described in “A26 Display Board Removal”
- Step 6.** Remove seven screws fastening the A20 to the bottom panel and remove the A20.
- Step 7.** Remove the CPU and CPU fan as described in “CPU Replacement (for serial prefix JP1KH, JP2KH, and MY432)”.
- Step 8.** Remove the DIMM64MB modules as described in “DIMM64MB Memory Module Replacement (for serial prefix JP1KH, JP2KH, and MY432)”.

---

#### **NOTE**

To replace the A20, reverse the above procedure. And, configure the several jumpers and BIOS parameters as described in “To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)” on page 197.

## **A20 Digital Motherboard Removal (for serial prefix MY433 and later)**

### **Tools Required**

- Pozidriv screwdriver, pt size #1 (small)
- Torx screwdriver, T15

### **Procedure**

- Step 1.** Remove the mouse, the external keyboard and the parallel printer cable if they are connected to the rear panel.
- Step 2.** Remove the outer cover as described in “Outer Cover Removal”
- Step 3.** Remove the power supply as described in “A50 Power Supply Assembly Removal (for serial prefix MY433 and later)”
- Step 4.** Disconnect the following cables.
- A26 to A20 Digital Motherboard floppy flat cable (item 1 in Figure 6-16 on page 260 )
  - A26 to A20 IDE1 flat cable (item 2 in Figure 6-16)
  - A26 to LCD mylar ribbon cable (item 4 in Figure 6-16)
  - A26 to Floppy mylar ribbon cable (item 7 in Figure 6-16)
  - A26 to A27 Mass Storage Disk Drive flat cable (item 8 in Figure 6-16)
  - A26 to Backlight primary cable (item 9 in Figure 6-16)
  - A21 to the A10 Analog Motherboard flat cable (item 3 in Figure 6-16)
  - A21 to the A22 Front Panel Keyboard flat cable (item 10 in Figure 6-16)
  - A21 to the system fan cables
- Step 5.** Remove the following boards.
- A21 Analog Interface board as described in “A21 Analog Interface Board and EEPROM Removal”
  - A24 GPIB board as described in “A24 GPIB Card Replacement (for serial prefix MY433 and later)”
  - A26 Display board as described in “A26 Display Board Removal”
- Step 6.** Remove five screws fastening the A20 to the bottom panel and remove the A20.

---

**NOTE**

To replace the A20, reverse the above procedure. And, configure the several jumpers and BIOS parameters as described in “To Configure the A20 Digital Motherboard and BIOS (for serial prefix MY433 and later)” on page 210.

---

## CPU Replacement (for serial prefix JP1KH, JP2KH, and MY432)

There is a CPU on the A20 Digital Motherboard.

### Tools Required

- Flat edge screwdriver

### Procedure

---


**NOTE**

Always handle the CPU by the edges, never touch the pins.

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”
- Step 2.** Remove the power supply as described in “A50 Power Supply Assembly Removal (for serial prefix JP1KH, JP2KH, and MY432)”
- Step 3.** Disconnect the CPU fan cable from J16 CPU fan connector.
- Step 4.** Separate the heatsink clip from the CPU socket tabs using the flat edge screwdriver.
- Step 5.** Pull the CPU socket release lever laterally away from the CPU socket to disengage the level from the locking tab. Then rotate the lever upward to release the CPU from the CPU socket.
- Step 6.** Lift the CPU out of the socket.
- Step 7.** To replace the CPU, reverse the CPU removal procedure. Install the CPU so that pin 1 on the CPU aligns with pin 1 of the CPT socket as shown in Figure 7-5. The diagonal notch on the CPU represents pin 1.

Figure 7-5

CPU Socket Alignment

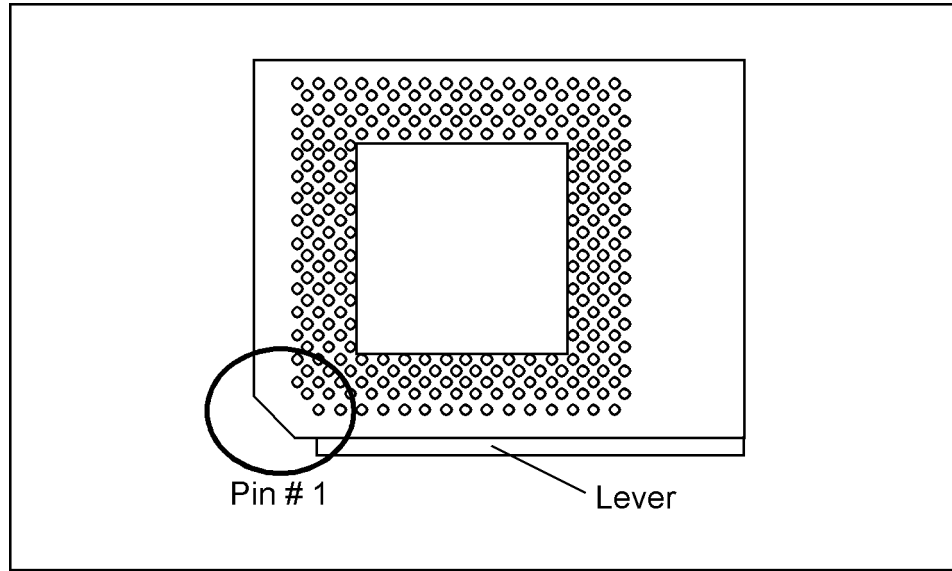

## **DIMM64MB Memory Module Replacement (for serial prefix JP1KH, JP2KH, and MY432)**

There are two DIMM64MB memory module on the A20 Digital Motherboard.

### **Procedure**

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”.
- Step 2.** Remove the power supply as described in “A50 Power Supply Assembly Removal (for serial prefix JP1KH, JP2KH, and MY432)”.
- Step 3.** There are three DIMM sockets on the A20. Two DIMM memory modules are installed at the socket U12 and U13.
- Step 4.** Cut the cable tie which ties DIMM memory.
- Step 5.** Unlatch the two clips and remove the DIMM memory.
- Step 6.** To replace the DIMM memory, reverse the above procedure. Install the DIMM memory in the socket and latch the clips. Tie the DIMM memory and the socket using the cable tie.

---

## **A1/A2(Opt.001)/A3/A4 Board Removal**

### **Tools Required**

- Pozidriv screwdriver, pt size #1 (small) and #2 (medium)
- Open-end wrench, 5/16-inch
- Open-end torque wrench, 5/16-inch (set to 10 in-lb) (for reconnecting SMA connector)

### **Procedure**

- Step 1.** Remove the outer cover as described in “Outer Cover Removal.”
- Step 2.** Remove the front frame as described in “Front Panel Removal”
- Step 3.** Disconnect the semi-rigid cables connected to the board assembly.
- Step 4.** Remove the two screws fastening the extractor to the chassis.

---

#### **NOTE**

Remove the two nuts (item 1 in Figure 6-8 on page 247) fastening the BNC connector on the rear panel when the A1 is removed.

Remove the two screws fastening the front frame to the bracket connect (item 3 in Figure 6-5 on page 242) when the A4 is removed.

---



**Step 5.** Remove the board using the extractor.

## A5 Reference Oven Board(Opt.1D5) Removal

### Tools Required

- Pozidriv screwdriver, pt size #1 (small)

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal.”
- Step 2.** Remove the two cables (item 11 and 12 in Figure 6-2 on page 236) connected to the A5.
- Step 3.** Remove three screws on left side panel.
- Step 4.** Remove the A5.

---

## A10 Analog Motherboard Removal

### Tools Required

- Pozidriv screwdriver, pt size #1 (small) and #2 (medium)

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”
- Step 2.** Remove the front frame as described in “Front Panel Removal”
- Step 3.** Remove the A20 Digital Motherboard as described in “A20 Digital Motherboard Removal (for serial prefix JP1KH, JP2KH, and MY432)”.
- Step 4.** Remove the A1, A2(Opt.001), A3, A4 boards as described in “A1/A2(Opt.001)/A3/A4 Board Removal”.
- Step 5.** Remove the three screws fastening the cover (item 5 in Figure 6-4 on page 240) to the chassis assembly and remove the cover.
- Step 6.** From the outer side of the rear panel, remove the two screws fastening the rear panel to the A10.
- Step 7.** From the inner side of the rear panel, remove the eight screws fastening the rear panel to the A10 and remove the A10.

## A21 Analog Interface Board and EEPROM Removal


### Tools Required

- PLCC extractor
- Torx screwdriver, T15

### Procedure

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”.
- Step 2.** Disconnect the following cables from the A21 Analog Interface board.
  - A21 to the A10 Analog Motherboard flat cable (item 3 in Figure 6-2)
  - A21 to the A22 Front Panel Keyboard flat cable (item 8 in Figure 6-2 on page 236)
  - A21 to the system fan cables
- Step 3.** Remove a torx screw fastening the A21 to the rear panel.
- Step 4.** Remove the A21.
- Step 5.** Remove the EEPROM from the original board, then mount it on the new board. Because, the adjustment data is stored in the EEPROM. If the EEPROM is defective, it is necessary to perform all adjustments after replacing it.

Figure 7-6 EEPROM

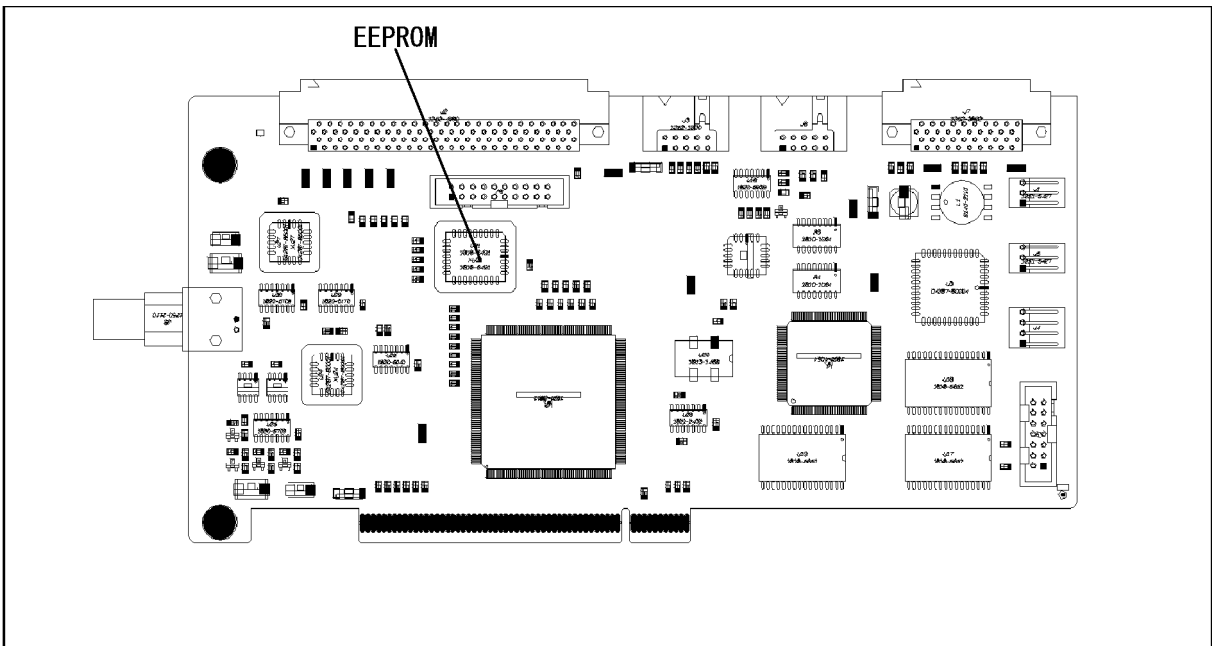

4287ase07002

---

## **A24 GPIB/A25 LAN Board Removal (for serial prefix JP1KH, JP2KH, and MY432)**

### **Tools Required**


- Torx screwdriver, T15

### **Procedure**

- Step 1.** Remove the outer cover as described in “Outer Cover Removal”
- Step 2.** Remove a torx screw fastening the board to the rear panel.
- Step 3.** Remove the board.

**Figure 7-7**

**Assignment of the Bit switches on the A24 GPIB board**

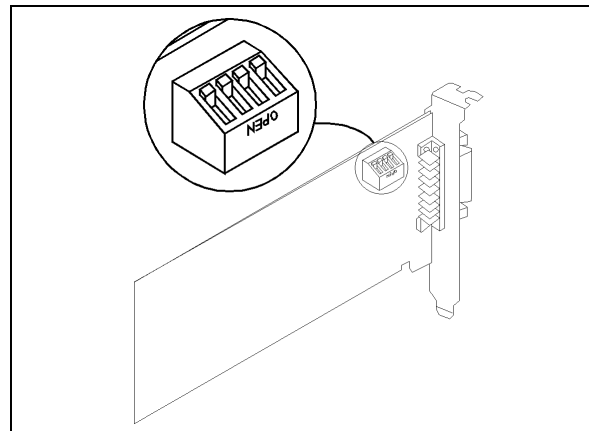

4267ase07006

## A24 GPIB Card Replacement (for serial prefix MY433 and later)

### Tools Required

- Pozidriv screwdriver, pt size #2 (medium) (where Pozidriv screws are in use)
- TORX screwdriver, T15, (T10, T20 where TORX screws are in use)

### Removal Procedure

Refer to Figure 7-8 for this procedure.

**Step 1.** Remove the outer cover as described in “Outer Cover Removal”.


**Step 2.** Remove the TORX T15 screw (item 1) fastening the card to the rear panel.

**Step 3.** Lift the A24 GPIB Card.

### CAUTION

Be careful not to injure the digital mother board and the cable connected the display board to the front assembly.

**Figure 7-8** A24 GPIB Card Removal

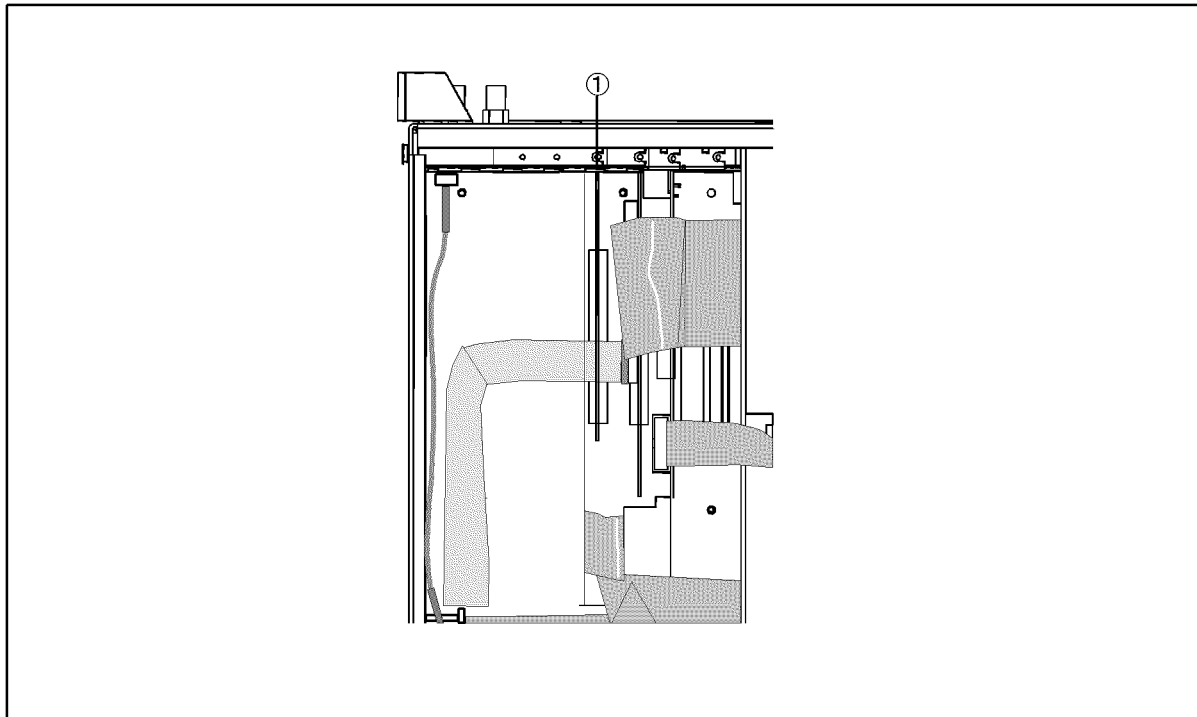

e4991ase104

Replacement Procedure

**A24 GPIB Card Replacement (for serial prefix MY433 and later)**

### **Replacement Procedure**

- Replace the new A24 GPIB card by inverse procedure of removal.

## A26 Display Board Removal

### Tools Required

- Torx screwdriver, T15

### Procedure

**Step 1.** Remove the outer cover as described in “Outer Cover Removal”

**Step 2.** Disconnect the following cables from the A26 Display board.

- A26 to Floppy mylar ribbon cable (item 5 in Figure 6-2 on page 236)
- A26 to A27 Mass Storage Disk Drive flat cable (item 6 in Figure 6-2)
- A26 to A20 Digital Motherboard floppy flat cable (item 2 in Figure 6-2)
- A26 to A20 IDE1 flat cable (item 1 in Figure 6-2)
- A26 to Backlight primary cable (item 7 in Figure 6-2 )
- A26 to LCD mylar ribbon cable (item 4 in Figure 6-2)

**Step 3.** Remove a torx screw fastening the A26 to the rear panel.

**Step 4.** Remove the A26.

### NOTE


Use the following procedure when you handle the mylar ribbon cable. The mylar cable and their connector are very fragile. To replace to a new mylar cable is recommended when you are instructed to disconnect and connect the mylar cable frequently.

To disconnect the cable:

**Step 1.** Pry up the retainer slightly at either end of the connector as shown in Figure 7-9, using a small flat-blade screwdriver.

Figure 7-9

pry up the retainer

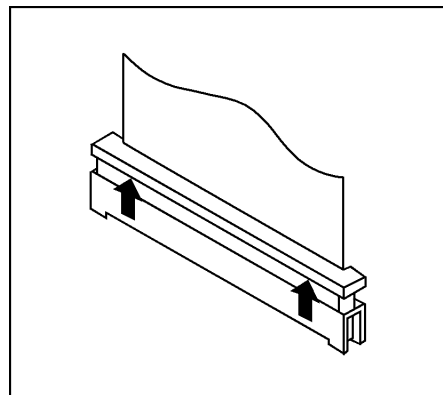

**Step 2.** Pull the mylar ribbon cable out of the connector.

## **A22 Front Panel Keyboard Removal**

### **Tools Required**

- Pozidriv screwdriver, pt size #1 (small) and #2 (medium)
- Soldering Iron

### **Procedure**

- Step 1.** Remove the front panel as described in “Front Panel Removal”.
- Step 2.** Remove the six screws fastening the LCD cover to the front panel.
- Step 3.** Disconnect the flat cable (item 8 in Figure 6-2 on page 236) from the A22 Front Panel Keyboard.
- Step 4.** Remove the eight screws fastening the A22 to the front panel.
- Step 5.** Remove the front panel knob to remove the A22.
- Step 6.** Remove two screws fastening the LED board to the front panel. The LED board is connected to the A22 using the four wire cables.
- Step 7.** Remove the two wire cables from the power switch assembly (item 13 in Figure 6-2) using a soldering iron.
- Step 8.** Remove the A22.



---

## A51 LCD Removal

### Tools Required

- Pozidriv screwdriver, pt size #1 (small) and #2 (medium)

### Procedure

- Step 1.** Remove the front panel as described in “Front Panel Removal”.
- Step 2.** Remove the six screws fastening the LCD cover to the front panel.
- Step 3.** Disconnect the flat cable (item 8 in Figure 6-2 on page 236) from the A22 Front Panel Keyboard.
- Step 4.** Disconnect the two backlight cables from the Inverter board as described in “A52 Inverter Board Removal”.
- Step 5.** Remove the four screws fastening the LCD to the LCD cover and remove the LCD.
- Step 6.** Remove the mylar ribbon cable (item 4 in Figure 6-2) from the LCD and remove the LCD.

---

#### NOTE

The mylar ribbon cable and their connector are fragile. You must be attentive as described in NOTE on page 303 when you are instructed to disconnect or connect it.

---

---

## A52 Inverter Board Removal

### Tools Required

- Pozidriv screwdriver, pt size #1 (small) and #2 (medium)

### Procedure

- Step 1.** Remove the front panel as described in “Front Panel Removal”.
- Step 2.** Remove the two screws fastening the Inverter board cover to the LCD cover and remove the cover.
- Step 3.** Disconnect the backlight primary cable (item 7 in Figure 6-2) from the Inverter board.
- Step 4.** Disconnect the two backlight cables from the Inverter board.
- Step 5.** Remove the two screws fastening the Inverter board to the LCD cover and remove the Inverter board.

Replacement Procedure  
**A52 Inverter Board Removal**

---

## 8 Post-Repair Procedures

This chapter lists the procedures required to verify the E4991A operation after an assembly is replaced with a new one.

## Post-Repair Procedures

Table 8-1 *Post Repair Procedures* lists the required procedures that must be performed after the replacement of an assembly, CPU, DIMM(Memory) or the EEPROM. These are the recommended minimum procedures to ensure that the replacement is successfully completed.

**Table 8-1 Post-Repair Procedures**

<b>Replaced Assembly or Part</b>	<b>Required Adjustments Correction Constants (CC)</b>	<b>Verification</b>
A1 Reference Oscillator Board	Perform the following required adjustments using the A1 Adjustment in Spot Adjustment of the program.  A1 VCXO Frequency Adjustment A3 Local Level Adjustment A3 Output AGC Gain Adjustment A3 Output Level Adjustment A4 Local AGC Gain Adjustment A4 Local level Adjustment A4 IF Local AGC Gain Adjustment Default Cal Coefficient Adjustment System Backup	“To Execute the Internal Test” on page 172 “To Execute the External Test” on page 189  Frequency Accuracy Test Power Level Accuracy Test Impedance Measurement Accuracy Test
A2 DC Bias Board (Opt 001)	Perform the following required adjustments using the A2 Adjustment in Spot Adjustment of the program.  A2 DC Bias Voltage Adjustment A2 DC Bias Current Adjustment A2 DC Bias RC Adjustment System Backup	“To Execute the Internal Test” on page 172 “To Execute the External Test” on page 189  DC Bias Test Impedance Measurement Accuracy Test
A3 Source Board	Perform the following required adjustments using the A3 Adjustment and A2 Adjustment(Opt.001) in Spot Adjustment of the program.  A3 Local Level Adjustment A3 Output AGC Gain Adjustment A3 Output Level Adjustment A4 Local AGC Gain Adjustment A4 Local level Adjustment A4 IF Local AGC Gain Adjustment Default Cal Coefficient Adjustment A2 DC Bias Voltage Adjustment A2 DC Bias Current Adjustment A2 DC Bias RC Adjustment System Backup	“To Execute the Internal Test” on page 172 “To Execute the External Test” on page 189  Power Level Accuracy Test Impedance Measurement Accuracy Test Frequency Accuracy Test DC Bias Test

**Table 8-1 Post-Repair Procedures**

<b>Replaced Assembly or Part</b>	<b>Required Adjustments Correction Constants (CC)</b>	<b>Verification</b>
A4 Receiver Board	Perform the following required adjustments using the A4 Adjustment and A2 Adjustment(Opt.001) in Spot Adjustment of the program.  A4 Local AGC Gain Adjustment A4 Local level Adjustment A4 IF Local AGC Gain Adjustment Default Cal Coefficient Adjustment A2 DC Bias Voltage Adjustment A2 DC Bias Current Adjustment A2 DC Bias RC Adjustment System Backup	“To Execute the Internal Test” on page 172 “To Execute the External Test” on page 189  Impedance Measurement Accuracy Test DC Bias Test
A5 Frequency Reference(Opt 1D5)	Perform the following required adjustment using the A5 Adjustment in Spot Adjustment of the program.  A5 Reference Oven Adjustment	Frequency Accuracy Test(with Option 1D5)
A6 Test Head Board	Perform the following required adjustments using the A3 Adjustment and A2 Adjustment(Opt.001) in Spot Adjustment of the program.  A3 Output Level Adjustment A4 IF Gain Adjustment Default Cal Coefficient Adjustment A2 DC Bias Voltage Adjustment A2 DC Bias Current Adjustment A2 DC Bias RC Adjustment System Backup	“To Execute the External Test” on page 189  Power Level Accuracy Test Impedance Measurement Accuracy Test DC Bias Test
A10 Analog Motherboard	Not Required	Inspect the Booting Process  When the symptom of failure is out of specification, perform the performance test.
A20 Digital Motherboard	Set jumpers and BIOS parameters on the A20. For details, see “To Configure the A20 Digital Motherboard and BIOS (for serial prefix JP1KH, JP2KH, and MY432)” on page 197.	Inspect the Booting Process
A21 Analog Interface Board	Not Required	Inspect the Booting Process  “To check the Front Panel” on page 179 “To check the External Trigger Input” on page 181

8. Post-Repair Procedures

**Table 8-1 Post-Repair Procedures**

<b>Replaced Assembly or Part</b>	<b>Required Adjustments Correction Constants (CC)</b>	<b>Verification</b>
A22 Front Panel Keyboard	Not Required	“To Execute the External Test” on page 189 “To check the Front Panel” on page 179
A24 GPIB Board	Not Required	“To check the GPIB” on page 188
A25 LAN Interface Board	Not Required	“To check the LAN (for serial prefix JP1KH, JP2KH, and MY432)” on page 181
A26 Display Board	Not Required	Inspect the Booting Process “To Execute the External Test” on page 189 “To check the VGA Display Output” on page 180
A27 Mass Storage Disk Drive	All Adjustments. System Backup	Inspect the Booting Process Perform the all Performance Tests
A28 FDD	Not Required	“To check the FDD” on page 180
A50 Power Supply Assembly	Not Required	Inspect the Booting Process
A51 LCD	Not Required	Inspect the Booting Process “To Execute the External Test” on page 189 “To check the LCD” on page 179
A52 Inverter Board	Not Required	Inspect the Booting Process “To Execute the External Test” on page 189
CPU 400MHz	Not Required	Inspect the Booting Process
DIMM 64Mbyte	Not Required	Inspect the Booting Process
EEPROM on the A21	Write ID (Serial No. and Option No.) EEPROM Initialize All Adjustments. System Backup	Inspect the Booting Process Perform the all Performance Tests

---

## **A** **Manual Changes**

This appendix contains the information required to adapt this manual to versions or configurations of the E4991A manufactured earlier than the current printing date of this manual. The information in this manual applies directly to E4991A units with the serial number that is printed on the title page of this manual.

---

## Manual Changes

To adapt this manual to your E4991A, refer to Table A-1 and Table A-2.

**Table A-1**      **Manual Changes by Serial Number**

Serial Prefix or Number	Make Manual Changes

**Table A-2**      **Manual Changes by Firmware Version**

Version	Make Manual Changes

Agilent Technologies uses a two-part, ten-character serial number that is stamped on the serial number plate (Figure A-1). The first five characters are the serial prefix and the last five digits are the suffix.

**Figure A-1**      **Serial Number Plate (Example)**



e4991a0j6001



---

## **B** System Installation for A27 Mass Storage

This appendix describes how to install the operation system to the A27 mass storage. When the operating system in the A27 mass storage has damage, you can recover it before replacing the A27 by the following procedure.

## System Recovery (for serial prefix JP1KH, JP2KH, and MY432)

The E4991A has a backup file in the H drive (Hidden Drive) of the A27 mass storage which includes a compression image of the system files, application files, and calibration constant data. You can recover these files using the following procedure when the operating system in the A27 mass storage has damage.

---

### NOTE

There are two types of the system recovery. This section describes the procedure for each system recovery.

- Procedure for the E4991As that have serial number prefixed JP1KH and their A27 mass storage has never been replaced.
  - Procedure for the E4991As that do not have serial number prefixed JP1KH or their A27 mass storage has been replaced.
- 

### Notes on executing system recovery

Performing system recovery causes the following:

- o The following settings of the E4991A are initialized.
  - Network settings
  - GPIB settings
  - Printer settings
- o If the firmware has been updated after purchasing the E4991A, the firmware when you purchased the product\*<sup>1</sup> is recovered.

Files you created using the save function are not affected, but we recommend backing them up before executing system recovery for precautionary purposes.

---

### NOTE

If the E4991A is turned off without shutdown process, Microsoft Scandisk runs after E4991A logo is displayed. If serious trouble is found during the scan disk, reinstall the operating system. And if the operating system still doesn't boot properly after reinstallation, A27 has to be replaced physically.

And, if you encounter the following problems, try to reinstall the operating system before replacing the A27.

- "xxx file is missing" is displayed on the DOS screen.
  - The E4991A logo screen is not displayed after "Searching for Boot Record from IDE-0 .. OK" is displayed.
  - Windows always boots with Safe Mode.
- 

\*1. If the hard disk failed and has been replaced after purchase, the state when the replacement was performed is recovered.

**Procedure to execute system recovery (for serial number JP1KH and A27 that has never been replaced)**

- Step 1.** Connect the external keyboard to the E4991A.
- Step 2.** Insert the system recovery disk (furnished with the E4991A) in the floppy disk drive of the E4991A.
- Step 3.** Turn the E4991A on.
- Step 4.** Press **[F]** key on the external keyboard as soon as the AMI BIOS System Configuration Display as shown in Figure B-1 is displayed after RAM counting.

**Figure B-1**

**AMIBIOS System Configuration Display**


AMIBIOS System Configuration (C) 1985-1997, American Megatrends Inc.,							
Main Processor	:	AMD-K6-2-/400	Base Memory Size	:	640KB		
Math Processor	:	Built-In	Ext. Memory Size	:	64512KB		
Floppy Drive A:	:	1.44 MB 3 1/2"	Display Type	:	VGA/EGA		
Floppy Drive B:	:	None	Serial Port(s)	:	3F8, 2F8		
AMIBIOS Date	:	07/15/95	Parallel Port(s)	:	378		
External Cache	:	512KB, Disabled	Power Management	:	APM, SMI		
ATA(PI) Device(s)	Type	Size	LBA Mode	32Bit Mode	Block Mode	PIO Mode	
Primary Master	: Hard Disk	8064MB	LBA	Off	16Sec	4	
PCI Devices:							
PCI Onboard Bridge Device				PCI Onboard USB Controller, IRQ9			
PCI Onboard IDE				PCI Slot 1	Ethernet, IRQ10		
PCI Slot 2	VGA			PCI Slot 3	Unknown Device, IRQ11		

e4991ase069

The contents of the system recovery disk are loaded while Figure B-2 is displayed. After a short time, the system recovery start screen as shown in Figure B-3 is displayed.


System Installation for A27 Mass Storage  
**System Recovery (for serial prefix JP1KH, JP2KH, and MY432)**

**Figure B-2 Searching File Display**

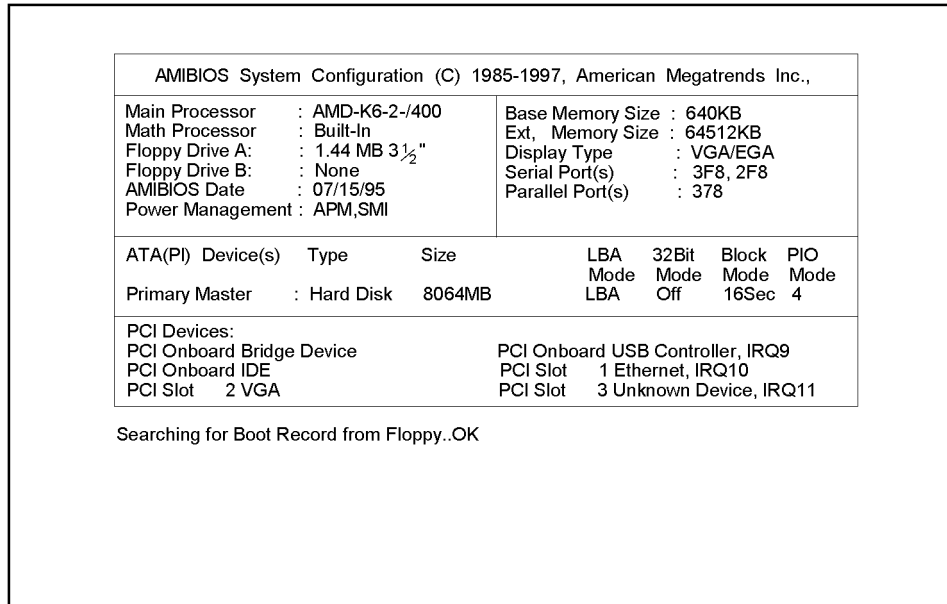

e4991ase070

**Figure B-3 System Recovery Start Screen**

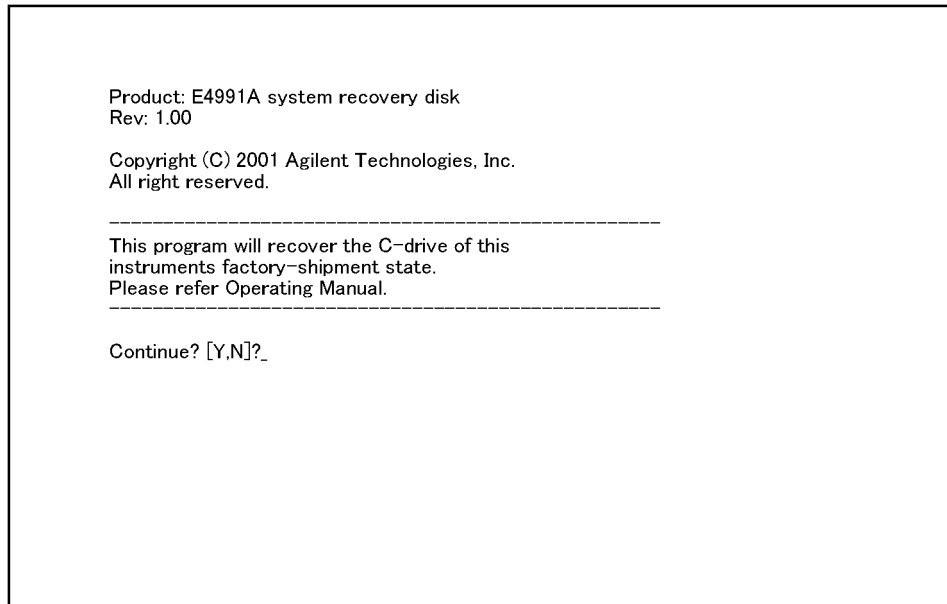

e4991ase067

**Step 5.** Press [Y] key on keyboard in the following case.

Continue? [Y,N]? Y

**Step 6.** Remove the system recovery disk from the floppy disk drive after confirming the following display.

“Please reset E4991A.”

A:\>

A:\> is indicated on the screen when the system recovery is complete.

**Step 7.** Shut down the E4991A by pressing the power switch.

**Step 8.** The E4991A will restart in the system recovery complete condition.

---

**NOTE**

System recovery can be suspended without execution by pressing [N] instead of [Y] Step 5. A:\> is also indicated on the screen after this section is made. Remove the system recovery disk and shut down the E4991A by pressing the power switch.

---

**NOTE**

If you do not have the system recovery disk, you can make it by the following procedure.

1. Copy the files (copydisk.exe, recover.bin) which are downloadable from CTU-kobe web site (internal) to specific directory on your PC.
2. Insert a floppy disk to the floppy disk drive in your PC.
3. Run the DOS prompt, and change the current directory to the specific directory which includes the above two files.
4. Perform the following command. Then, the system recovery disk will be made automatically.

“ copydisk.exe recover.bin a: “

---


**Procedure to execute system recovery (for serial number other than JP1KH or A27 that has been replaced)**

**Step 1.** Shut down the E4991A.

**Step 2.** Connect the external keyboard to the E4991A.

**Step 3.** Press the standby switch of the E4991A to turn it on.

**Step 4.** When the message in the figure below appears on the screen following the Agilent's logo screen, immediately press **[R]** on the keyboard.

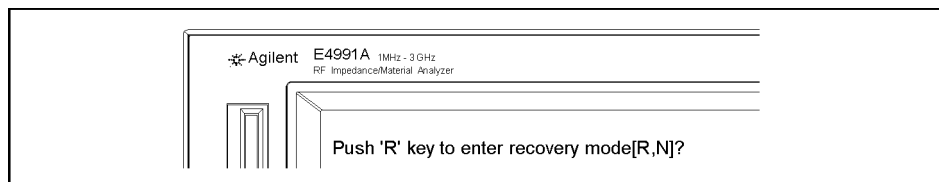

e4991aaj221

---

**NOTE**

Watch the message carefully because after several seconds it will be replaced with the next screen. Note that this is automatically done with no key operations.

---

**Step 5.** When "Recover Hard disk (C drive) [Y, N]?" is displayed, press **[Y]** on the keyboard. If you want to quit the system recovery, press **[N]** to start up the E4991A as usual.

## System Installation for A27 Mass Storage System Recovery (for serial prefix JP1KH, JP2KH, and MY432)

- Step 6.** The following message appears. This is the final confirmation message asking whether you want to start the system recover. Press  Y on the keyboard to start the system recovery. If you want to quit the system recovery, press  N to start up the E4991A as usual.

```
=====
SYSTEM RECOVERY
=====
```

This process will recover the system drive (C:) of this instrument to the factory-shipment state. It takes about 10 minutes. Please refer to the Operation Manual for more information.

This is the last chance to quit the recovery process

Continue [Y,N]?

- Step 7.** The system recovery will be completed in about 10 minutes. The following message is displayed during the system recovery.

```
=====
SYSTEM RECOVERY IN PROGRESS...
=====
```

System recovery in progress. It takes about 10 minutes.  
Please DO NOT TURN THE POWER OFF DURING THIS TIME.

---

### CAUTION

---

**Never turn off the power during the system recovery because doing so may cause serious damage to the E4991A.**

- Step 8.** When the system recovery is completed, the following message appears below the above message indicating that the system recovery is in progress.

```
"Recovery Completed !"
"Please any key and then restart system."
```

Now the system recovery of the E4991A is complete.

## System Recovery (for serial prefix MY433 and later)

By executing system recovery, you can return the system of the E4991A (the Windows operating system and the firmware) to the factory state (at the time of purchase<sup>\*1</sup>).

### Types of system recoveries

The following two types of system recoveries are available.

- o Factory recovery  
Returns the contents of the C drive to the factory state.
- o User recovery<sup>\*2</sup>  
Returns the contents of the C drive to a user-specified state. To use this function, you must prepare for recovery in advance. For information on preparation, see “Procedure to create the user backup image” on page 323 for information on the execution. Also, see “Procedure to execute the user recovery function” on page 326.

### Notes on executing system recovery

Executing system recovery causes the following:

- o In addition to the Windows operating system and the firmware, the following settings of the E4991A are returned to the factory state.
  - Network setting
  - GPIB setting
  - Printer setting
- o The driver for the supported printer installed after purchase is deleted.
- o You need to execute initial registration again.

Files you created using the save function (files in the D drive) are not affected, but we recommend backing them up before executing system recovery for precautionary purposes. For more information on backup, refer to “Making Backup Files” as described in E4991A User’s Guide.

---

\*1.If the hard disk failed and has been replaced after purchase, the state when the replacement was performed is recovered.

\*2.This function is available when the volume label on the hard disk is IG201 or higher.


System Installation for A27 Mass Storage  
System Recovery (for serial prefix MY433 and later)


**Procedure to execute system recovery**

---

**NOTE** You need the keyboard for this operation.

---

- Step 1.** Shut down the E4991A.
- Step 2.** Connect the keyboard to the E4991A.
- Step 3.** Insert the disk for the system recovery which is furnished with the E4991A into the floppy disk drive of the E4991A.
- Step 4.** Press the standby switch of the E4991A to turn it on.
- Step 5.** When the screen as shown in the figure below appears, press and hold  of the keyboard until this screen disappears.

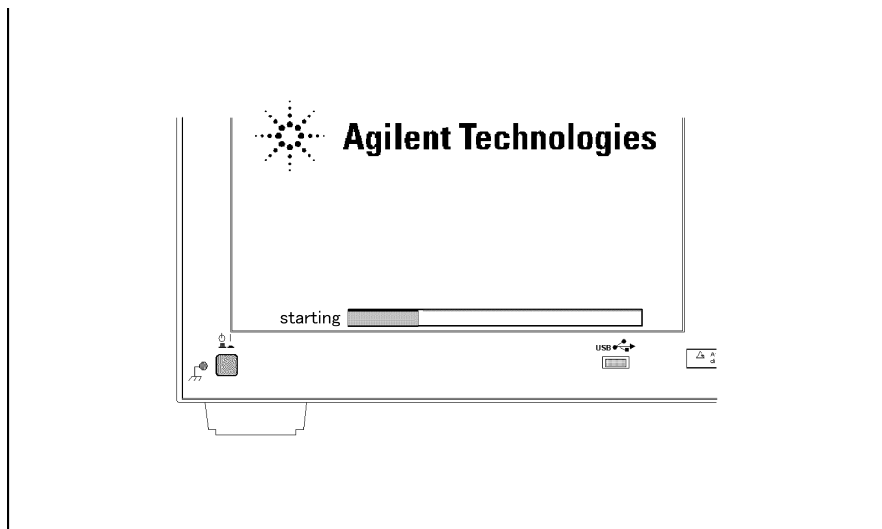

e5061buj034




---


**NOTE** After several seconds, the next screen appears automatically even if you do not press any key, so do not miss it.



If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

---

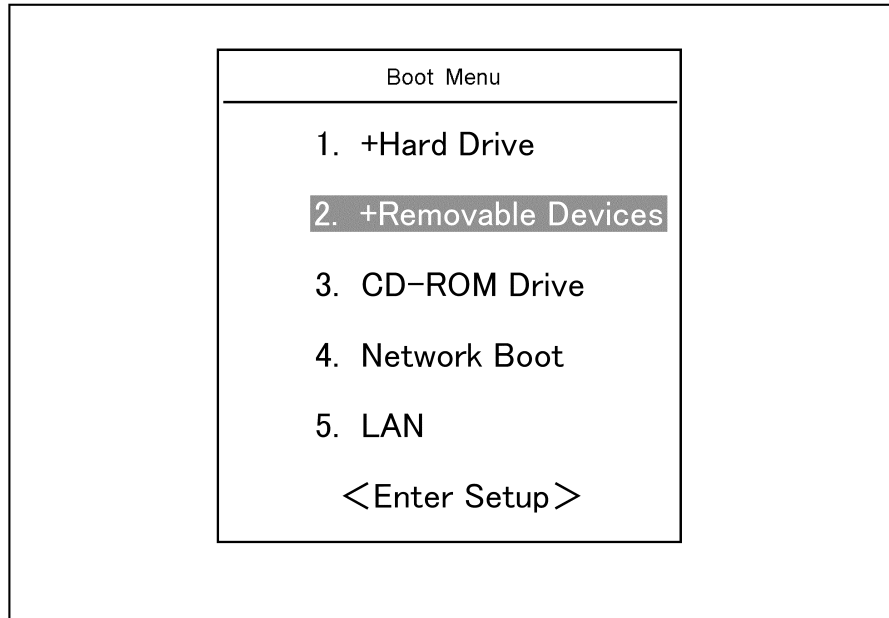

**Step 6.** The following screen appears. Select “+Removable Devices” with   of the keyboard, and press  of the keyboard.



**Step 7.** The message as shown below appears. Press  of the keyboard. If you want to cancel the factory recovery, press  here.

```

Agilent Technologies System Utilities
Recovery & Backup Options

```

Choose One of the following:

- 
1. Recover Factory Backup Image
  2. Create User Backup Image
  3. Recover User Backup Image
  4. Exit
- 

Enter a Choice: \_

**NOTE**

If the above message does not appear, the instrument or the disk for the system recovery is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

## System Installation for A27 Mass Storage System Recovery (for serial prefix MY433 and later)

- Step 8.** The message as shown below appears. Press **C** of the keyboard. If you want to cancel the system recovery, press **E** here.

You chose to Restore your system by installing the original factory installed OS and system software.

WARNING: Press C to Continue only if you are sure that you want to proceed. The C: Drive will be completely overwritten with no chance of recovering any data. Use Option 1 to recover the system from a serious malfunction caused by corrupted or inadvertently deleted files on the system's primary C: partition.

Press C to Continue or E to Exit: \_

- Step 9.** The message as shown below appears. Press **C** of the keyboard to start the factory recovery. If you want to cancel the factory recovery, press **E** here.

CAUTION! Interrupting this process may leave the system in an unstable state. Allow the software to complete the backup and recovery process. This may take up to 20 minutes depending on the system configuration.

Press C to Continue or E to Exit: \_

---

### CAUTION

**Never turn off the power during the factory recovery because doing so may cause serious damage to the E4991A.**

- Step 10.** The factory recovery will be complete in about 5 minutes. When the factory recovery is complete, the message as shown below appears. Press **Ctrl**, **Alt**, and **Delete** of the keyboard at the same time to restart.

Remove the disk and Press **CLT+ALT+DEL** to restart your system.

---

### NOTE

If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

- Step 11.** After restart, the screen for initial registration appears. Execute initial registration. For information on the execution procedure, refer to “Initial Registration of E4991A (for serial prefix MY433 and later)” on page 329.

## Procedure to create the user backup image

This section describes how to create the user backup image. The C drive contents saved in this creation are recalled when the user recovery function is executed.


---


**NOTE** This function is available when the volume label on the hard disk is IG201 or higher.

---

**NOTE** You need the keyboard for this operation.

---

- Step 1.** Shut down the E4991A.
- Step 2.** Connect the keyboard to the E4991A.
- Step 3.** Insert the disk for the system recovery into the floppy disk drive of the E4991A.
- Step 4.** Press the standby switch of the E4991A to turn it on.
- Step 5.** When the screen as shown in the figure below appears, press and hold  of the keyboard until this screen disappears.

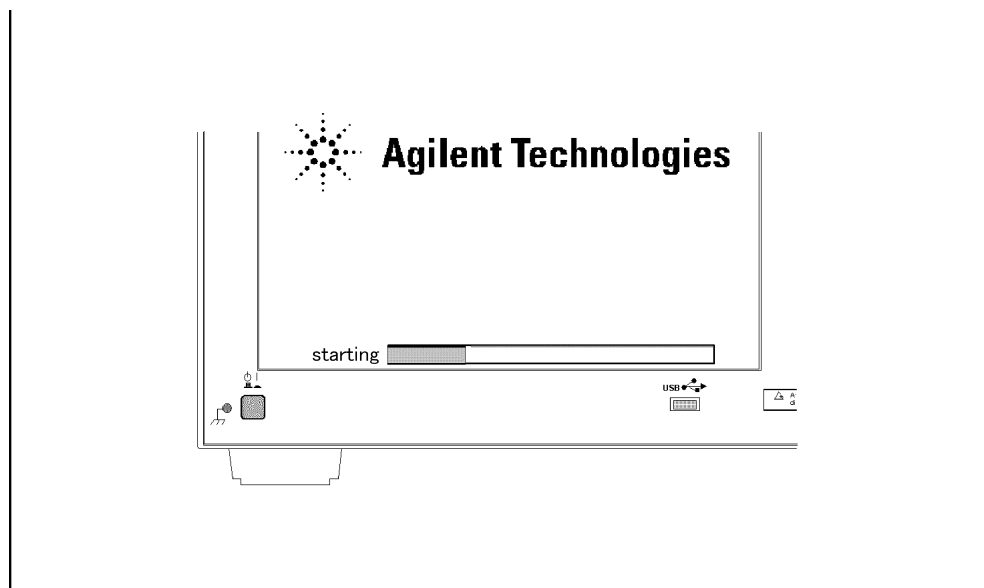

---


**NOTE** After several seconds, the next screen appears automatically even if you do not press any key, so do not miss it.

If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

---

System Installation for A27 Mass Storage  
System Recovery (for serial prefix MY433 and later)

**Step 6.** The following screen appears. Select “+Removable Devices” with   of the keyboard, and press  of the keyboard.

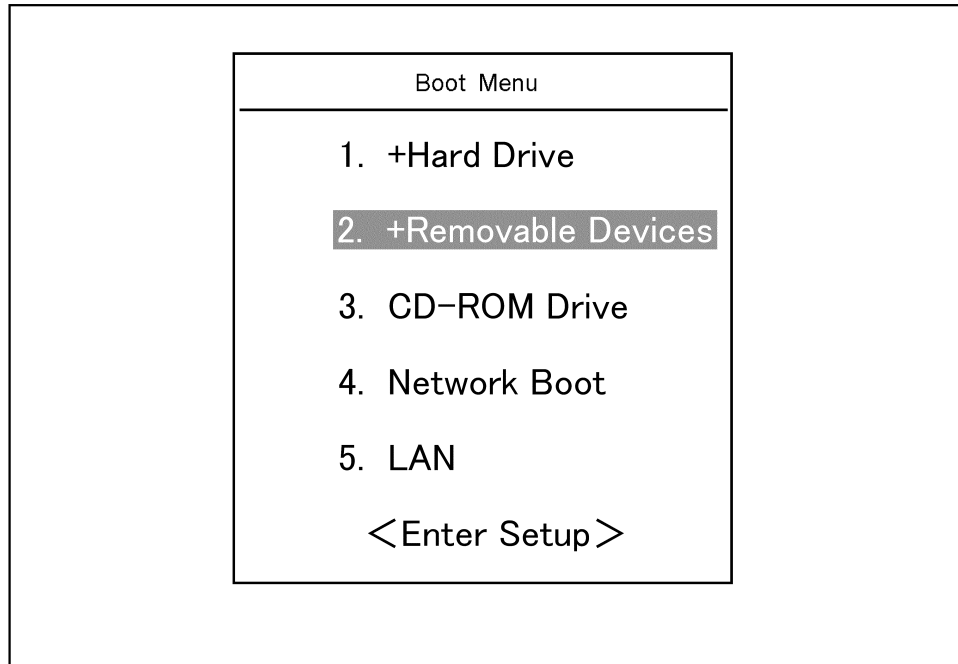

**Step 7.** The message as shown below appears. Press  of the keyboard. If you want to cancel the create user backup image, press  here.

```

Agilent Technologies System Utilities
Recovery & Backup Options

```

Choose One of the following:

- 
1. Recover Factory Backup Image
  2. Create User Backup Image
  3. Recover User Backup Image
  4. Exit
- 

Enter a Choice: \_

---

**NOTE**

If the above message does not appear, the instrument or the disk for the system recovery is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

---

- Step 8.** The message as shown below appears. Press **C** of the keyboard. If you want to cancel the create user backup image, press **E** here.

You chose to create a backup image file of your system.

The system will perform a quick integrity check of the file structure on the C: Drive. It will then copy the C: partition to an image file and store it on the System Recovery partition.

Press C to Continue or E to Exit: \_

- Step 9.** The message as shown below appears. Press **C** of the keyboard to start the create user backup image. If you want to cancel the create user backup image, press **E** here.

CAUTION! Interrupting this process may leave the system in an unstable state. Allow the software to complete the backup and recovery process. This may take up to 20 minutes depending on the system configuration.

Press C to Continue or E to Exit: \_

---

**CAUTION**

**Never turn off the power during the create user backup image because doing so may cause serious damage to the E4991A.**

- Step 10.** The create user backup image will be complete in about 5 minutes. When the create user backup image is complete, the message as shown below appears. Press **Ctrl**, **Alt**, and **Delete** of the keyboard at the same time to restart.

Remove the disk and Press CLT+ALT+DEL to restart your system.

---

**NOTE**

If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

System Installation for A27 Mass Storage  
System Recovery (for serial prefix MY433 and later)

**Procedure to execute the user recovery function**

Returns the contents of the C drive to a user-specified state. To use this function, you must create the user backup image in advance. For more information, see the description “Procedure to create the user backup image” on page 323.


---


**NOTE** This function is available when the volume label on the hard disk is IG201 or higher.

---

**NOTE** You need the keyboard for this operation.

---

- Step 1.** Shut down the E4991A.
- Step 2.** Connect the keyboard to the E4991A.
- Step 3.** Insert the disk for the system recovery into the floppy disk drive of the E4991A.
- Step 4.** Press the standby switch of the E4991A to turn it on.
- Step 5.** When the screen as shown in the figure below appears, press and hold  of the keyboard until this screen disappears.

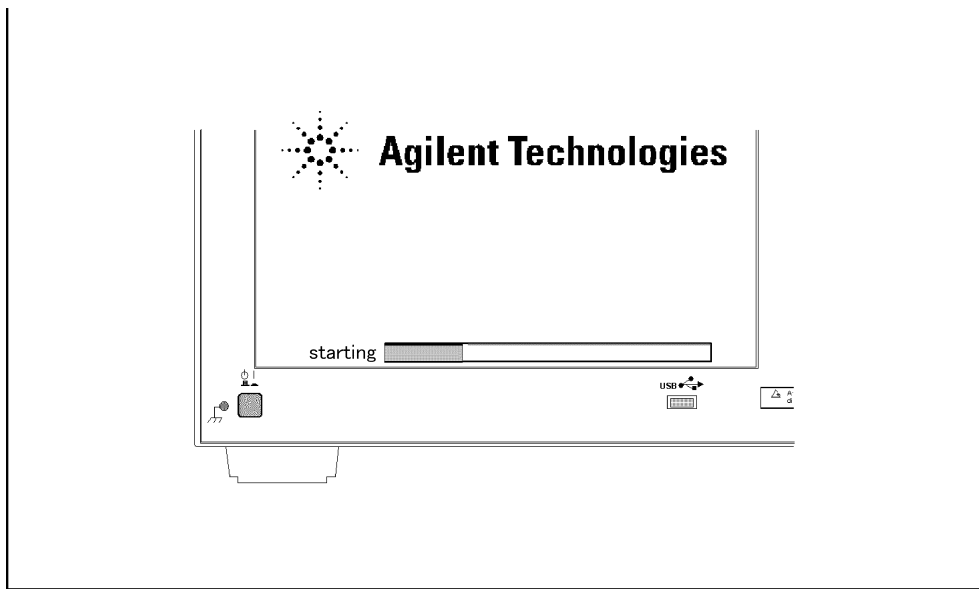




e5061buj034


---



**NOTE** After several seconds, the next screen appears automatically even if you do not press any key, so do not miss it.

If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

---

**Step 6.** The following screen appears. Select “+Removable Devices” with   of the keyboard, and press  of the keyboard.

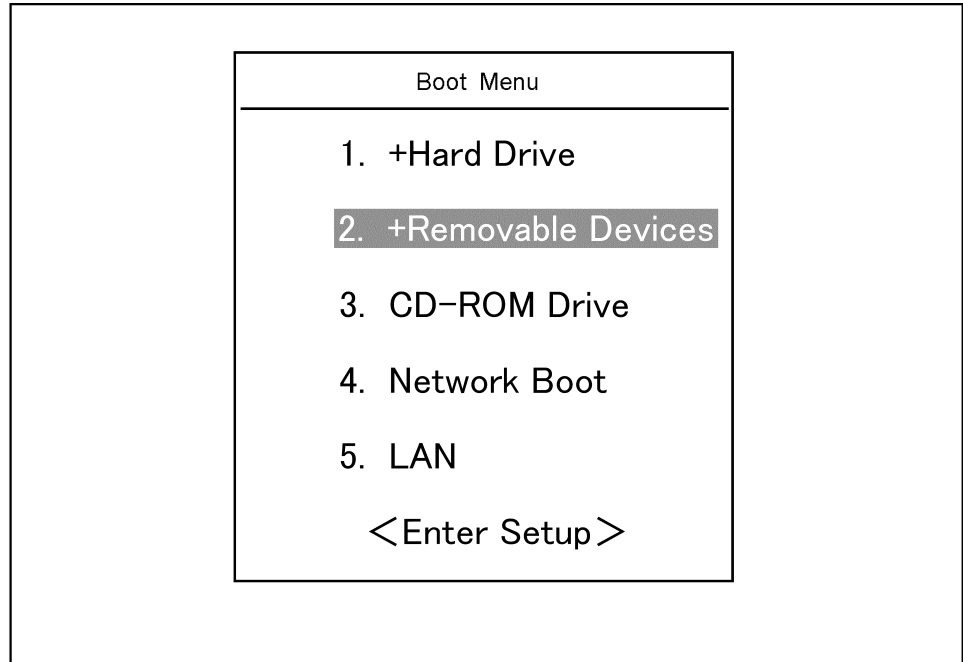

**Step 7.** The message as shown below appears. Press  of the keyboard. If you want to cancel the user recovery, press  here.

```
Agilent Technologies System Utilities
Recovery & Backup Options
```

```
Choose One of the following:
```

- 
1. Recover Factory Backup Image
  2. Create User Backup Image
  3. Recover User Backup Image
  4. Exit
- 

```
Enter a Choice: _
```

**NOTE**

If the above message does not appear, the instrument or the disk for the system recovery is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

## System Installation for A27 Mass Storage System Recovery (for serial prefix MY433 and later)

**Step 8.** The message as shown below appears. Press **C** of the keyboard. If you want to cancel the user recovery, press **E** here.

You chose to recover your own system backup image file.

WARNING: Press C to Continue only if you are sure that you want to proceed. The C: partition will be completely overwritten with no chance of recovering any data. Use Option 3 to recover the system from a serious malfunction caused by corrupted or inadvertently deleted files on the system's primary C: partition.

Press C to Continue or E to Exit: \_

**Step 9.** The message as shown below appears. Press **C** of the keyboard to start the user recovery. If you want to cancel the user recovery, press **E** here.

CAUTION! Interrupting this process may leave the system in an unstable state. Allow the software to complete the backup and recovery process. This may take up to 20 minutes depending on the system configuration.

Press C to Continue or E to Exit: \_

---

### CAUTION

**Never turn off the power during the system recovery because doing so may cause serious damage to the E4991A.**

---

**Step 10.** The user recovery will be complete in about 5 minutes. When the user recovery is complete, the message as shown below appears. Press **Ctrl**, **Alt**, and **Delete** of the keyboard at the same time to restart.

Remove the disk and Press CLT+ALT+DEL to restart your system.

---

### NOTE

If the above message does not appear, the instrument is at fault; contact your local Agilent customer center listed at the end of this manual or distributor.

---



---

## Initial Registration of E4991A (for serial prefix MY433 and later)

When you start up the E4991A for the first time or after executing system recovery, you need to perform the initial registration of the Windows 2000 operating system of the E4991A.

---

**NOTE** You cannot use the front panel keys during the initial registration of the E4991A therefore connect the mouse and the keyboard before turning on the power.

---

---


**NOTE** If you perform the following procedure incorrectly, a message asking you whether to return to the previous registration screen and perform the registration appears. In this case, follow the instruction to return to the previous registration screen.

---

**Step 1.** Turns on the E4991A.

**Step 2.** The Windows 2000 Professional Setup wizard appears. Click the **Next >** button (Figure B-4).


**Figure B-4** Windows 2000 Professional Setup wizard

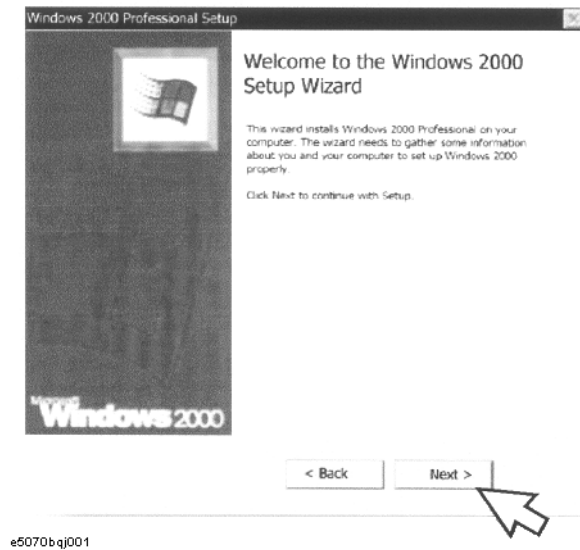

System Installation for A27 Mass Storage  
Initial Registration of E4991A (for serial prefix MY433 and later)


**Step 3.** In the Windows 2000 Professional Setup dialog box, select the **I accept this agreement** box and click the **Next >** button (Figure B-5). Then, the Windows 2000 operating system is restarted automatically.

**Figure B-5** Windows 2000 Professional Setup dialog box

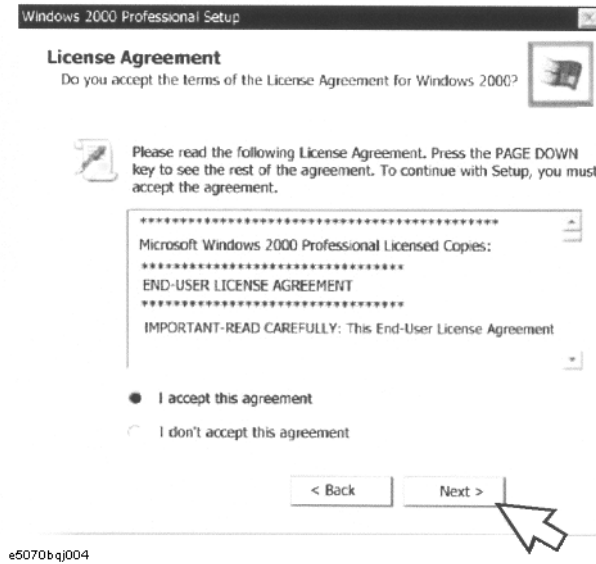


**Step 4.** The Network Identification wizard appears. Click the **Next >** button (Figure B-6).

**Figure B-6** Network Identification wizard

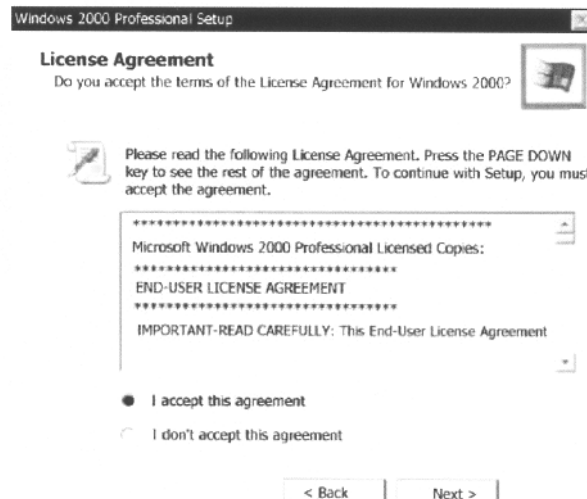


- Step 5.** In the Network Identification Wizard dialog box (1/2), select the **Windows always assumes the following user has logged on to this computer** box and check that **agt\_instr** is in the **User Name** box. If not, type in **agt\_instr**. Finally, click the **Next>** button (Figure B-7).

**Figure B-7** Network Identification Wizard dialog box (1/2)

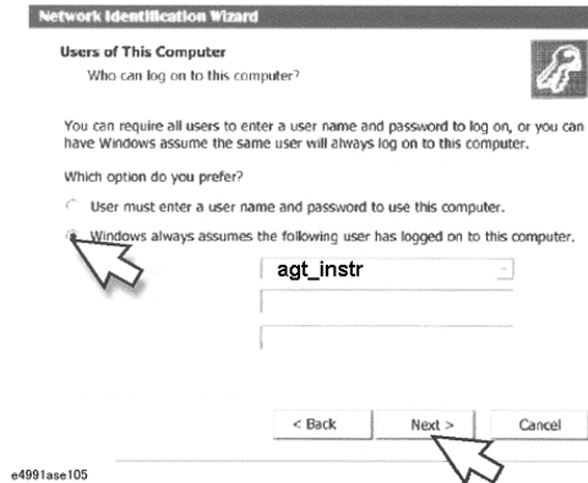

- Step 6.** In the Network Identification Wizard dialog box (2/2), click the **Finish** button to finish the initial registration of the E4991A (Figure B-8). Then, the measurement display of the E4991A appears.

**Figure B-8** Network Identification Wizard dialog box (2/2)

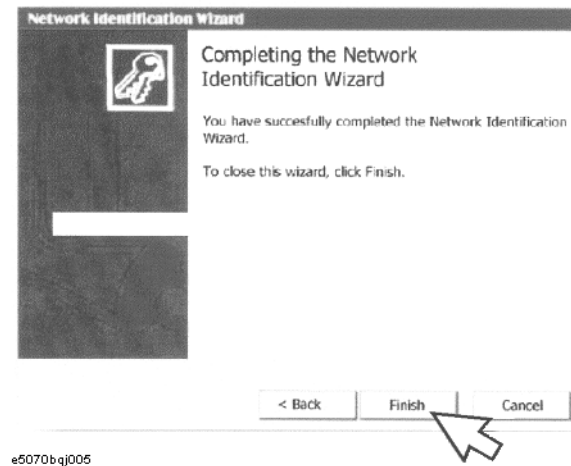

System Installation for A27 Mass Storage  
**Initial Registration of E4991A (for serial prefix MY433 and later)**

---

## **C** **Firmware Update**

This appendix describes how to update the E4991A firmware. When you want to update the E4991A firmware, refer to this appendix.

---

## Firmware Update

### Required Equipment

- E4991A (with keyboard and mouse)
- Three blank floppy disks (DOS format)

### How to make the E4991A Firmware Installation Disk

The following is the procedure to make the E4991A Firmware Installation Disk.

**Step 1.** Copy the following files from Agilent Technologies web site to the three floppy disks using your computer's FDD.


- disk1(1 of 3)-- e4991a.msi, e499101.cab
- disk2(2 of 3)-- e499102.cab
- disk3(3 of 3)-- e499103.cab

**Step 2.** Assign the Label name as follows using the properties of your computer's Windows Explorer as shown in Figure C-1.

- DISK\_1 (for disk1)
- DISK\_2 (for disk2)
- DISK\_3 (for disk3)


Figure C-1

### Windows Explorer (example)

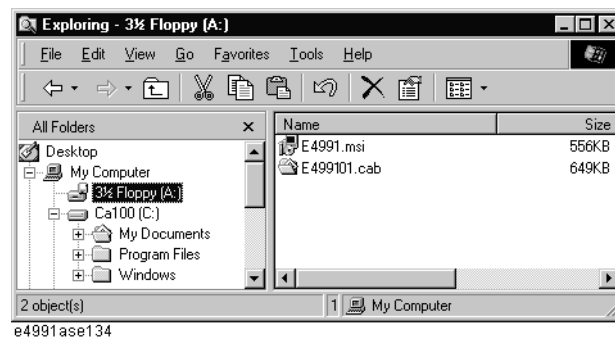

1. Insert the disk1(1 of 3) into the FDD of your computer.
2. On the Windows Explorer, click **3 1/2 Floppy [A:]** and confirm the files.
3. Right click on **3 1/2 Floppy [A:]**, then click **Properties**. The Properties dialog box appears.
4. Enter the Label name in the Label box of properties dialog box (General) for the disk 1 as shown in Figure C-2, and press the **OK** button.

Figure C-2 Properties Dialog Box (example)

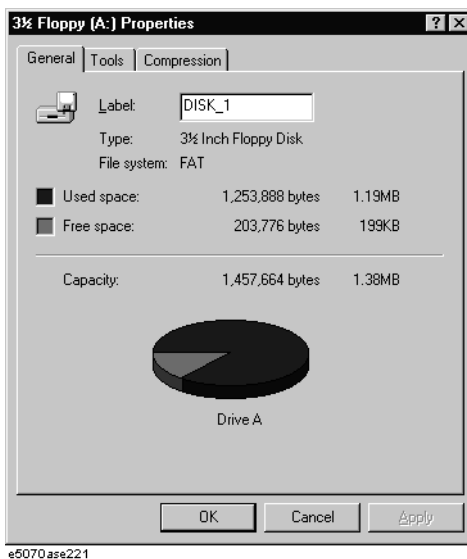

5. Perform 1 through 4 for each disk.

**NOTE**

If the label name is not assigned, the firmware update for the E4991A will not be done correctly.

**How to update the E4991A firmware**

It is possible to update the E4991A firmware, but not the following software by this procedure.

- OS (Operating System)
- VBA (Visual Basic for Application)
- Calibration Constant Data

The following is the procedure to update the E4991A firmware.

- Step 1.** Prepare the E4991A firmware installation disks (three disks).
- Step 2.** Connect the mouse and the keyboard to the E4991A rear panel. Then turn the E4991A on.
- Step 3.** Exit from the E4991A Measurement Display.
  - 1. Click **System - Exit** on the menu bar, and the Enter Password to exit dialog box will appear.
  - 2. Enter the password **e4991a** into the Password box.
  - 3. Click the **OK** button. Then windows desktop screen is displayed.
- Step 4.** Double-click the “**My Computer**” icon on the Windows desktop.
- Step 5.** Insert the E4991A firmware installation disk1 (1 of 3) into the FDD of the E4991A.
- Step 6.** Double-Click the “**3 1/2 Floppy [A:]**” icon.

## Firmware Update


### Firmware Update

**Step 7.** Remove the old version of the firmware using the following procedure.

1. Double-Click “**E4991.msi**” icon. The E4991A Setup Wizard(uninstall) will start automatically as shown in Figure C-3.
2. Click on the **Remove E4991A** option button on the E4991A Setup Wizard as shown in Figure C-3, then click on the **Finish** button.
3. Click on the **Close** to exit the “Installation Complete” window.

**Figure C-3**

#### E4991A Setup Wizard (uninstall)

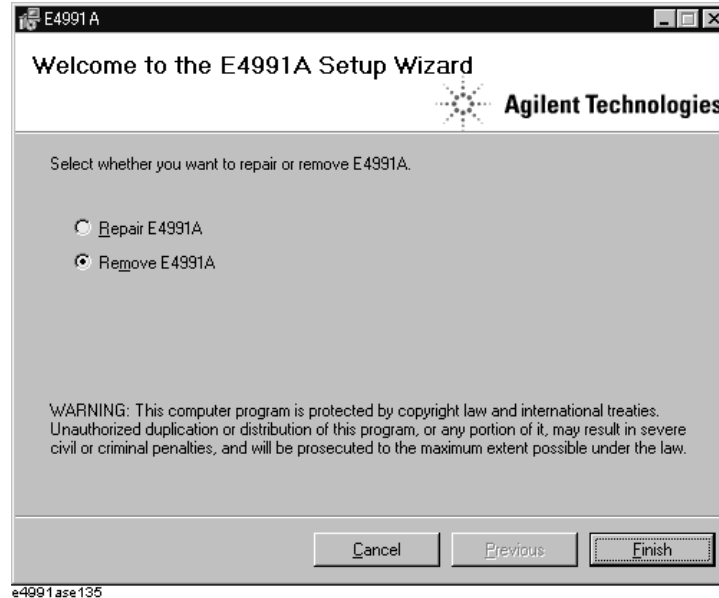


**Step 8.** Install the new version of the firmware using the following procedure.

1. Double-Click “**E4991.msi**” icon. The E4991A Setup Wizard will start automatically as shown in Figure C-4.
2. Click on the **Next** to continue the firmware installation on the E4991A Setup Wizard as shown in Figure C-4.
3. Click on the **Next** to start the firmware installation on “Confirm Installation” window.
4. After the disk1 installation is finished, insert the firmware installation disk2 (2 of 3) into the FDD of the E4991A, then click **OK**.
5. After the disk2 installation is finished, insert the firmware installation disk3 (3 of 3) into the FDD of the E4991A, then click **OK**
6. Click on the **Close** to exit on the “Installation Complete” window.



Figure C-4

## E4991A Setup Wizard

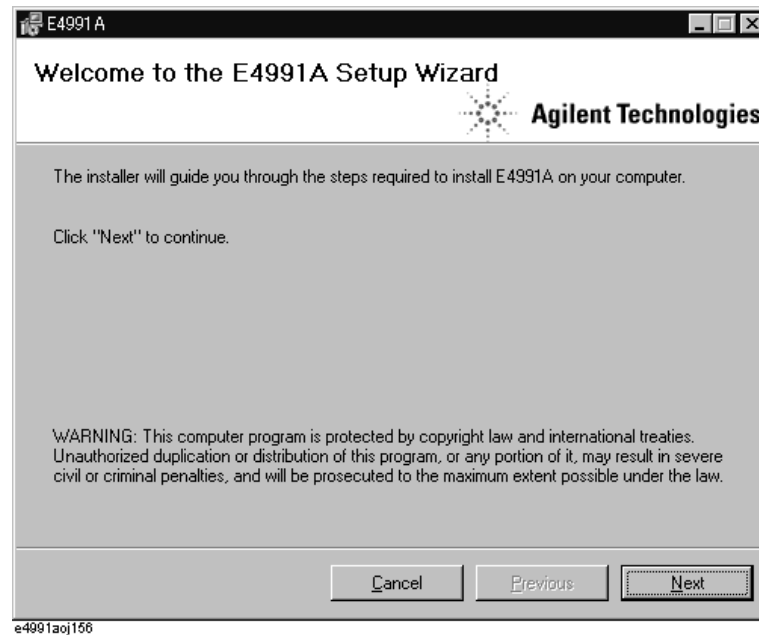

**Step 9.** Shutdown the E4991A by the following procedure.

1. Click **Start - Shut Down...**
2. Click the **Shut down** button in the **Shut Down Windows** dialog box to select it.
3. Click the **OK** button.

**Step 10.** Turn on the E4991A, and then click **System - About E4991A....** Confirm the firmware revision you have just installed.

Firmware Update  
**Firmware Update**

---

**D**      **Power Requirement**

## Preparation for Power Supply

Before turning on power to the equipment, be sure to verify the following:

### Power Requirements

The E4991A requires the following power source:

	Requirements
Voltage	90 to 132 VAC or 198 to 264 VAC *1
Frequency	47 to 63 Hz
Maximum power consumption	350 VA

\*1. Switched automatically by the E4991A in conformity to the voltage.

### Power Cable

In accordance with international safety standards, this instrument is equipped with a three-wire power cable. When connected to an appropriate ac power outlet, this cable grounds the instrument frame. The type of power cable shipped with each instrument depends on country of destination. Refer to Figure D-1 for the part numbers of the power cables available.

---






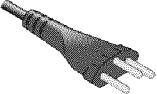
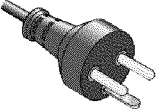
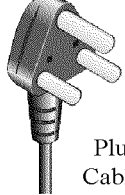
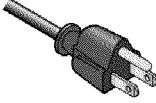
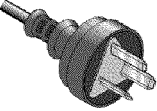
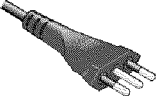
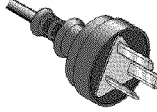
#### WARNING

**For protection from electrical shock, the power cable ground must not be defeated.**

**The power plug must be plugged into an outlet that provides a protective earth ground connection.**

---

Figure D-1 Power cable options
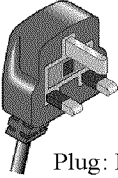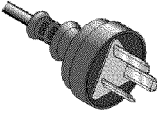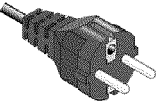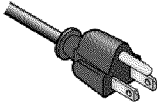
<p>OPTION 900</p>  <p>United Kingdom</p> <p>Plug: BS 1363/A, 250V, 10A Cable: 8120-1351, 8120-8705</p>	<p>OPTION 901</p>  <p>Australia/New Zealand</p> <p>Plug: AS 3112, 250V, 10A Cable: 8120-1369</p>
<p>OPTION 902</p>  <p>Continental Europe</p> <p>Plug: CEE 7 Standard Sheet VII, 250V, 10A Cable: 8120-1689</p>	<p>OPTION 903</p>  <p>U.S./Canada</p> <p>Plug: NEMA 5-15P, 125V, 10A Cable: 8120-1378</p>
<p>OPTION 904</p>  <p>U.S./Canada</p> <p>Plug: NEMA 6-15P, 250V, 6A Cable: 8120-0698</p>	<p>OPTION 906</p>  <p>Switzerland</p> <p>Plug: SEV Type 12, 250V, 10A Cable: 8120-2104</p>
<p>OPTION 912</p>  <p>Denmark</p> <p>Plug: SR 107-2-D, 250V, 10A Cable: 8120-2956</p>	<p>OPTION 917</p>  <p>India/Republic of S. Africa</p> <p>Plug: IEC 83-B1, 250V, 10A Cable: 8120-4211</p>
<p>OPTION 918</p>  <p>Japan</p> <p>Plug: JIS C 8303, 125V, 12A Cable: 8120-4753</p>	<p>OPTION 920</p>  <p>Argentina</p> <p>Plug: Argentine Resolution 63, Annex IV, 250V, 10A Cable: 8120-6870</p>
<p>OPTION 921</p>  <p>Chile</p> <p>Plug: CEI 23-16, 250V, 10A Cable: 8120-6978</p>	<p>OPTION 922</p>  <p>China</p> <p>Plug: GB 1002, 250V, 10A Cable: 8120-8376</p>

NOTE: Each option number includes a 'family' of cords and connectors of various materials and plug body configurations (straight, 90° etc.).





power\_e

D. Power Requirement




## Turning the Power ON and OFF

Perform the following steps to turn the power ON or OFF.

### Turning the power ON

- Step 1.** If the standby switch (  ) in the lower-left part of the front panel is in the pressed down (  ) position, press the switch to the popped up position (  ).
- Step 2.** Press the standby switch to the pressed down position (  ).  
This operation turns ON the power, and the E4991A starts the self-test.
- Step 3.** Confirm that the self-test indicates normal operation.  
Normal operation is confirmed by the self-test if no error message appears.


### Turning the power OFF

- Step 1.** Use either of the following methods to turn OFF the E4991A.
- Press the standby switch (  ) in the lower-left part of the front panel (now in the pressed down (  ) position) to the popped up (  ) position.
  - Send the shutdown command from an external controller.

These operations will start the E4991A shutdown process (required software and hardware processes for turning the power off), and the power will turn OFF after a few seconds.

---

#### NOTE

Under normal circumstances, always press the standby switch (  ), or send the shutdown command from the external controller, to actuate the E4991A shutdown process. **Never cut off the power supply directly by disconnecting the power cable plug from the rear panel of the unit.**

If the power supply is cut off directly by disconnecting the power cable plug or by disconnecting the power supply to the AC outlet, the shutdown process will not be carried out, and there is a risk of damage to the software or hardware of the E4991A.

---

---

## **E** Messages

The E4991A can display error messages as well as messages that indicate the internal operating status of the equipment. This appendix explains what these messages mean by listing them in alphabetical order.

Messages showing the status of the E4991A are displayed in the lower-left area of the E4991A LCD screen. These messages include error messages that occur during the execution of GPIB commands and others that indicate the internal status of the equipment.

Error messages are indicated following the character string “[Err]” and can be read out by a GPIB command. Other kinds of messages are indicated without the “[Err]” character string and cannot be read out by a GPIB command. This section explains the meaning of each message and how to resolve the problem it indicates.

---

## Alphabetical Order

Errors with negative error numbers are basically general errors for GPIB instruments defined by IEEE488.2. On the other hand, errors with positive error numbers have been defined specifically for the E4991A.

### A

6

#### **Additional standards needed**

Before completing data measurement that requires calculation of the calibration coefficient, a GPIB command is sent to turn the calibration function On. For example, when only measurement of the Open Standard and Short Standard, but not the Load Standard, of the calibration kit has been completed, the SENS:CORR1:COLL:SAVE command is attempted in order to set the calibration function On.

Measure all of the necessary calibration data.

### B

-168

#### **Block data not allowed**

Block data is received at a position where the E4991A cannot allow a block data element.

### C

10

#### **Cal measure aborted**

One of the following problems has occurred.

- During measurement of the necessary calibration/fixture compensation data, or during and after the calculation of calibration/fixture compensation coefficients (with calibration function turned On), the settings of calibration/fixture compensation acquired data points (**Fixed, Full Range, Fixed, User Pwr** or **User Freq & Pwr**) have been altered. All measured calibration/fixture compensation data acquired thus far and/or the calibration/fixture compensation function have been invalidated.
- While the calibration/fixture compensation acquired data point setting is in the user-defined point condition (**User Freq & Pwr**), the sweep condition (Sweep Range, Sweep Parameter, Measurement Points, and Sweep Type) has been altered during measurement of the necessary calibration/fixture compensation data, or during and after the calculation of calibration/fixture compensation coefficients (with the



calibration function turned On). All measured calibration/fixture compensation data acquired thus far and/or the calibration/fixture compensation function have been invalidated.

- During measurement of the necessary calibration data, the measurement has been interrupted by the **Abort Cal Meas** button. The calibration data have been invalidated.

In order to recover the calibration/fixture compensation function or the equipment setting valid just prior to the event, click the **Recover Cal/Compen** state button. Also, if necessary, retry measurement of the calibration/fixture compensation data.

7 **Calibration required**

While the calibration function is not set to On, a GPIB command has been sent even though that command can only be executed while the calibration function is On. For example, when the calibration function is Off, the **SENS:CORR2:COLL** command has been attempted in order to measure fixture compensation data.

After measuring all necessary data, turn the calibration function On.

31 **Can't calculate equivalent parameters**

The measured data are not suitable for approximate calculation into the equivalent circuit parameters selected in the equivalent circuit model.

Retry measurement or select an appropriate equivalent circuit model.

62 **Can't execute data examination**

Even though the data for statistic analysis has been acquired, an attempt has been made to read out the statistic analysis results by changing the setting conditions (such as sweep start rate) and using the **CALC{1-5}:MST:DATA?** command before the measurement has been updated.

After changing the setting conditions, wait for the measurement to be updated and then read out the statistic analysis results.

-148 **Character data not allowed**

Character data has been received at a position where the E4991A cannot allow a character data element. For example, when the program message "**CALC1:MARK:FUNC:TARG MAX**" is sent instead of the correct program message "**CALC1:MARK:FUNC:TARG le-12**", the character data element is regarded by the E4991A as invalid.

Refer to the command reference and check the parameter to be used for that command.

-100 **Command error**

An error has occurred for which the E4991A could not grammatically specify the error message. This shows that a command error defined by IEEE488.2,5.1.1.4 has occurred.

13 **Comp measure aborted**

During measurement of the necessary fixture compensation data, the measurement has been interrupted by the **Abort Compen Meas** button. The fixture compensation data has been invalidated.

Retry measuring the fixture compensation data if necessary.

- 11                   **Compensation Required**
- Before finishing the measurement of fixture compensation data, a command has been sent to turn the fixture compensation function On. For example, before measurement of Open Compensation Data has been finished, the SENS:CORR2:COLL:OPEN command has been attempted in order to set the Open Compensation Function in the fixture compensation functions to On.
- Measure the necessary fixture compensation data.
- D**
- 230               **Data corrupt or stale**
- Data may be invalid. Also, a newly reading procedure may have been started but not completed since the most recent access.
- 222               **Data out of range**
- A data element well out of the E4991A's defined range (but not violating the standard) has been received.
- 104               **Data type error**
- The parser has recognized a data element that is not supposed to exist. For example, even though numerical figure or character string data are expected, block data have been sent.
- Define the type of recognized data.
- E**
- 200               **Execution error**
- An execution error has occurred for which the E4991A could not specify the error message. This code shows that an execution error defined in IEEE488.2, 11.5.1.1.5 has occurred.
- 123               **Exponent too large**
- The absolute figure of the exponent has exceeded 32,000. (refer to IEEE488.2, 7.2.4.1).
- 178               **Expression data not allowed**
- An expression data element has been received at a position where the E4991A does not allow expression data elements.
- 170               **Expression error**
- During structure analysis of the expression data, there has been an error that does not apply to a situation between errors -171 and - 179.

## F

-256

### File name not found

A designated file could not be found and the command has not been correctly executed. For example, attempts have been made to read and write on a file that does not exist or a disk has not been properly inserted.

95

### Frequency sweep only

A command that is only valid when the sweep parameter is in frequency has been sent. For example, when a sweep parameter other than frequency is set, the CALC{1-5}:MARK:UNIT command is attempted in order to set the marker X-axis display to relaxation time ( $1/2\pi f$ ).

First, use the SWE:TYPE command to set the sweep parameter to frequency.

## G

-105

### GET not allowed

While receiving a program message, the Group Execution Trigger (GET command in HTBasic) has been inputted (refer to IEEE4888.2,7.7). For example, a wait command such as "\*OPC?", or "\*WAI" has been sent.

## I

-224

### Illegal parameter value

The parameter value is not appropriate. For example, when the program message "DISP:TRAC1:Y:SPAC OBAS" has been sent instead of the correct program message "DISP:TRAC1:Y:SPAC LOG", the parameter rate is regarded by the E4991A as inappropriate.

Refer to the command reference and confirm that the parameter value is correctly inputted.

71

### Impedance measurement mode only

A command has been sent that is only valid for Impedance Measurement Mode. For example, during the Magnetic Material Measurement Mode, the SENS:CORR2:CKIT:STAN1:C command has been attempted in order to define the user defined fixture compensation kit.

Select Impedance Measurement Mode.

-213

### Init ignored

Because another measurement is already underway, the Measurement Initialize Request ("INIT" command) has been ignored. For example, this happens when changing the setting of "INIT:CONT" to "OFF" and the "TRIG:SOUR" command to "BUS" or when attempting a trigger with the "\*TRG" command. If the "INIT" command is sent to the E4991A before the sweep is completed (without a wait time), it is regarded as an invalid command.

-161

### Invalid block data

Even though the block data is expected, the received block data is invalid for some reason (refer to IEEE488.2, 7.7.6.2). For example, before the length of block data has been filled, an END message is received.

-101 **Invalid character**

In the error message character string, an invalid character has been found. For example, when a message "**SENS:CORR1:COLL:FPO USER**" is sent toward the proper program message; "**SENS:CORR1:COLL:FPO&USER**", the ampersand symbol (&) will be perceived by E4991A as an invalid character. In case the parameter is inputted at the end, provide space between the command and the parameter.

-121 **Invalid character in number**

There are invalid characters in the received data and type. For example, an alphabetic character has been found in a decimal numeric or a "9" has been found in octal data.

-171 **Invalid expression**

An expression data element is invalid (refer to IEEE488.2, 7.7.7.2). For example, the brackets are not paired or the character violates the standard.

106 **Invalid file name**

During the execution of file save/recall command, the character string contained an inappropriate file name. For example, when executing a recall command, the file name extension was incorrect.

Specify an appropriate file name.

Also, when saving data on a floppy disk, this error message will be shown if the disk is not properly inserted or the disk is write-protected.

77 **Invalid material size**

The definition of the size of the test material in a Magnetic Material Measurement is invalid. For example, an attempt has been made to set the outer diameter of the test material to a smaller figure than the inner diameter.

Set the outer diameter of the magnetic material to a larger size than that of the inner diameter.

-103 **Invalid separator**

When the parser (compiler) is expecting a separating symbol, a character that is not a separating symbol has been sent. For example, when the program message "**SENS:CORR1:COLL:FPO USER \*OPC?**" is sent instead of two program messages correctly separated by a semi-colon as "**SENS:CORR1:COLL:FPO USER;\*OPC?**" the instrument cannot perceive the separation. When sending two program messages simultaneously, be sure to insert a separating symbol such as a semi-column (;) between the two messages.

-151 **Invalid string data**

Even though character string data are expected, the received character string is invalid for some reason (refer to IEEE488.2, 7.7.2.4). For example, the END message has been received before the closing quotation mark character appeared.

-131 **Invalid suffix**

The suffix (here meaning Unit) does not following the sentence structure defined by IEEE488.2, 7.7.3.2, or the suffix is not appropriate for the E4991A. For example, when the program message "**SOUR:VOLT:STAR 10dbm**" has been sent instead of the correct program message "**SOUR:VOLT:STAR 10mV**", the suffix is regarded by the E4991A as invalid. Refer to the command reference to confirm the unit that should be used for this

command.

## M

-272

### Macro execution error

An execution error related to the E4991A's macro functions has occurred.

-261

### Math error in expression

A program data element that is a syntactically legal expression could not be executed due to a math error such as an attempted divide-by-zero.

-109

### Missing parameter

A parameter is insufficient for a command, or the parameter has not been inputted. For example, the **SWE:POIN** command requires 1 parameter, so when the program message "**SWE:POIN**" has been sent instead of the correct program message "**SWE:POIN 201**", it is regarded as invalid by the E4991A because no parameter has been inputted.

Make sure to input a parameter for any command that requires one.

32

### Must be more than 2 points for analysis

Measurement points within the sweep range are set to 2 (if the partial search function is On within the designated Searching range), so calculation of the equivalent circuit parameter (**Calculate Parameter** button or **CALC{1-5}:EPAR** command) could not be executed.

Measurement points within the sweep range (if the partial search function is On within the designated Searching range) must be set to 3 or above.

## N

92

### No active marker

Because the marker is not displayed, the sent command has been ignored. For example, when the marker is not displayed, the **CALC{1-5}:MARK:SET** command has been attempted in order to change the instrument setting of the E4991A.

First use the **CALC{1-5}:MARK{1-8}** command to show the marker on the display.

61

### No data available in memory

This occurs when the marker's Statistic Analysis Function (**Statistics** button) is Off and an attempt has been made to read out the statistic analysis result by using the **CALC{1-5}:MST:DATA?** command.

Turn the Marker's Statistic Analysis Function to On and acquire data for statistic analysis.

113

### No data trace displayed

Because the data trace is not displayed, the sent command has been ignored. For example, when the data trace is not displayed, the **CALC{1-5}:MARK:ON** command has been attempted in order to set a trace displaying a marker as the data trace.

First use the **CALC{1-5}:MATH:FUNC** command to display the data trace.

0

### (no error)

No error has occurred.

This message is not normally shown on the LCD display but returned after the

## Messages

### No fixed delta marker

SYST:ERR? command has been sent by GPIB. When the equipment finds no occurrence of an error, a message is returned as error number 0.

#### 94 No fixed delta marker

Because the reference marker is not set to fixed  $\Delta$  mode, the sent command has been ignored. For example, when the fixed  $\Delta$  mode is not set, the CALC{1-5}:MARK:REF:Y command has been attempted in order to set the reference marker to the designated measurement values.

First use the CALC{1-5}:MARK:REF command to display the reference marker. Next, use the CALC{1-5}:MARK:REF:TYPE command to change the setting to fixed  $\Delta$  mode.

#### 90 No marker delta - parameter not set

This occurs when the reference marker's  $\Delta$  mode is Off and the CALC{1-5}:MARK:SET command or CALC{1-5}:MARK:FUNC:DOM:SPAN command has been attempted in order to set the  $\Delta$  value to span value within the sweep range or within the partial search range.

First use the CALC{1-5}:MARK:REF command to display the reference marker. Next, use the CALC{1-5}:MARK:REF:TYPE command to set the  $\Delta$  Mode or Fixed  $\Delta$  Mode to On.

#### 114 No memory trace displayed

Due to the fact that memory trace is not displayed, a command that has been sent was ignored. For example, when the memory trace is not displayed, the DISP:TRAC{1-5}:Y:FOR command is attempted in order to set the scale setting subject as the data trace.

First use the CALC{1-5}:MATH:FUNC command to display the memory trace.

#### 30 No Valid Memory Trace

This occurs when there are no data stored in the Memory Trace and the CALC{1-5}:MATH:FUNC command has been attempted in order to display the Memory Trace.

Before displaying the Memory Trace, use the CALC{1-5}:MATH:MEM command to store the data into the Memory Trace.

#### 140 Not allowed for the current trigger source

An invalid command for the presently selected trigger source has been sent. For example, when the trigger source is set to internal trigger (**Internal**), the TRIG:EVENT command has been attempted in order to set the trigger event mode (detecting point for triggering) at each measurement point (**On Point**) or at each (**On Segment**). This operation is valid only when internal trigger is not set as the trigger source.

After setting the trigger source to **Manual**, **External** or **GPIB Bus**, change the Trigger Event Mode.

#### 14 Not allowed in power sweep

An invalid command has been sent to the oscillator level sweep while it is in progress. For example, during the oscillator level sweep, the SWE:TYPE command has been attempted in order to set the sweep type to log sweep. This operation is invalid during the oscillator level sweep.

Confirm that the command is valid for the oscillator level sweep.

#### 70 Not allowed in this measurement mode

A command has been sent that cannot be executed in the currently set measurement mode. For example, in the Dielectric Measurement Mode, the SENS:CORR1:CKIT command has been attempted in order to set the calibration kit to the defined calibration kit used.

Select a measurement mode in which the command is valid.

80 **Not available for this fixture**

An invalid command has been sent to the currently selected text fixture. For example, when the 16197A is selected, the CALC{1-5}:FORM command is attempted in order to set a prohibited measurement parameter (e.g. complex dielectric constant).

Select an appropriate measurement parameter or display format.

79 **Not available for this format**

The selected measurement parameter or display format could not be executed. For example, in the Dielectric Measurement Mode or in Magnetic Material Measurement Mode, the DISP:TRAC{1-5}:GRAT:FORM command is attempted in order to set a prohibited display format (Smith Chart or Admittance Chart).

Select an appropriate measurement parameter or display format.

47 **Not enough data**

The amount of data transferred to the E4991A by an external controller was less than the amount expected by the E4991A.

Match the amount of data to be transferred with the E4991A measurement points.

-120 **Numeric data error**

An error has been caused by numeric data (including nondecimal numeric types). In errors - 121 to - 129, an unspecified numeric error has occurred.

-128 **Numeric data not allowed**

A numeric data element has been received at a position where the E4991A does not allow numeric data elements. For example, when the program message "CALC1:FORM 3" has been sent instead of the correct program message "CALC1:FORM RS", the numeric data element is received by E4991A as invalid. Refer to the command reference and confirm which parameter should be used for a particular command.

## O

48 **Option not installed**

Because a particular option has not been installed, the sent command has been ignored. For example, when the option 001 (DC bias function) is not installed, the SOUR:VOLT:OFFS command has been attempted in order to set up the DC bias voltage values.

Please contact your nearest Agilent Technologies branch office or the company where you purchased the instrument install the necessary options.

-321 **Out of memory**

There is a shortage of memory (RAM).

## P

-108 **Parameter not allowed**

## Messages

### Permeability measurement mode only

The parameters have exceeded the number necessary for a command.  
For example, when the program message "SWE:TYPE LIN,SEGM" is sent instead of the proper program message "SWE:TYPE LIN", 2 parameters are sent even though only 1 parameter is required for this command. Therefore, the number of parameters is regarded as invalid by the E4991A.

Refer to the command reference and check the number of parameters required.

#### 73 **Permeability measurement mode only**

A command that is only valid for Magnetic Material Measurement Mode has been sent. For example, in the Dielectric Measurement Mode, the CALC:FORM:PAR:MGA command has been attempted in order to set the size of the magnetic substance.

Select Magnetic Material Measurement Mode.

#### 72 **Permittivity measurement mode only**

A command that is only valid for Dielectric Measurement Mode has been sent. For example, in the Magnetic Material Measurement Mode, the SENS:CORR1:CKIT:STAN7:THIC command has been attempted in order to set the thickness of the load standard for Dielectric Measurement.

Select Dielectric Measurement Mode.

#### 22 **Printer error**

The printer has not responded to the control from the E4991A.

Confirm whether the printer's power is On or Off, the connection status of the cable, and the paper supply.

#### -112 **Program mnemonic too long**

The length of a header has exceeded 12 characters. The length of a header here refers to the length of the series of characters that are separated by colons (:).

Refer to IEEE488.2,7.6.4.1 for further details.

## Q

#### -430 **Query DEADLOCKED**

This indicates a condition that has created a "DEADLOCK" Query error (refer to IEEE488.2, 6.3.1.7). This error occurs, for example, when both input and output buffers become full and when the E4991A is no longer able to carry out a process.

#### -400 **Query error**

The E4991A has found a Query error for which it is not able to specify the error message. This code shows that a Query error defined in IEEE488.2, 11.5.1.1.7 or 6.3 has occurred.

#### -410 **Query INTERRUPTED**

This indicates a condition that has created an "INTERRUPTED" Query error (refer to IEEE488.1, 6.3.2.3). This error is generated when, for example, the data byte "DAB" or Get is received after the Query but before its response is fully sent.

#### -420 **Query UNTERMINATED**

This indicates a condition that has created an "UNTERMINATED" Query error (refer to IEEE488.1, 6.3.3.2). This error occurs when the E4991A is designated as a talker (if designated as a controller, data transmission is possible via the interface) and receives



## Query UNTERMINATED after indefinite response

incomplete program messages. For example, when a command that does not require a Query, such as `*CLS`, has been sent as `*CLS?`, it is regarded as an incomplete message by the E4991A.

Check the command reference.

-440 **Query UNTERMINATED after indefinite response**

This indicates that a query has been received in the same program message after a query requesting an indefinite response has been executed (refer to IEEE488.2, 6.5.7.5.7).

**R**

105 **Recall error**

An error has occurred during reading out (recall) of a file. For example, this occurs when an attempt is made to read out a file containing invalid data (such as the extension (.sta) for instrument state files that were saved with equipment other than the E4991A).

Confirm that there is no problem in the file contents.

**S**

104 **Save error**

While saving a file, an error has been detected on the media in which the data is to be stored. For example, when saving the file to a floppy disk, the space available in the floppy disk is not sufficient.

Check the amount of available space in the media in which the data is to be stored.

118 **Segment table empty or insufficient table**

Because the segment sweep table has not been created, a sent command has been ignored. For example, before the segment sweep table is created, the `SWE:TYPE` command is attempted in order to set a sweep type as the segment sweep.

Before carrying out a segment sweep, create the segment sweep table.

-221 **Settings conflict**

Even though the program data element has been received and it conforms to the standard, execution is not possible with the present condition of the E4991A.

-150 **String data error**

An error caused by a received series of character data elements (quotation mark character) has occurred. In errors - 151 to - 159, an unspecified character string error has occurred.

-158 **String data not allowed**

A string data element has been found at a position where the E4991A does not allow string data elements. For example, when the program message `"TRIG:SOUR "MAN""` has been sent instead of the correct program message `"TRIG:SOUR MAN"`, the double quote (") is regarded by the E4991A as invalid.

Refer to the command reference and confirm whether the double quote (") is required in the parameter of a particular command.

-138 **Suffix not allowed**

A suffix has been added after numeric data where a suffix (here meaning Unit) cannot be

## Messages

### Suffix too long

inputted. For example, when the program message "**DISP:TRAC1:Y:PDIV 0.01rad**" has been sent instead of the correct program message "DISP:TRAC1:Y:PDIV 0.01", the suffix is regarded by E4991A as invalid.

Refer to the command reference and confirm that the suffix can be added to the numeric data element.

#### -134 **Suffix too long**

The suffix (here meaning Unit) display is written with more than 12 characters (refer to IEEE488.2, 7.7.2.4).

#### -102 **Syntax error**

An unrecognized command or data type has occurred. For example, when the program message "**SYST:POFF**" is sent instead of the proper program message "**SYST:POFF**", a colon (:) has been incorrectly inserted, and it will be perceived by the E4991A as an unrecognized command.

Delete one colon (:) in order to send the appropriate command.

#### -310 **System error**

In the E4991A, one of the so called "System Errors" has occurred.

## T

#### -124 **Too many digits**

The mantissa of a decimal numeric data element exceeds 255 excluding leading zeros (refer to IEEE488.27.7.2.4).

#### 69 **Too many segments or points**

While editing the list sweep table, a setting has been attempted that exceeds the maximum number of segments (16), the maximum number of measurement points (201) per segment, or the maximum number of total measurement points (801) in all segments.

During setting, the numbers of segments or measurement points should not exceed the maximum figures.

#### -223 **Too much data**

This occurs when the amount of data exceeds the E4991A's memory capacity, even though the program data received in a block, expression, or character string conforms to the standard. The occurrence of this error indicates that the problem is restricted to the memory or memory related devices.

#### -211 **Trigger ignored**

The trigger command "**\*TRG**" or an external trigger signal has been received and detected by the E4991A but was ignored because of the timing (for example, the E4991A trigger was not in the waiting condition).

Prepare for the trigger command or external trigger signal when the trigger is in the waiting condition.

## U

#### -113 **Undefined header**

A command not defined by the E4991A has been received, although grammatical structure

does not provide any problem. For example, when the program message "**DISP:TRAC1:X:AUTO**" has been sent instead of the correct program message "**DISP:TRAC1:Y:AUTO**", it is received by the E4991A as an undefined command.

Refer to the command reference and check the correct commands.

15

#### **User cal mode only**

Setting has been attempted by using commands to define each standard of the calibration kit before selecting a user defined calibration kit.

First select the calibration kit that will be used as the user defined calibration kit. Then define each standard value for this calibration kit.

## Messages indicating the internal status of the equipment

Messages that indicate the internal status of the equipment include equipment irregularities as well as the results of processing (or current processing status). These messages do not have numbers.

### Messages indicating measurement failure

#### DC bias overload

During application of DC bias voltage, a sudden change in the connection condition of the DUT has lowered the direct-current impedance, resulting in momentary over-current at the DC bias source.

Do not remove the DUT during application of DC bias. If this error occurs frequently during normal measurement, this may be due to instrument failure.

#### PLL Unlock

An error has been detected in the internal PLL (Phase Lock Loop) circuit of the E4991A. The PLL is used to generate a stable frequency source. This can occur due to an error of the external reference signal or when the power is turned ON in a low-temperature environment.

If the external reference signal has not been inputted or shows no error, instrument tuning or repair is necessary. If the message does not disappear in a few minutes after turning the power ON, instrument tuning or repair is necessary.

#### Power on test failed

An error has been detected during the self-test after turning on the power.

#### RF overload

There has been a ranging failure in the internal circuit due to a sudden change in impedance caused by removing the DUT or some other reason during measurement.

Do not remove the DUT during measurement. If this error occurs frequently during normal measurement, there may be instrument failure.

## **Messages indicating the results (or current status) of processing**

### **Cal done**

Calculation and storage of a calibration coefficient completed.

### **Cal measure aborted**

Measurement of calibration data aborted.

### **Comp done**

Calculation and storage of a fixture compensation coefficient completed.

### **Comp measure aborted**

Measurement of a fixture compensation coefficient aborted.

### **Peak not found**

Peak search function executed, but no defined peak was found.

### **Target value not found**

Target search function executed, but no target measurement value was found.

### **Trigger hold**

Measurement is in hold mode, in which a trigger is not accepted.

### **Wait -- measuring cal standard**

Calibration data are now being measured.

### **Wait -- measuring comp standard**

Fixture compensation data are now being measured.

Messages

**Wait -- measuring comp standard**